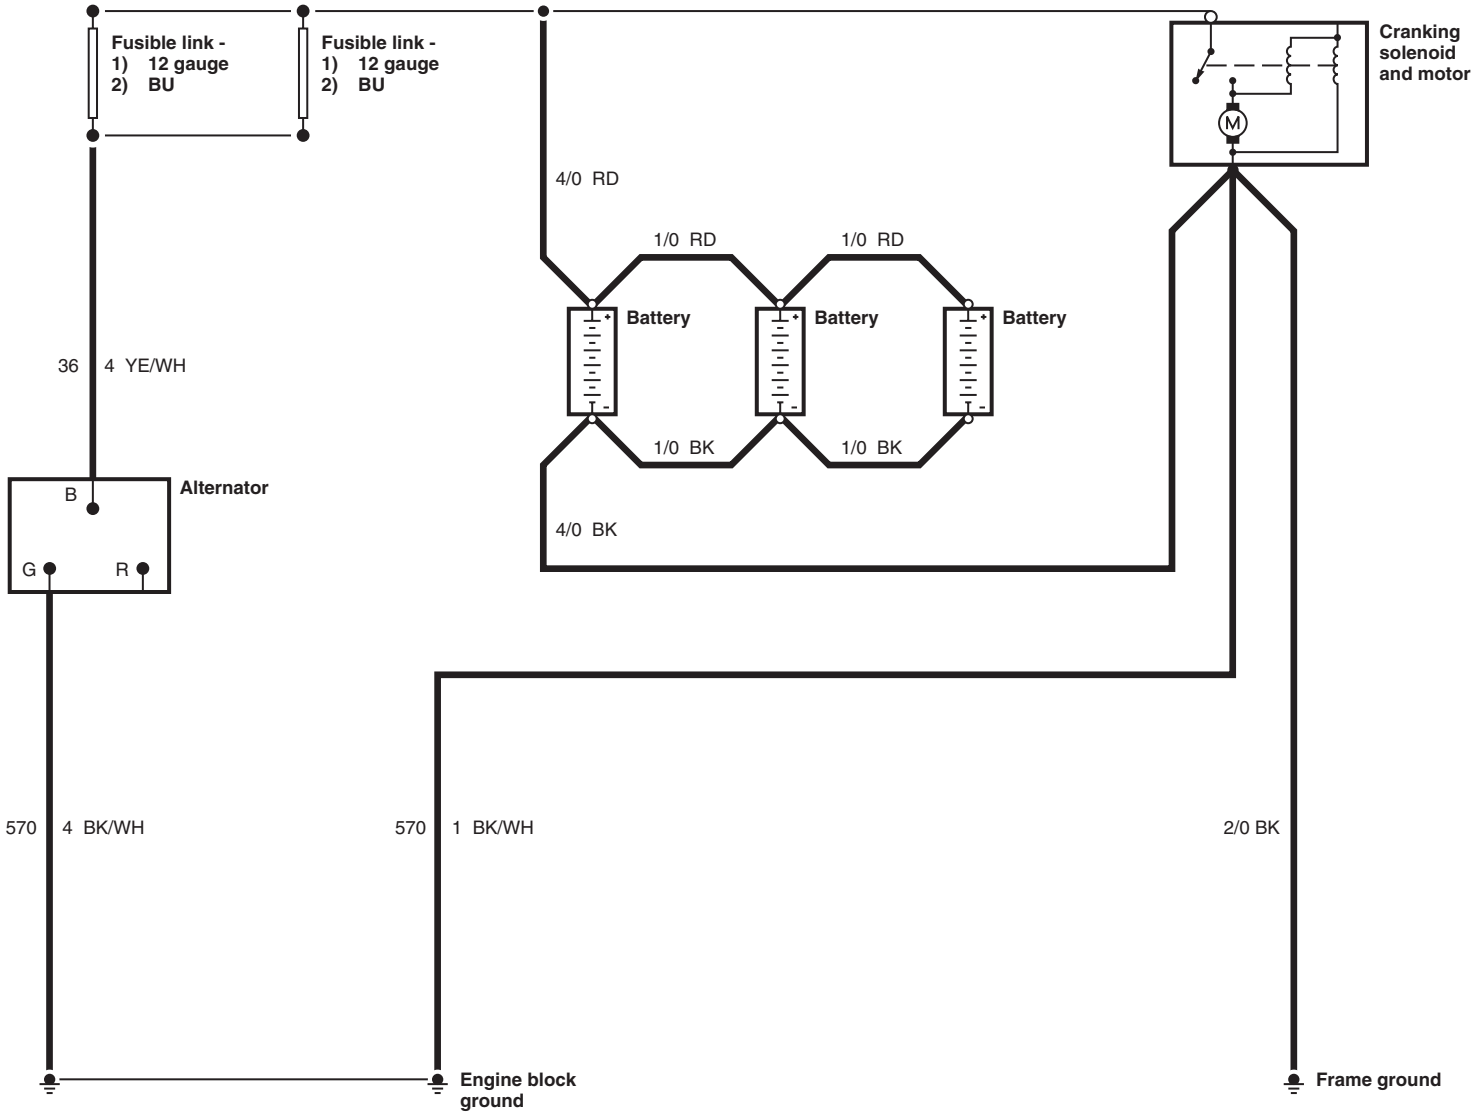
Fusible link -
1) 12 gauge
2) BU
Fusible link -
1) 12 gauge
2) BU
Cranking solenoid and motor
M
4/0 RD
1/0 RD
1/0 RD
Battery
Battery
Battery
36
4 YE/WH
1/0 BK
1/0 BK
4/0 BK
B
Alternator
G
R
570
4 BK/WH
570
1 BK/WH
2/0 BK
Engine block ground
Frame ground