C4162 (GY)

19B113

Subwoofer, luggage compartment right

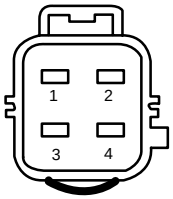

F04345

Pin	Circuit	Circuit function
1	176 (PK/LG)	Subwoofer amplifier, luggage compartment right outboard, to, Subwoofer, luggage compartment right, +
2	189 (TN/LB)	Subwoofer amplifier, luggage compartment right inboard, to, Subwoofer, luggage compartment right, +
3	179 (OG/RD)	Subwoofer amplifier, luggage compartment right outboard, to, Subwoofer, luggage compartment right, –
4	187 (DB/OG)	Subwoofer amplifier, luggage compartment right inboard, to, Subwoofer, luggage compartment right, –

C4198 (GY)

19B516

Luggage compartment lamp (13A756)

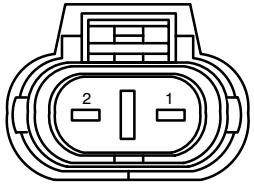

F02443

Pin	Circuit	Circuit function
1	705 (LG/OG)	on demand, Lighting, Power, signal
2	486 (BN/WH)	Luggage compartment lid ajar switch (19A434), signal

C4199 (GY)

19B516

High mounted stoplamp (13A613)



F02073

Pin	Circuit	Circuit function
1	569 (DG)	Brake pedal position switch (13480), output
2	1205 (BK)	Ground

‡ Cobra

C4168 (GY)

14A005

Inertia Fuel Shutoff (IFS) switch (9D362)



F03239

Pin	Circuit	Circuit function
1	–	not used
2	238 (DG/YE)	Fuel pump relay, switched power, output
	‡866 (WH)	Inertia Fuel Shutoff (IFS) switch (9D362), Ground, input
3	787 (PK/BK)	Fuel pump, Power
	‡1205 (BK)	Ground