C604

14630

N105
Window adjust switch, passenger side

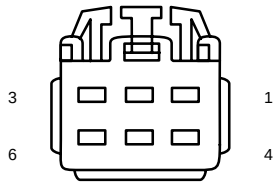

F06237

Pin	Circuit	Circuit Function
1	1505 (YE/RD)	Window switch, feed, right front, Down
2	334 (RD/YE)	Window motor, feed, Down
3	170 (RD/LB)	Window lockout, switched power, output
4	–	not used
5	1159 (WH/LB)	Window motor, feed, Up
6	313 (WH/YE)	Window switch, feed, right front, Up

C605 (GN)

14630

N205
Door lock switch, passenger side

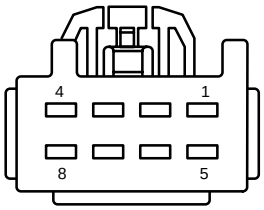

F08193

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	–	not used
3	120 (PK/LG)	Door unlock relay, control
4	57 (BK)	Ground
5	400 (LB/BK)	Accessory relay, switched power, output
6	–	not used
7	119 (PK/YE)	Door lock relay, control
8	–	not used

C607 (GY)

14630

N281
Lock cylinder switch, right

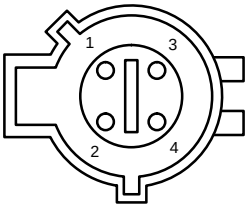

F04075

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	1088 (PK/WH)	Door unlock, input
3	–	not used
4	–	not used

C608

14630

M79
Power window motor, passenger side front

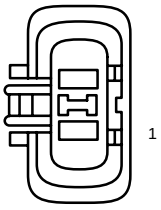

F02225

Pin	Circuit	Circuit Function
1	334 (RD/YE)	Window motor, feed, Down
2	1159 (WH/LB)	Window motor, feed, Up

C612

14630

Y18
Speaker, right front

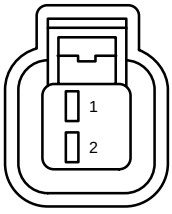

F02069

Pin	Circuit	Circuit Function
1	805 (WH/LG)	Speaker, right front +
2	811 (DG/OG)	Speaker, right front -