30-1 TRANSMISSION CONTROLS (4R100)
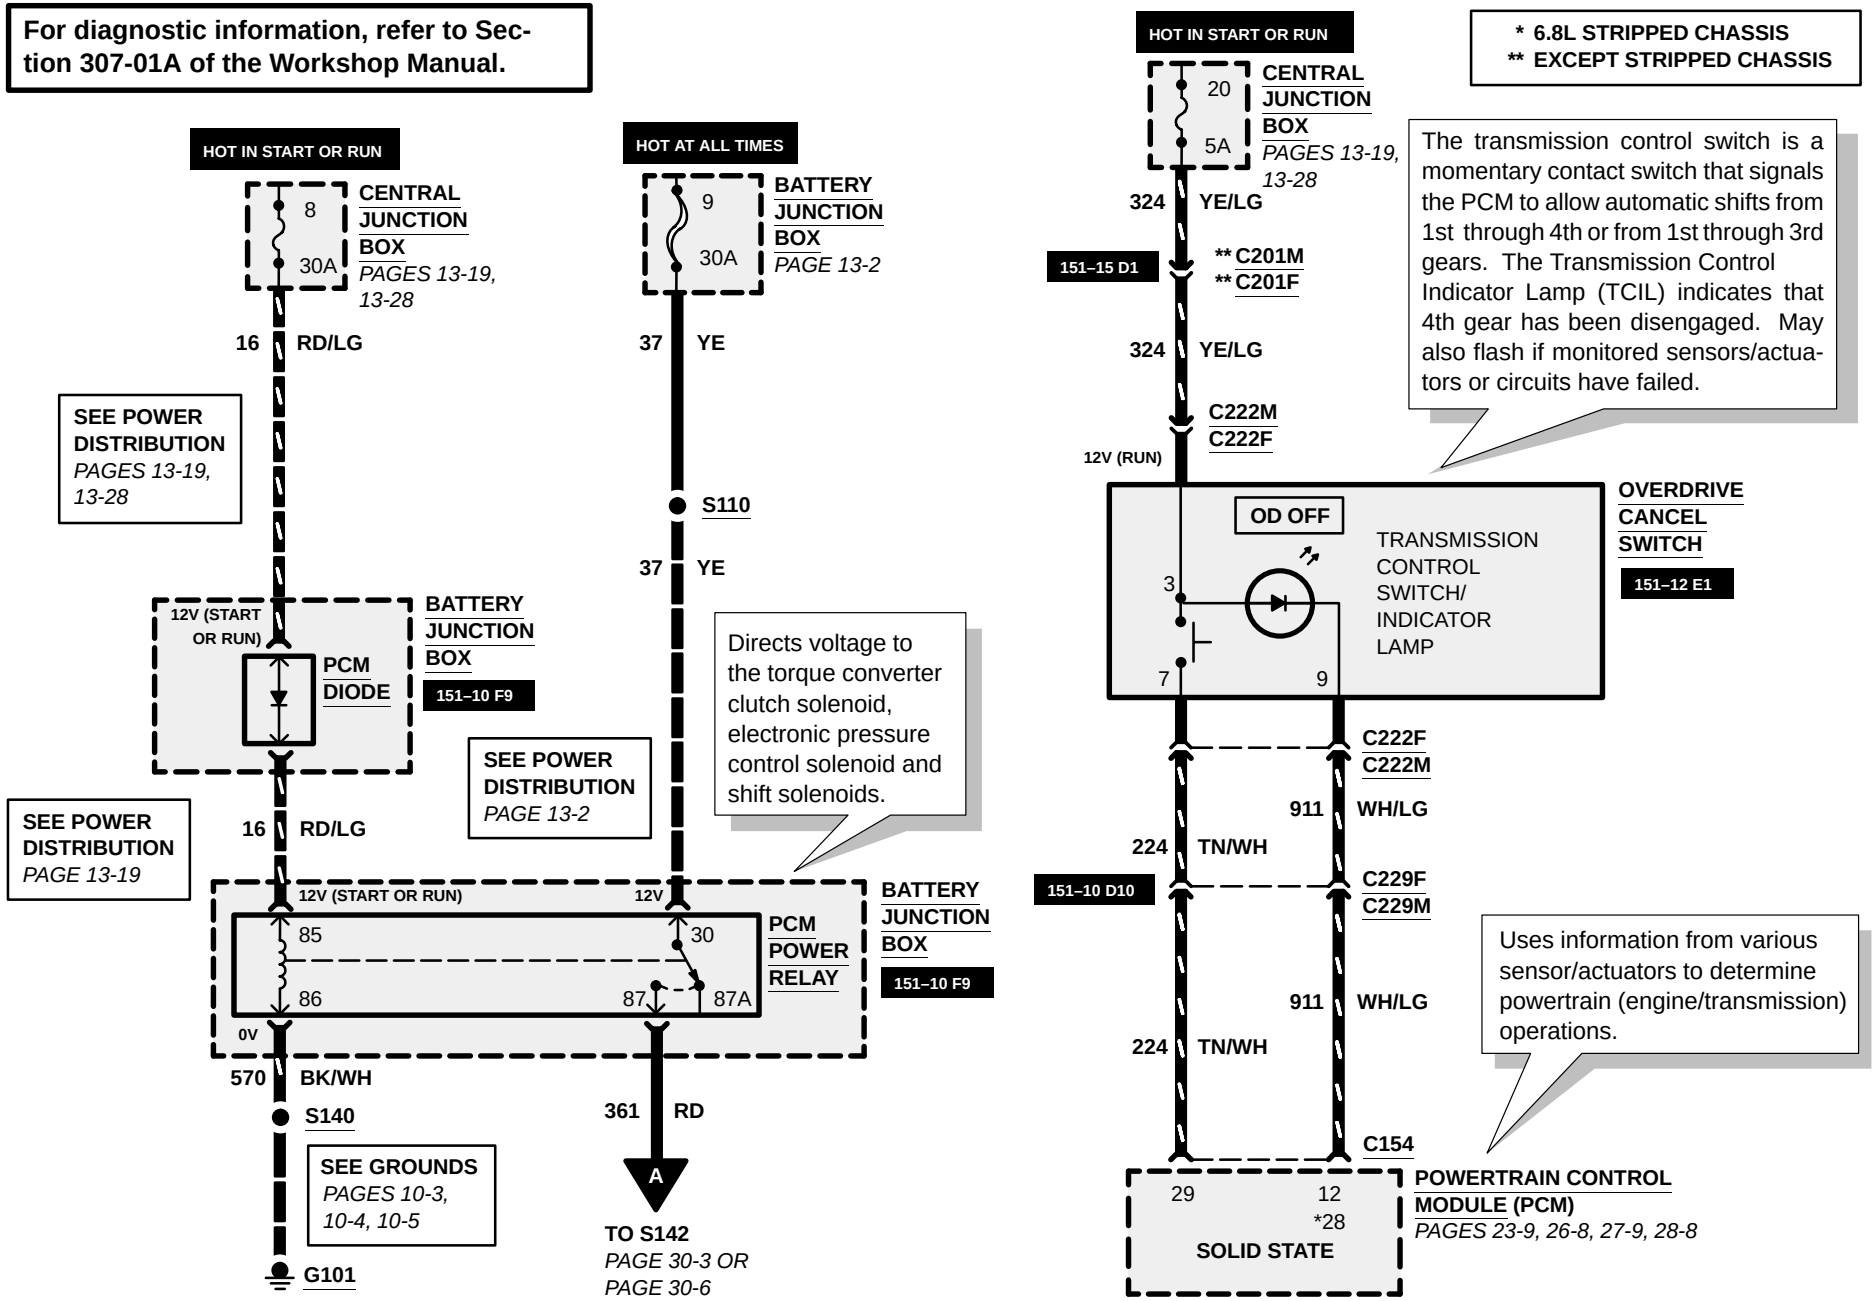
For diagnostic information, refer to Section 307-01A of the Workshop Manual.