As of 8/20/01

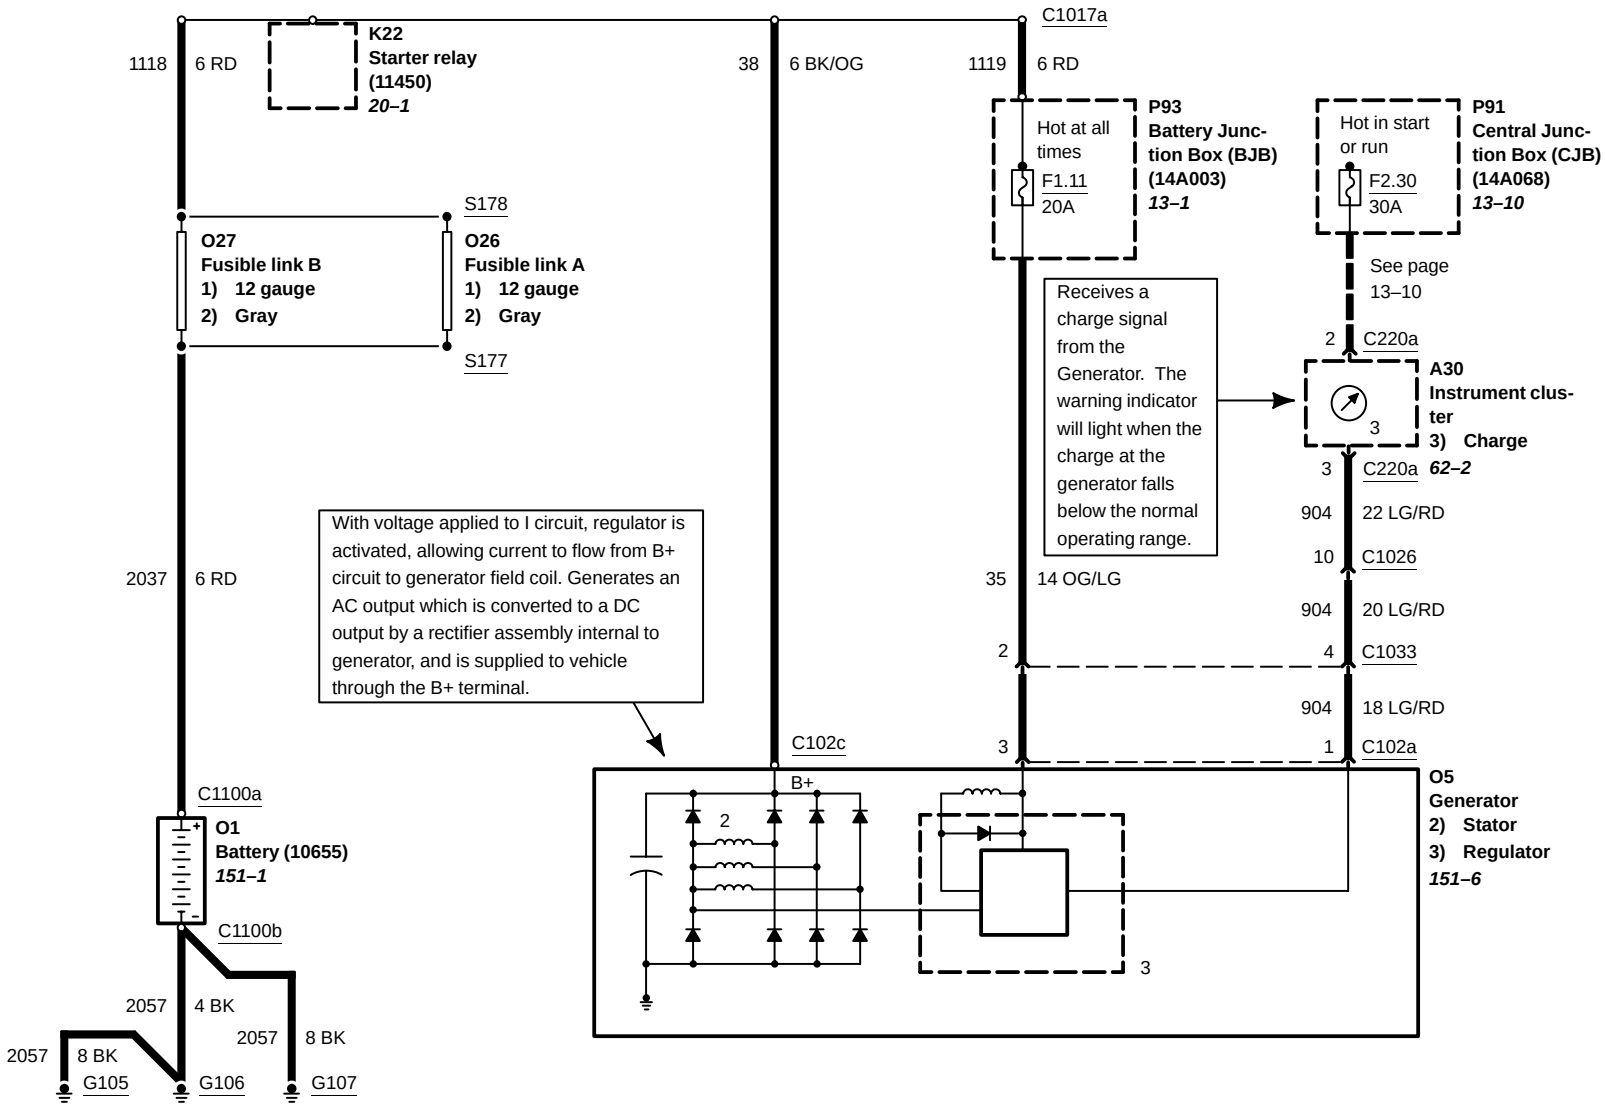
1118 6 RD
K22
Starter relay
(11450)
20–1
38 6 BK/OG
1119 6 RD
C1017a
Hot at all times
F1.11
20A
P93
Battery Junction Box (BJB)
(14A003)
13–1
Hot in start or run
F2.30
30A
P91
Central Junction Box (CJB)
(14A068)
13–10
See page 13–10
S178
O27
Fusible link B
1) 12 gauge
2) Gray
O26
Fusible link A
1) 12 gauge
2) Gray
S177
Receives a charge signal from the Generator. The warning indicator will light when the charge at the generator falls below the normal operating range.
2 C220a
A30
Instrument cluster
3) Charge
3
3 C220a 62–2
904 22 LG/RD
10 C1026
904 20 LG/RD
4 C1033
904 18 LG/RD
1 C102a
2037 6 RD
With voltage applied to I circuit, regulator is activated, allowing current to flow from B+ circuit to generator field coil. Generates an AC output which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal.
35 14 OG/LG
2
3
C102c
B+
O5
Generator
2) Stator
3) Regulator
151–6
C1100a
O1
Battery (10655)
151–1
C1100b
2057 4 BK
2057 8 BK
2057 8 BK
G105
G106
G107