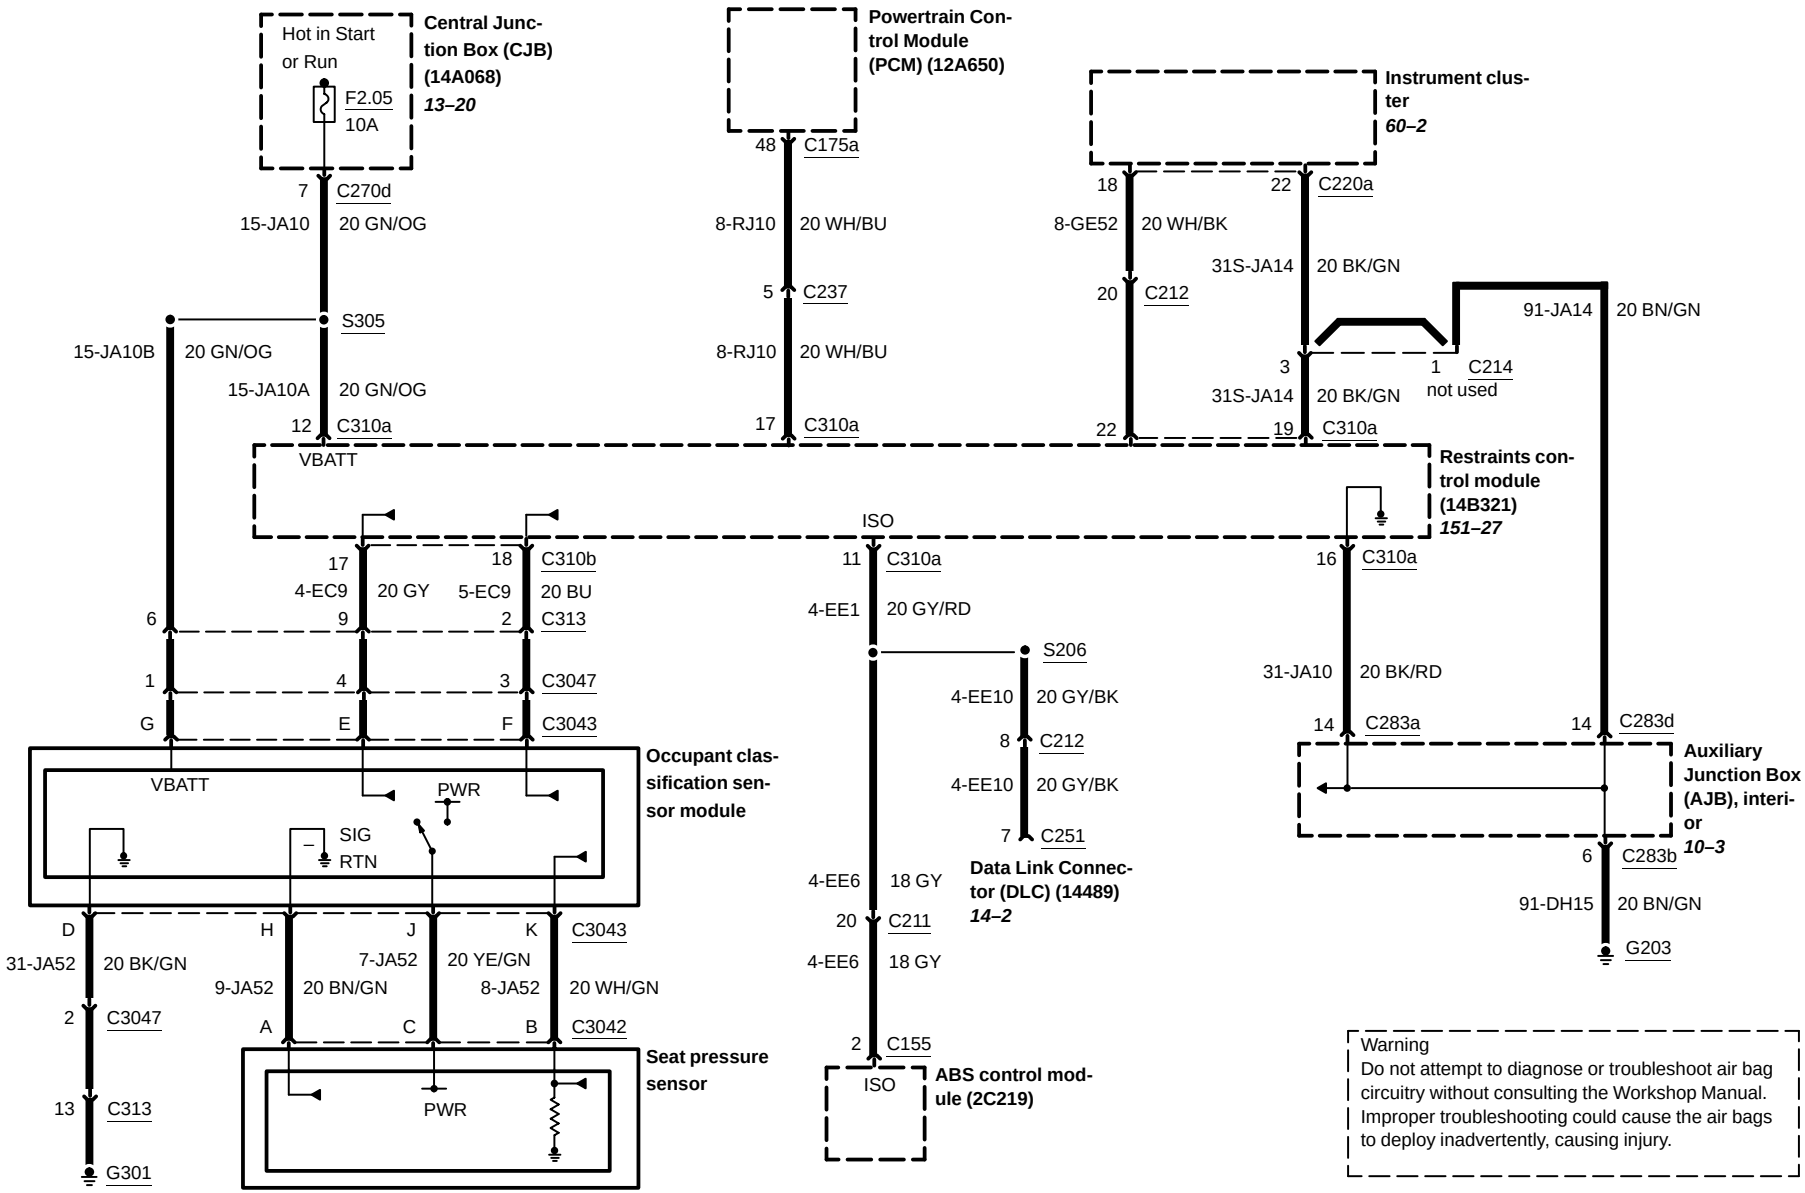
Hot in Start or Run
F2.05 10A
Central Junction Box (CJB) (14A068) 13–20
7 C270d
15-JA10 20 GN/OG
S305
15-JA10B 20 GN/OG
15-JA10A 20 GN/OG
12 C310a
VBATT
Powertrain Control Module (PCM) (12A650)
48 C175a
8-RJ10 20 WH/BU
5 C237
8-RJ10 20 WH/BU
17 C310a
Instrument cluster 60–2
18 C220a
8-GE52 20 WH/BK
20 C212
22 C220a
31S-JA14 20 BK/GN
3
1 C214 not used
31S-JA14 20 BK/GN
22
19 C310a
91-JA14 20 BN/GN
Restraints control module (14B321) 151–27
ISO
17 18 C310b
4-EC9 20 GY 5-EC9 20 BU
6 9 2 C313
1 4 3 C3047
G E F C3043
VBATT
PWR
SIG RTN
Occupant classification sensor module
D H J K C3043
31-JA52 20 BK/GN
7-JA52 20 YE/GN
9-JA52 20 BN/GN
8-JA52 20 WH/GN
2 C3047
A C B C3042
13 C313
G301
PWR
Seat pressure sensor
11 C310a
4-EE1 20 GY/RD
S206
4-EE10 20 GY/BK
8 C212
4-EE10 20 GY/BK
7 C251
Data Link Connector (DLC) (14489) 14–2
4-EE6 18 GY
20 C211
4-EE6 18 GY
2 C155
ISO
ABS control module (2C219)
16 C310a
31-JA10 20 BK/RD
14 C283a
14 C283d
Auxiliary Junction Box (AJB), interior 10–3
6 C283b
91-DH15 20 BN/GN
G203
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.