Vehicle Repair Location Charts

VEHICLE REPAIR LOCATION CODES

TO PINPOINT THE ACTUAL VEHICLE LOCATION OF A REPAIR, THE VEHICLE REPAIR LOCATION CODE IS REQUIRED.

FOR EXAMPLE, AN "X" HAS BEEN PLACED IN THE QUADRANT OF THE VEHICLE DIAGRAMS INDICATING THE LOCATION OF THE REPAIR. SEE DIAGRAMS.

LOCATION CODE, FOR THE EXAMPLE: B5/FU – (UNDER THE FLOOR AND BETWEEEN THE DRIVER'S FEET.)

FRONT/REAR DIRECTION

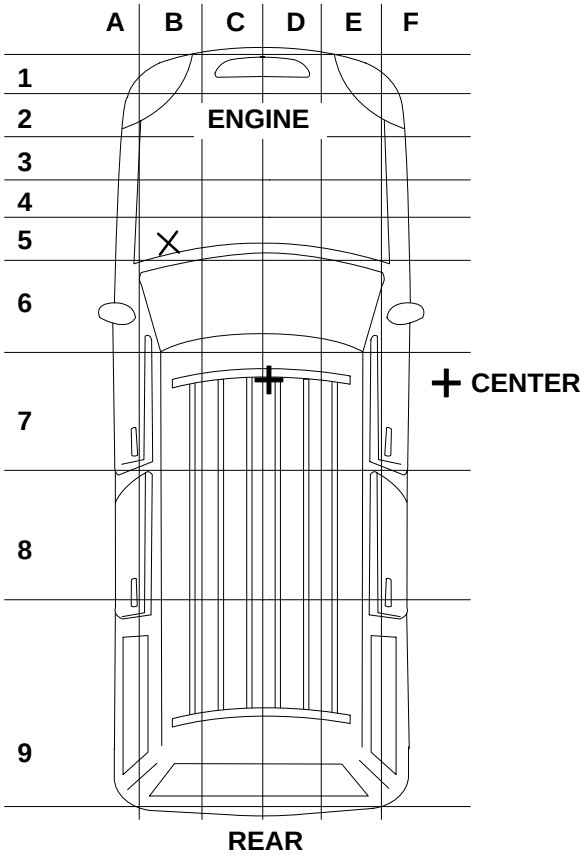

OVER/UNDER DIRECTION

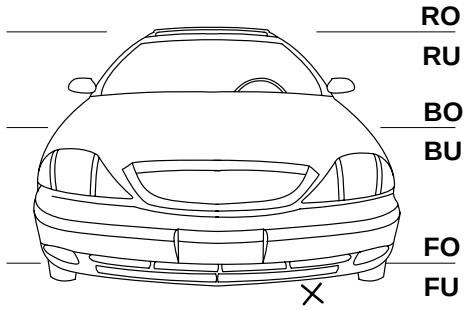

R = ROOF LINE
- **RO = ROOF OVER**
- **RU = ROOF UNDER**

B = BELT LINE
- **BO = BELT OVER**
- **BU = BELT UNDER**

F = FLOOR PLAN
- **FO = FLOOR OVER**
- **FU = FLOOR UNDER**

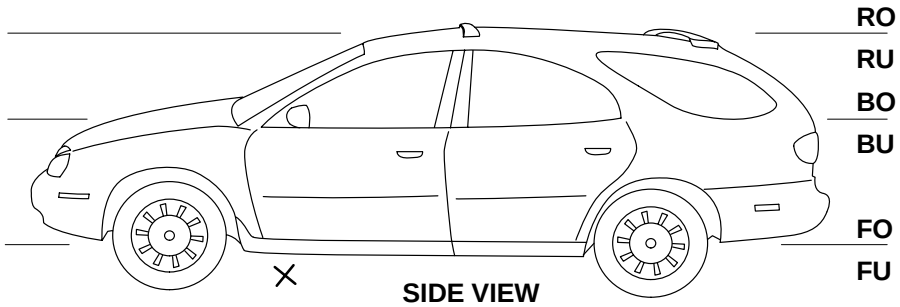

SIDE VIEW

TAURUS/SABLE
FCS-12123-01