* SUPERCREWZER

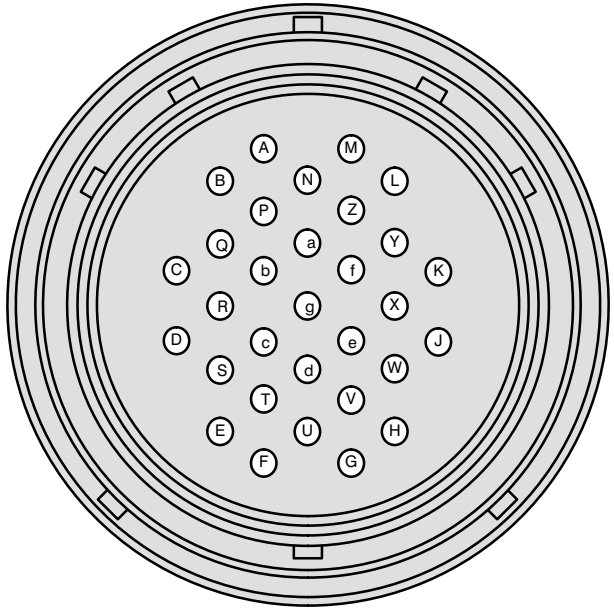


**C320**

**ALLISON ELECTRONIC TRANSMISSION**

| PIN | CIRCUIT | CIRCUIT FUNCTION | PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|---|---|---|
| A | 102 (WH) | To Electronic Control Unit | S | *48 | Shield Wire |
| B | 103 (WH/RD) | To Electronic Control Unit | T | *48 | Shield Wire |
| C | 104 (LB/OG) | To Electronic Control Unit | U | 140 (BK/PK) | To Electronic Control Unit |
| D | 124 (BN) | To Electronic Control Unit | V | 149 (BN/LG) | To Electronic Control Unit |
| E | 107(VT) | To Electronic Control Unit | W | 195 (TN/WH) | To Electronic Control Unit |
| F | 110 (WH/LG) | To Electronic Control Unit | X | 162 (LG/RD) | To Electronic Control Unit |
| G | 120 (PK/LG) | To Electronic Control Unit | Y | 165 (TN/WH) | To Electronic Control Unit |
| H | 121 (YE/BK) | To Electronic Control Unit | Z | *48 | Shield Wire |
| J | 128 (VT/YE) | To Electronic Control Unit | a | *48 | Shield Wire |
| K | 129 (LG) | To Electronic Control Unit | b | *48 | Shield Wire |
| L | 130 (RD/LG) | To Electronic Control Unit | c | *48 | Shield Wire |
| M | 131 (VT/OG) | To Electronic Control Unit | d | *48 | Shield Wire |
| N | 135 (YE/RD) | To Electronic Control Unit | e | *48 | Shield Wire |
| P | 147 (VT/LB) | To Electronic Control Unit | f | *48 | Shield Wire |
| Q | *48 | Shield Wire | g | *48 | Shield Wire |
| R | *48 | Shield Wire | | | |