C439

12A690

A40
Transmission hard-
ware unit

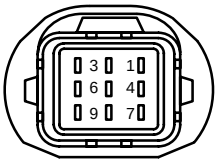

F09020

Pin	Circuit	Circuit Function
1	15S-TA65 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	15S-TA17 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
3	15S-TA63 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
4	9-TA36 (BN/GN)	Sensor signal return (reference/ground)
5	8-TA36 (WH/GN)	Sensor signal
6	15S-TA23 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
7	91S-TA17 (BK/RD)	Ground, switched
8	15S-TA24 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
9	15S-TA64 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched