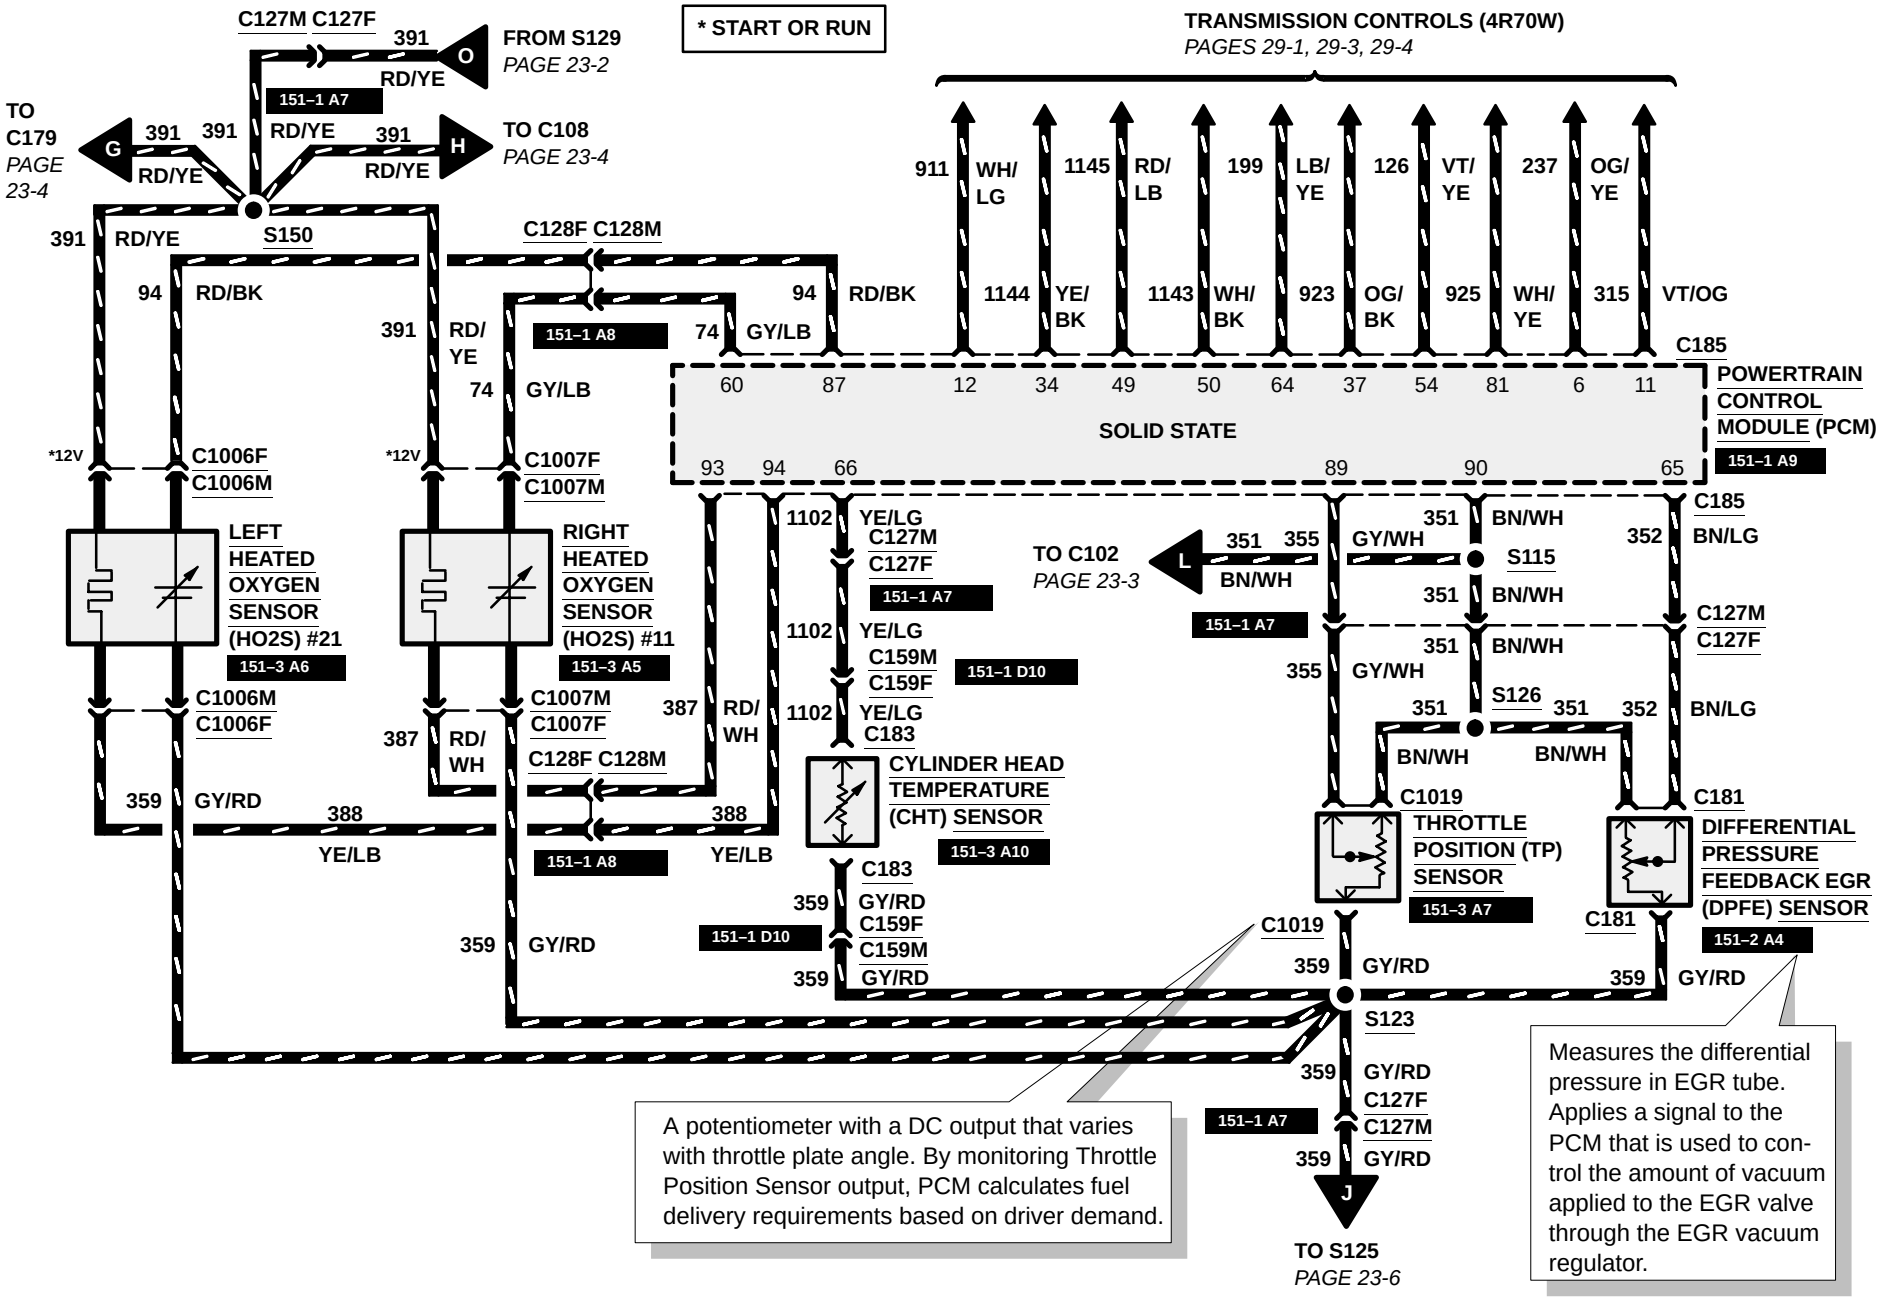
* START OR RUN
TRANSMISSION CONTROLS (4R70W)
PAGES 29-1, 29-3, 29-4
C127M C127F
391 RD/YE
FROM S129
PAGE 23-2
151–1 A7
TO C179
PAGE 23-4
TO C108
PAGE 23-4
S150
C128F C128M
911 WH/LG
1145 RD/LB
199 LB/YE
126 VT/YE
237 OG/YE
94 RD/BK
1144 YE/BK
1143 WH/BK
923 OG/BK
925 WH/YE
315 VT/OG
74 GY/LB
151–1 A8
C185
POWERTRAIN CONTROL MODULE (PCM)
SOLID STATE
151–1 A9
*12V
C1006F
C1006M
C1007F
C1007M
LEFT HEATED OXYGEN SENSOR (HO2S) #21
151–3 A6
RIGHT HEATED OXYGEN SENSOR (HO2S) #11
151–3 A5
1102 YE/LG
C127M
C127F
C159M
C159F
C183
151–1 D10
CYLINDER HEAD TEMPERATURE (CHT) SENSOR
151–3 A10
387 RD/WH
388 YE/LB
359 GY/RD
TO C102
PAGE 23-3
351 BN/WH
355 GY/WH
S115
S126
352 BN/LG
C1019
THROTTLE POSITION (TP) SENSOR
151–3 A7
C181
DIFFERENTIAL PRESSURE FEEDBACK EGR (DPFE) SENSOR
151–2 A4
S123
TO S125
PAGE 23-6
A potentiometer with a DC output that varies with throttle plate angle. By monitoring Throttle Position Sensor output, PCM calculates fuel delivery requirements based on driver demand.
Measures the differential pressure in EGR tube. Applies a signal to the PCM that is used to control the amount of vacuum applied to the EGR valve through the EGR vacuum regulator.