C176

14A594

Non–Speed control jumper

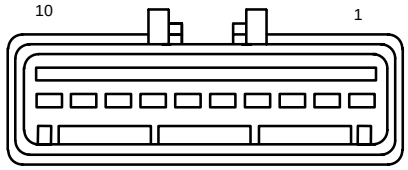

F10011

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	–	not used
6	848 (DG/OG)	Ground
7	–	not used
8	–	not used
9	–	not used
10	57 (BK)	Ground

C177 (BK)

14290

Forward crash sensor



F02383

Pin	Circuit	Circuit function
1	618 (VT/LG)	Air bag crash sensor #1, monitor
2	617 (PK/OG)	Air bag crash sensor #1, feed

C180 (BK)

12B637

Camshaft position sensor (6B288)

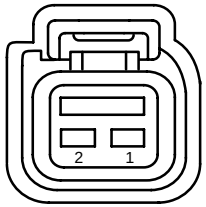

F02109

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
2	282 (DB/OG)	Camshaft position sensor (6B288), input

C181

12B637

Fuel injector 1 (9F593)

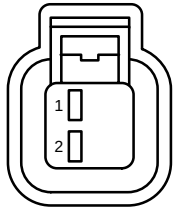

F02069

Pin	Circuit	Circuit function
1	555 (TN)	Fuel injector 1, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C182

12B637

Fuel injector 2 (9F593)

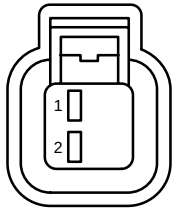

F02069

Pin	Circuit	Circuit function
1	556 (WH)	Fuel injector 2, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)