C3211 (BK)

14A488

Side impact sensor, passenger 1



F02383

Pin	Circuit	Circuit function
1	1264 (BN)	Air bag, – passenger side impact, – crash sensor to module, – return
2	1263 (WH)	Air bag, – passenger side impact, – crash sensor to module, – feed

C3212 (BK)

14A488

Side impact sensor, passenger 2



F02221

Pin	Circuit	Circuit function
1	1264 (BN)	Air bag, – driver side impact, – crash sensor to module, – return
2	1263 (WH)	Air bag, – driver side impact, – crash sensor to module, – feed

C3213 (BK)

14A488

Safety canopy, left

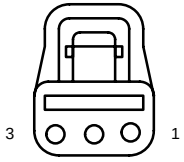

F03035

Pin	Circuit	Circuit function
1	1257 (WH/LB)	Air bag, – driver side impact, – to module, – feed
2	–	not used
3	1258 (RD)	Air bag, – driver side impact, – to module, – return

C3214 (BK)

14A488

Safety canopy, right

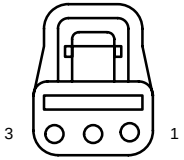

F03035

Pin	Circuit	Circuit function
1	1259 (WH/YE)	Air bag – passenger side impact – to module – feed
2	–	not used
3	1260 (BN/YE)	Air bag – passenger side impact – to module – return

C4009 (BK)

15K868

Parking aid sensor, outer left (15K859)

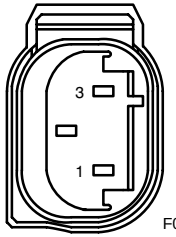

F03108

Pin	Circuit	Circuit function
1	1439 (BN/PK)	Parking Aid Module (PAM) (15K866), Sensor, Power
2	1444 (DB/YE)	Parking Aid Module (PAM) (15K866) to Parking aid sensor, outer left (15K859), input
3	1440 (DG/YE)	Parking Aid Module (PAM) (15K866), Sensor, return

C4010 (BK)

15K868

Parking aid sensor, inner left (15K859)

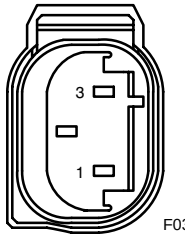

F03108

Pin	Circuit	Circuit function
1	1439 (BN/PK)	Parking Aid Module (PAM) (15K866), Sensor, Power
2	1443 (WH/LB)	Parking Aid Module (PAM) (15K866) to Parking aid sensor, inner left (15K859), input
3	1440 (DG/YE)	Parking Aid Module (PAM) (15K866), Sensor, return