C2012 (BU)

12A522

K163
PCM power relay

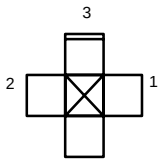

F04129

Pin	Circuit	Circuit Function
1	AV04 (WH/GN)	PCM power relay, control
2	AV97 (RD)	Voltage supplied at all times (overload protected)
3	AV96 (RD)	Voltage supplied at all times (overload protected)
4	–	not used
5	AV38 (BK/WH)	Voltage supplied in Start and Run (overload protected)

C2013 (WH)

14B023

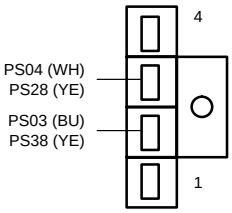

F04114

14A664

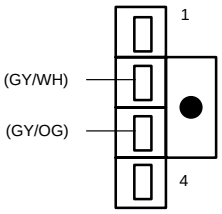

F04113

C2014 (YE)

14A664

A42
Driver air bag module



Pin	Circuit	Circuit Function
1	(GY/WH)	Voltage supplied in Start and Run (overload protected)
2	(GY/OG)	Voltage supplied in Start and Run (overload protected)

C2015 (WH)

14N104

R22
Temperature door variable resistor



F03056

Pin	Circuit	Circuit Function
1	HAE5 (BK)	Ground
2	HA21 (OG)	Air temperature door variable resistor, wiper
3	HA07 (GY)	Voltage in Run (overload protected)

C2016 (WH)

14N104

P91
Central Junction Box (CJB)

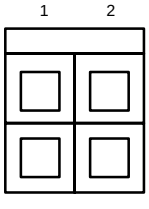

F04043.01

Pin	Circuit	Circuit Function
1	HC23 (BK/YE)	Front blower motor relay, control
	HA05 (YE/RD)	Front blower motor relay, control
2	HF07 (GN/BK)	Rear window defrost relay, control
3	LC41 (GY/RD)	Tail lamp relay, control
4	–	not used