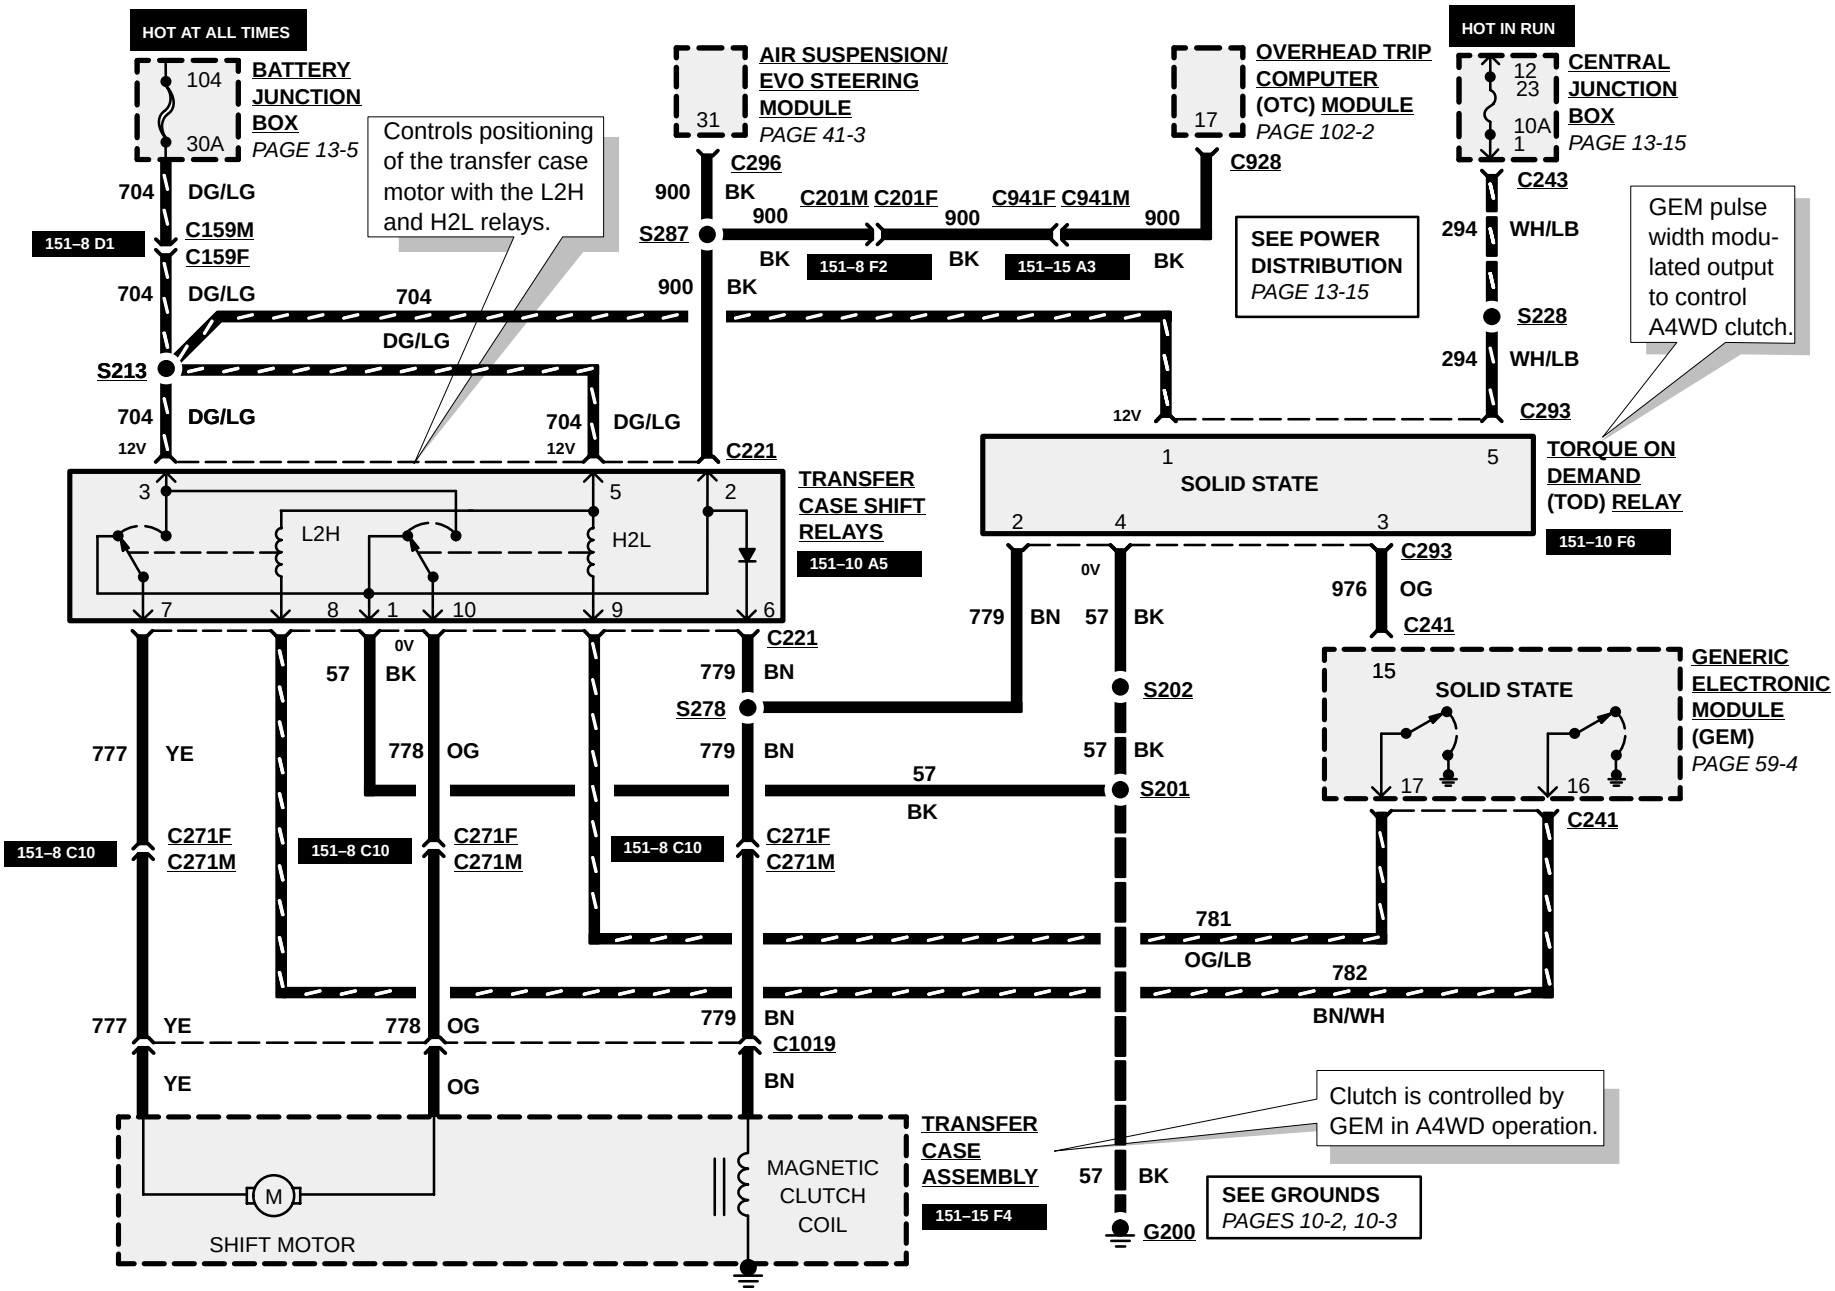
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-5
104
30A
704 DG/LG
C159M
C159F
151–8 D1
704 DG/LG
S213
704 DG/LG
12V
704 DG/LG
704 DG/LG
12V
C221
Controls positioning of the transfer case motor with the L2H and H2L relays.
TRANSFER CASE SHIFT RELAYS
151–10 A5
3
5
2
L2H
H2L
7
8
1
10
9
6
0V
57 BK
777 YE
778 OG
779 BN
151–8 C10
C271F
C271M
C1019
YE
OG
BN
M
SHIFT MOTOR
MAGNETIC CLUTCH COIL
TRANSFER CASE ASSEMBLY
151–15 F4
AIR SUSPENSION/ EVO STEERING MODULE
PAGE 41-3
31
C296
900 BK
S287
900 BK
C201M C201F
151–8 F2
900
C941F C941M
151–15 A3
900
BK
OVERHEAD TRIP COMPUTER (OTC) MODULE
PAGE 102-2
17
C928
SEE POWER DISTRIBUTION
PAGE 13-15
900 BK
12V
HOT IN RUN
CENTRAL JUNCTION BOX
PAGE 13-15
12
23
10A
1
C243
294 WH/LB
S228
294 WH/LB
C293
GEM pulse width modulated output to control A4WD clutch.
TORQUE ON DEMAND (TOD) RELAY
151–10 F6
SOLID STATE
1
5
2
4
3
C293
976 OG
C241
779 BN
57 BK
S202
S278
779 BN
57 BK
S201
57 BK
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-4
SOLID STATE
15
17
16
C241
781 OG/LB
782 BN/WH
Clutch is controlled by GEM in A4WD operation.
57 BK
G200
SEE GROUNDS
PAGES 10-2, 10-3