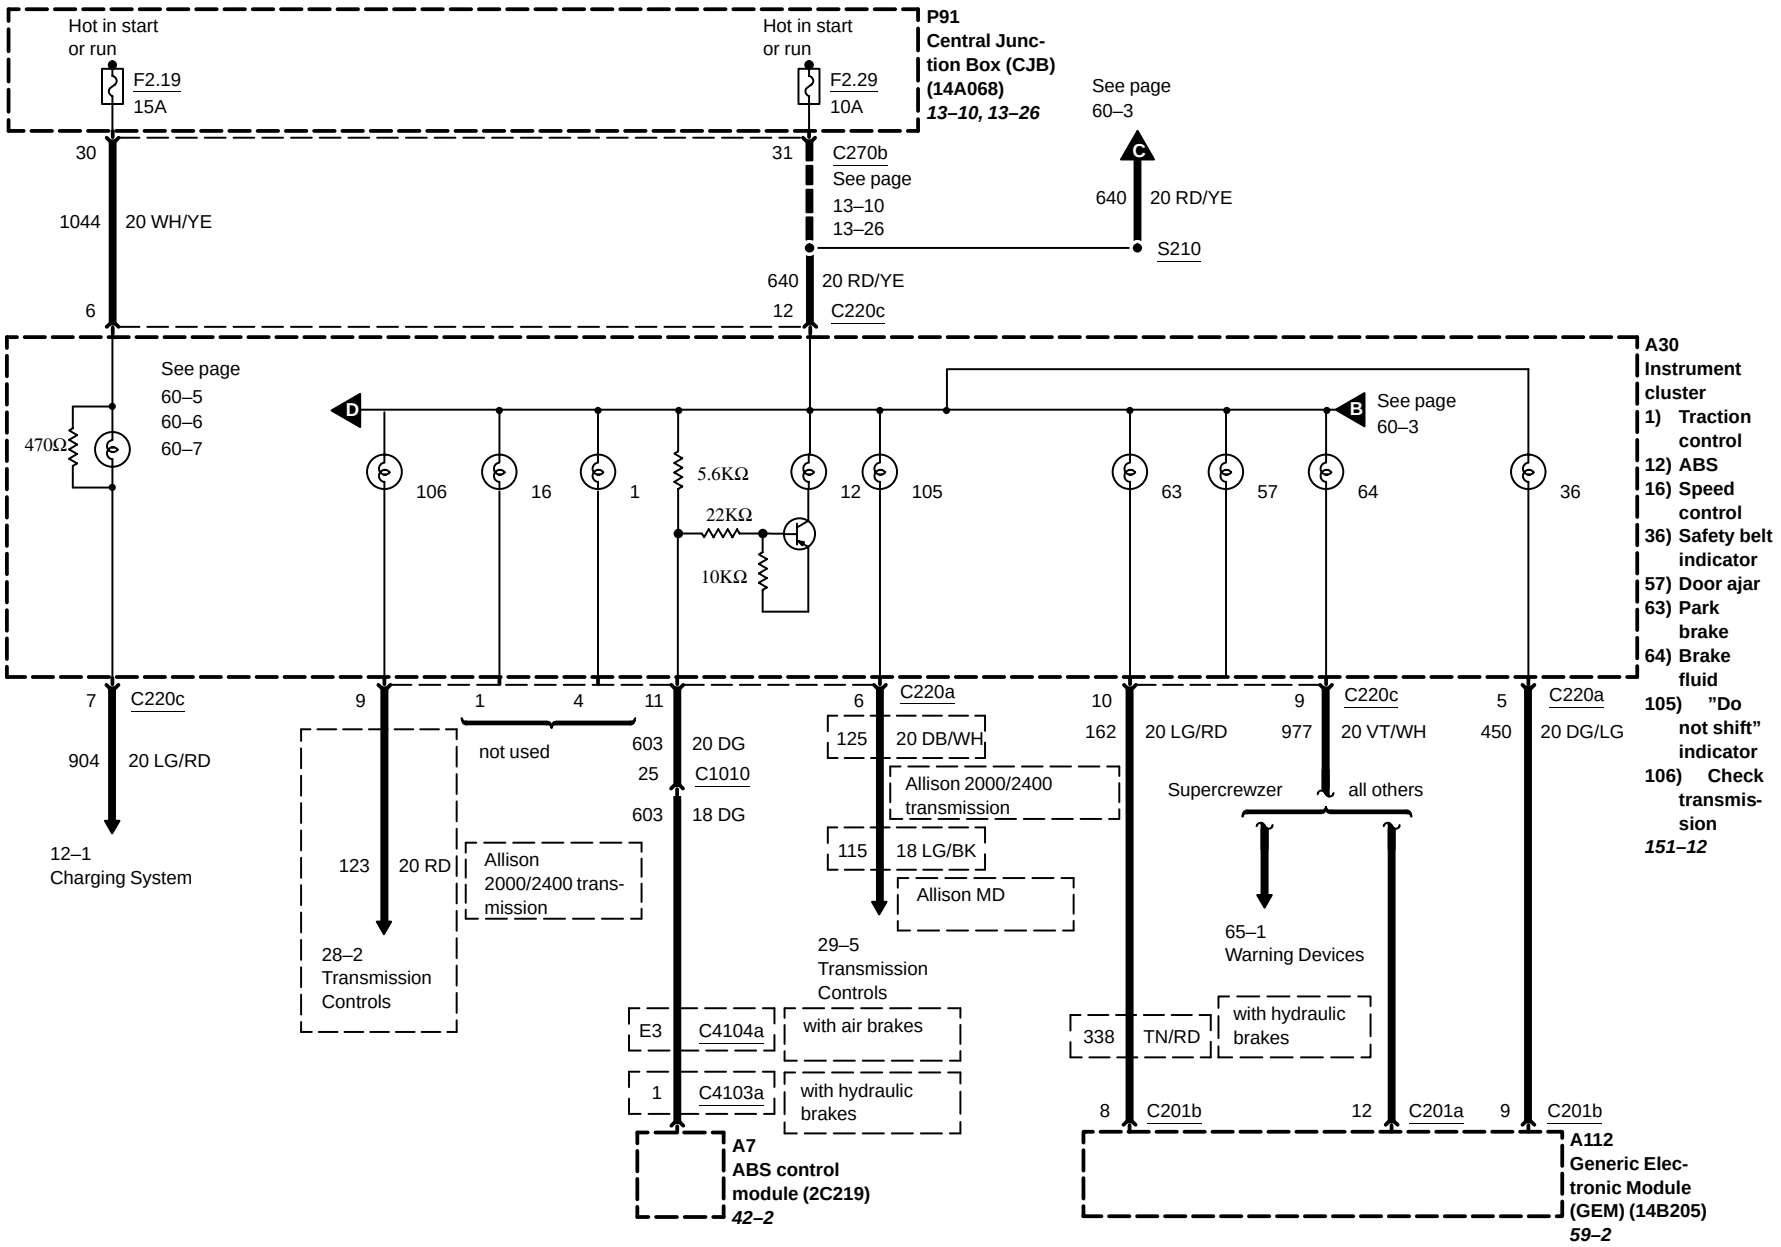

Hot in start or run
F2.19
15A
Hot in start or run
F2.29
10A
P91
Central Junction Box (CJB)
(14A068)
13–10, 13–26
See page 60–3
C
640 20 RD/YE
S210
30
1044 20 WH/YE
6
31
C270b
See page 13–10 13–26
640 20 RD/YE
12
C220c
See page 60–5 60–6 60–7
470Ω
D
106
16
1
5.6KΩ
22KΩ
10KΩ
12
105
63
57
64
36
B
See page 60–3
A30
Instrument cluster
1) Traction control
12) ABS
16) Speed control
36) Safety belt indicator
57) Door ajar
63) Park brake
64) Brake fluid
105) "Do not shift" indicator
106) Check transmission
151–12
7
C220c
904 20 LG/RD
12–1
Charging System
9
123 20 RD
28–2
Transmission Controls
1
4
11
not used
603 20 DG
25
C1010
603 18 DG
Allison 2000/2400 transmission
6
C220a
125 20 DB/WH
Allison 2000/2400 transmission
115 18 LG/BK
Allison MD
29–5
Transmission Controls
10
162 20 LG/RD
9
C220c
977 20 VT/WH
Supercrewzer
all others
65–1
Warning Devices
5
C220a
450 20 DG/LG
E3
C4104a
with air brakes
1
C4103a
with hydraulic brakes
A7
ABS control module (2C219)
42–2
338 TN/RD
with hydraulic brakes
8
C201b
12
C201a
9
C201b
A112
Generic Electronic Module (GEM) (14B205)
59–2