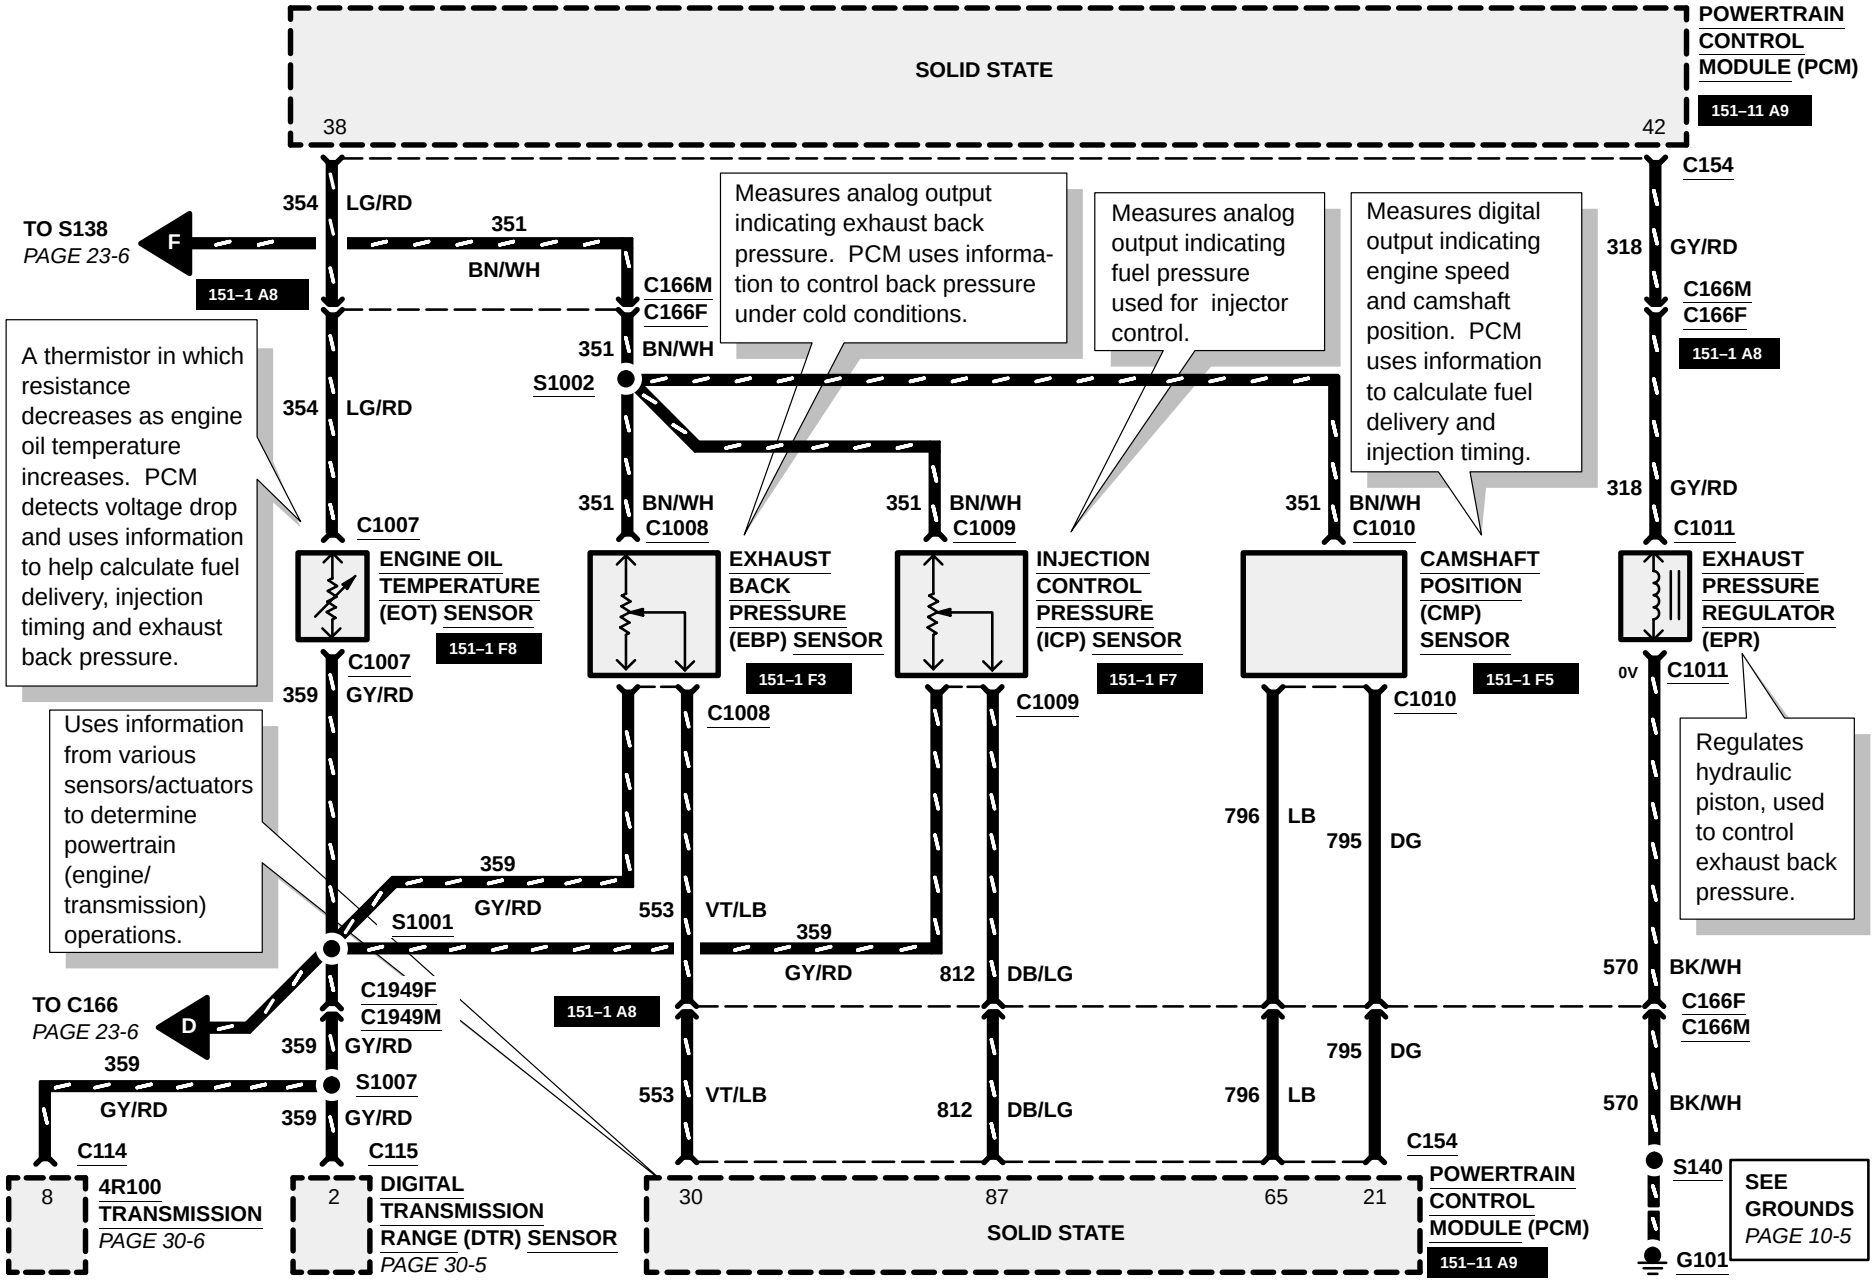
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
38
42
C154
354 LG/RD
351 BN/WH
TO S138
PAGE 23-6
F
151–1 A8
C166M
C166F
318 GY/RD
Measures analog output indicating exhaust back pressure. PCM uses information to control back pressure under cold conditions.
Measures analog output indicating fuel pressure used for injector control.
Measures digital output indicating engine speed and camshaft position. PCM uses information to calculate fuel delivery and injection timing.
A thermistor in which resistance decreases as engine oil temperature increases. PCM detects voltage drop and uses information to help calculate fuel delivery, injection timing and exhaust back pressure.
S1002
C1007
C1008
C1009
C1010
C1011
ENGINE OIL TEMPERATURE (EOT) SENSOR
151–1 F8
EXHAUST BACK PRESSURE (EBP) SENSOR
151–1 F3
INJECTION CONTROL PRESSURE (ICP) SENSOR
151–1 F7
CAMSHAFT POSITION (CMP) SENSOR
151–1 F5
EXHAUST PRESSURE REGULATOR (EPR)
0V
359 GY/RD
796 LB
795 DG
553 VT/LB
812 DB/LG
570 BK/WH
Uses information from various sensors/actuators to determine powertrain (engine/transmission) operations.
Regulates hydraulic piston, used to control exhaust back pressure.
S1001
C1949F
C1949M
TO C166
PAGE 23-6
D
S1007
C114
C115
C166F
C166M
S140
G101
SEE GROUNDS
PAGE 10-5
8
4R100 TRANSMISSION
PAGE 30-6
2
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
PAGE 30-5
30
87
65
21
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9