C715

14633

N86
Door ajar switch, left rear

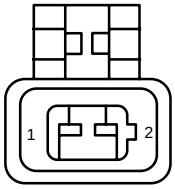

F02117

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	759 (LG/YE)	Door ajar switch, left rear

C803

14632

M117
Power window motor, right rear

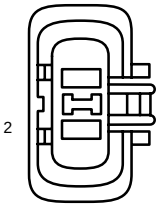

F02225

Pin	Circuit	Circuit Function
1	334 (RD/YE)	Window motor, feed, Down
2	1159 (WH/LB)	Window motor, feed, Up

C801

14632

N110
Window adjust switch, right rear

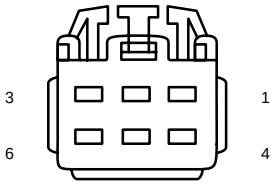

F06237

Pin	Circuit	Circuit Function
1	320 (RD/BK)	Window switch, feed, right rear, Down
2	334 (RD/YE)	Window motor, feed, Down
3	170 (RD/LB)	Window lockout, switched power, output
4	–	not used
5	1159 (WH/LB)	Window motor, feed, Up
6	319 (YE/BK)	Window switch, feed, right rear, Up

C804

14632

M65
Door lock actuator, right rear

F02227

Pin	Circuit	Circuit Function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output

C810

14632

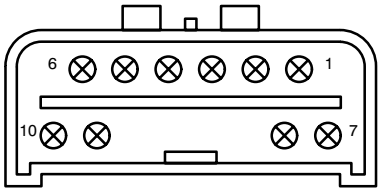

F10025

1) 118 (PK/OG)
2) 117 (PK/BK)
3) 57 (BK)
4) 760 (PK/LB)
5)
6) 320 (RD/BK)
7) 170 (RD/LB)
8)
9)
10) 319 (YE/BK)

14A005

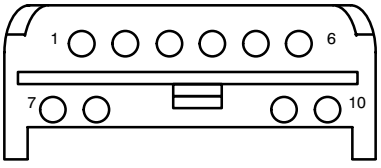

F10009

1) 118 (PK/OG)
2) 117 (PK/BK)
3) 57 (BK)
4) 760 (PK/LB)
5)
6) 320 (RD/BK)
7) 170 (RD/LB)
8)
9)
10) 319 (YE/BK)