C500

14631

A244
Key pad switch assembly

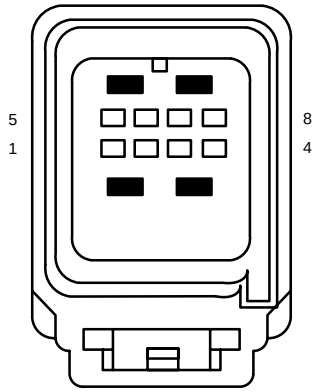

F08327

Pin	Circuit	Circuit function
1	78 (LB/YE)	Key pad button 1/2, output
2	1458 (VT/WH)	Fused battery feed, SSP 4 relay, to, right rear, Lamp
3	121 (YE/BK)	Key pad button 5/6, output
4	–	not used
5	1334 (OG/WH)	puddle lamp, control
6	1205 (BK)	Ground
7	79 (LG/RD)	Key pad button 3/4, output
8	–	not used

C502

14290

N254
Lock cylinder switch, left

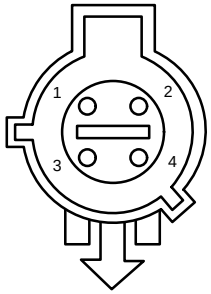

F04251

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	–	not used
3	1313 (LB/BK)	driver door, disarm, switch, Front Electronic Module (FEM) (13C788)
4	–	not used

C506

14631

E177
Door entry lamp, left front (13776)

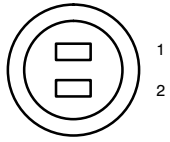

F02086

Pin	Circuit	Circuit function
1	1334 (OG/WH)	puddle lamp, control
2	1458 (VT/WH)	Fused battery feed, SSP 4 relay, to, right rear, Lamp