PICKUP

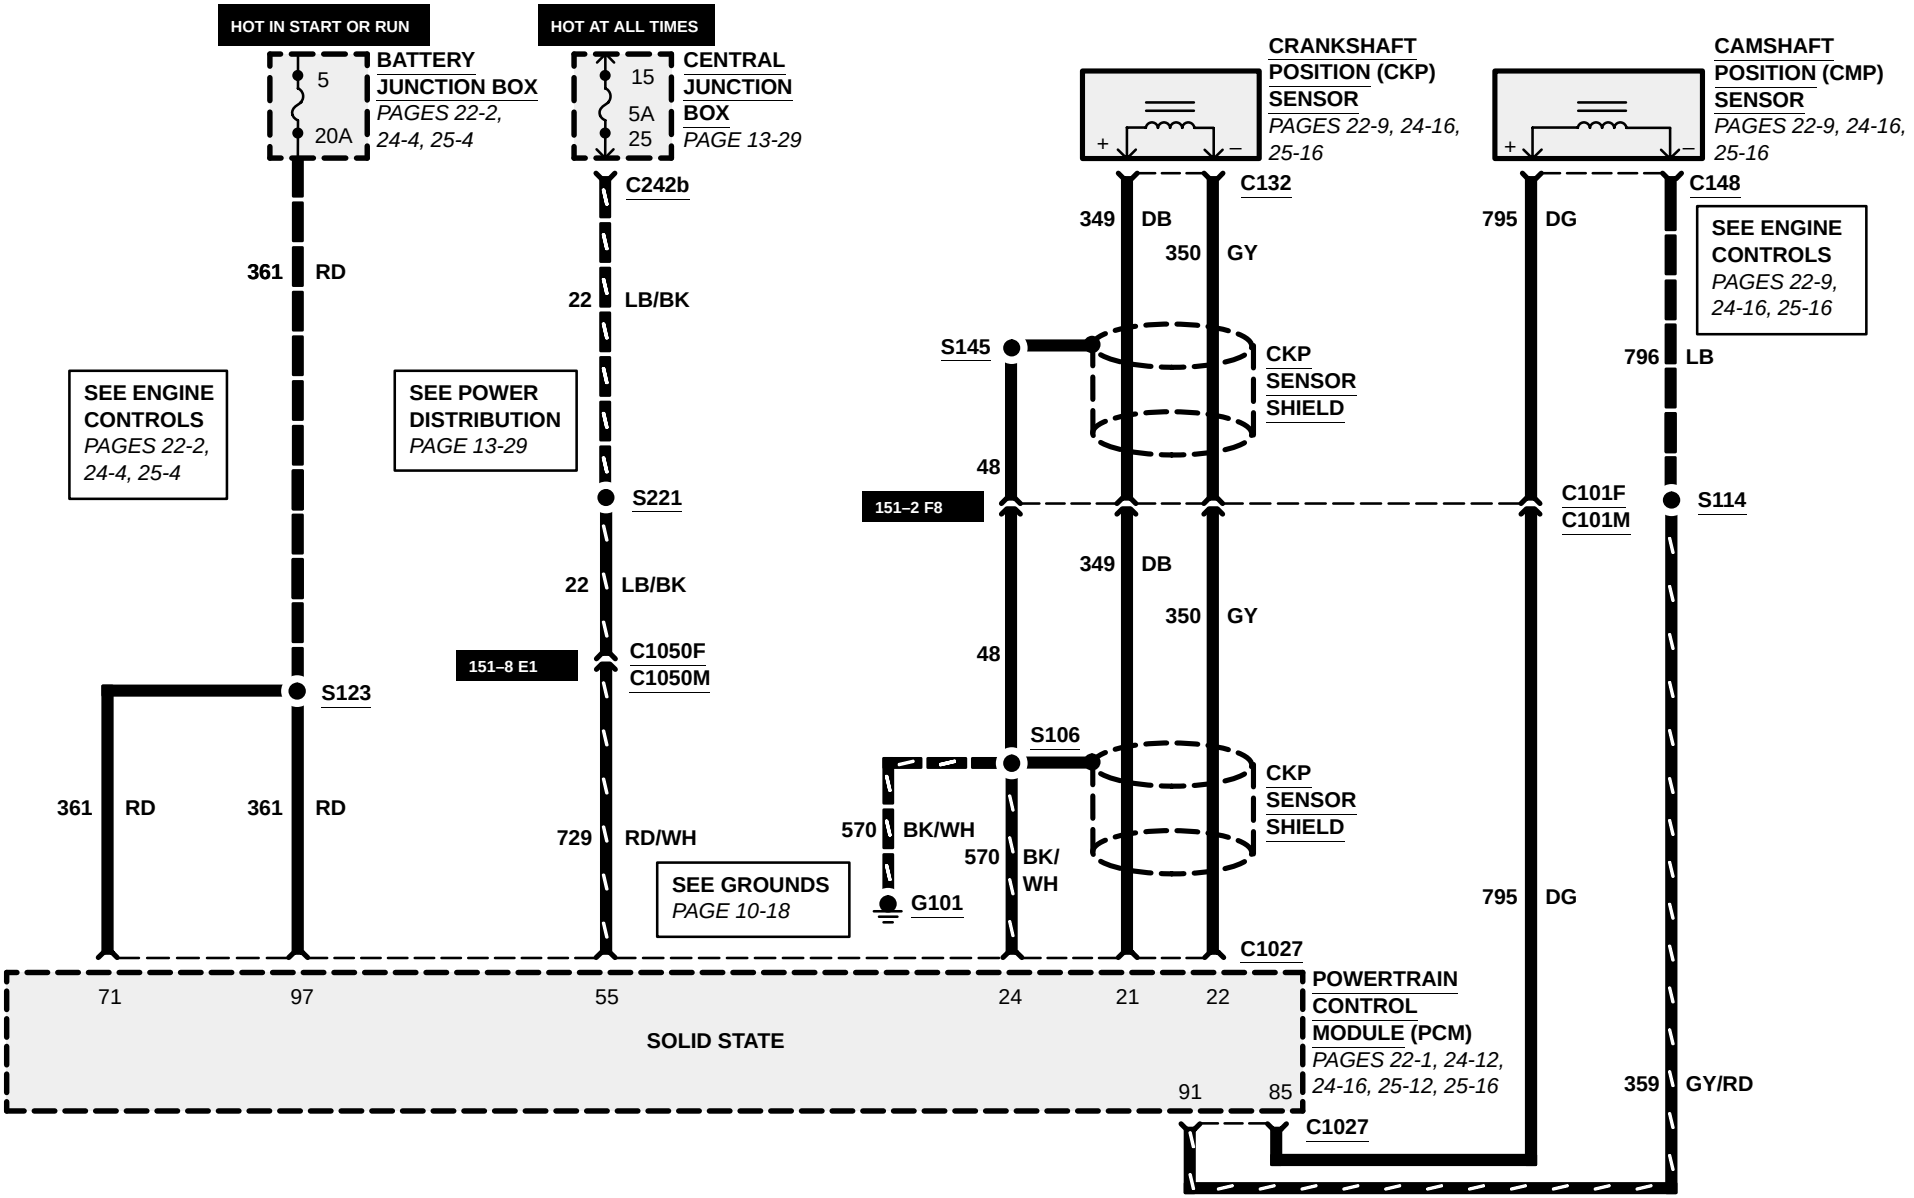
HOT IN START OR RUN
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGES 22-2, 24-4, 25-4
5
20A
CENTRAL JUNCTION BOX
PAGE 13-29
15
5A
25
CRANKSHAFT POSITION (CKP) SENSOR
PAGES 22-9, 24-16, 25-16
CAMSHAFT POSITION (CMP) SENSOR
PAGES 22-9, 24-16, 25-16
C242b
C132
C148
361 RD
22 LB/BK
349 DB
350 GY
795 DG
SEE ENGINE CONTROLS
PAGES 22-9, 24-16, 25-16
SEE ENGINE CONTROLS
PAGES 22-2, 24-4, 25-4
SEE POWER DISTRIBUTION
PAGE 13-29
S145
CKP SENSOR SHIELD
796 LB
48
S221
151–2 F8
C101F
C101M
S114
22 LB/BK
349 DB
350 GY
151–8 E1
C1050F
C1050M
48
S123
S106
CKP SENSOR SHIELD
361 RD
361 RD
361 RD
729 RD/WH
570 BK/WH
570 BK/ WH
SEE GROUNDS
PAGE 10-18
G101
795 DG
C1027
71
97
55
24
21
22
POWERTRAIN CONTROL MODULE (PCM)
PAGES 22-1, 24-12, 24-16, 25-12, 25-16
SOLID STATE
91
85
359 GY/RD
C1027