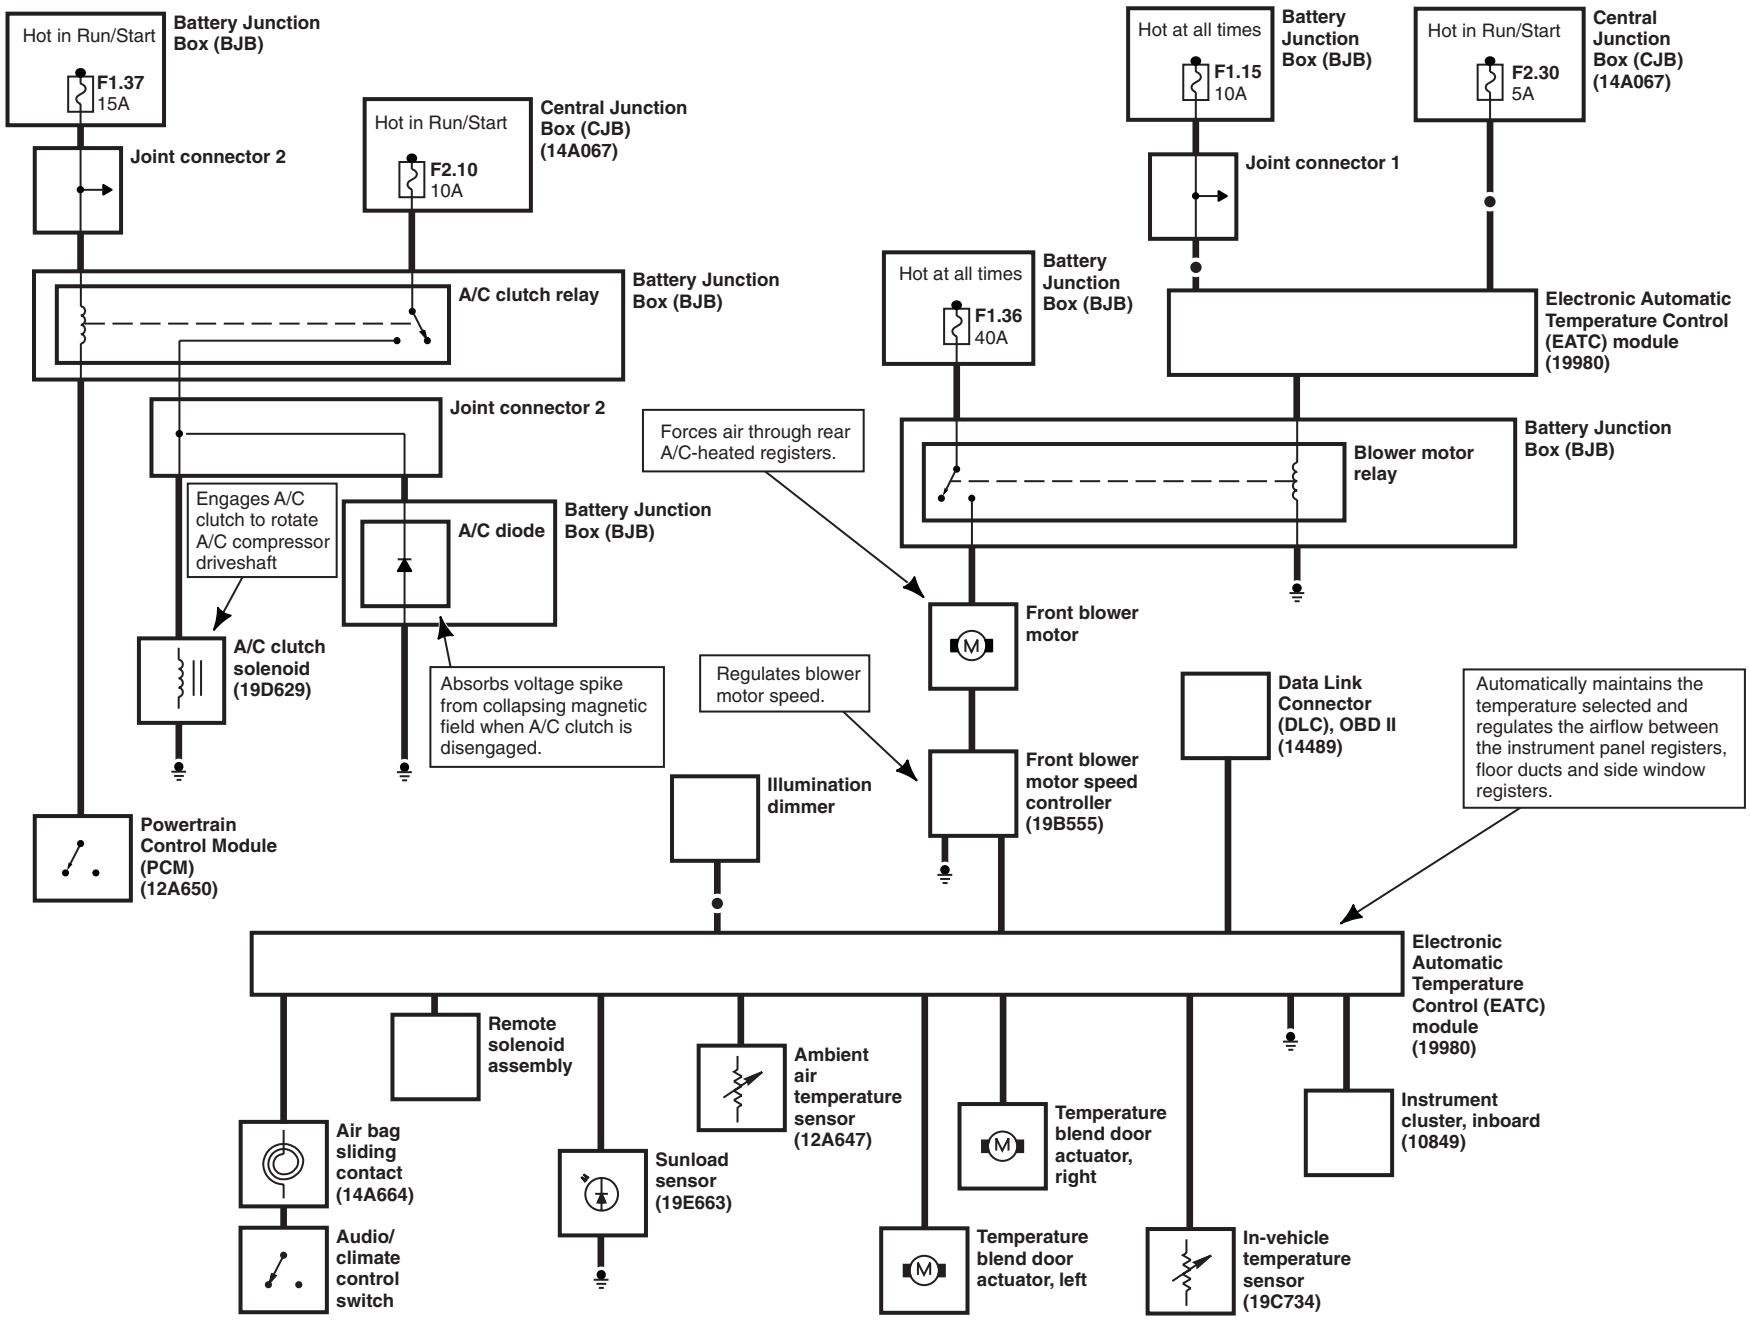
Hot in Run/Start
Battery Junction Box (BJB)
F1.37
15A
Joint connector 2
Hot in Run/Start
Central Junction Box (CJB) (14A067)
F2.10
10A
A/C clutch relay
Battery Junction Box (BJB)
Joint connector 2
Engages A/C clutch to rotate A/C compressor driveshaft
A/C diode
Battery Junction Box (BJB)
A/C clutch solenoid (19D629)
Absorbs voltage spike from collapsing magnetic field when A/C clutch is disengaged.
Powertrain Control Module (PCM) (12A650)
Hot at all times
Battery Junction Box (BJB)
F1.15
10A
Joint connector 1
Hot in Run/Start
Central Junction Box (CJB) (14A067)
F2.30
5A
Hot at all times
Battery Junction Box (BJB)
F1.36
40A
Electronic Automatic Temperature Control (EATC) module (19980)
Forces air through rear A/C-heated registers.
Blower motor relay
Battery Junction Box (BJB)
Front blower motor
Regulates blower motor speed.
Front blower motor speed controller (19B555)
Illumination dimmer
Data Link Connector (DLC), OBD II (14489)
Automatically maintains the temperature selected and regulates the airflow between the instrument panel registers, floor ducts and side window registers.
Electronic Automatic Temperature Control (EATC) module (19980)
Remote solenoid assembly
Ambient air temperature sensor (12A647)
Air bag sliding contact (14A664)
Sunload sensor (19E663)
Temperature blend door actuator, right
Instrument cluster, inboard (10849)
Audio/ climate control switch
Temperature blend door actuator, left
In-vehicle temperature sensor (19C734)