PIN	CIRCUIT	CIRCUIT FUNCTION
91	63 (LG/BK)	Signal Return
92	351 (GN)	Brake Pedal Position (BPP) Switch Input
93	95 (OG/BK)	Heater Oxygen Sensor (HO2S) #11 (Front Heater)
94	–	NOT USED
95	97 (VT)	Heater Oxygen Sensor (HO2S) #12 (Rear Heater)
96	–	NOT USED
97	101 (WH/RD)	PCM Relay Power (Start or Run)
98	–	NOT USED
99	–	NOT USED
100	115 (GN/OG)	Injector #4
101	116 (VT/YE)	Injector #2
102	–	NOT USED
103	999 (BK/YE)	Ground
104	–	NOT USED

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C108	13-13
C110	13-13
C147	33-3
C191	29-5
C210	13-14
C220	13-15
C240	13-16
C252	62-8
C254	62-6
C255	23-12
C264	46-3
C292	31-3
C315	23-11
C386	42-4
C405	111-3
C407	23-11

COUPE

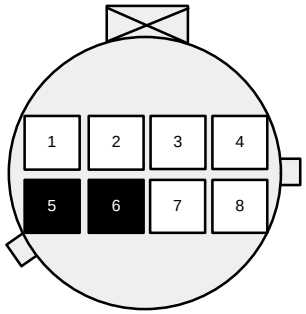

C176

MASS AIR FLOW (MAF) SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	63 (LB/BK)	Signal Return
2	87 (OG/BU)	Powertrain Control Module (PCM) MAF Return
3	143 (BN/BK)	Powertrain Control Module (PCM) MAF Signal
4	109 (WH/GN)	Powertrain Control Module (PCM) (IAT)
5	–	NOT USED
6	–	NOT USED
7	101 (WH/RD)	PCM Power Relay
8	999 (BK/YE)	Ground