-1

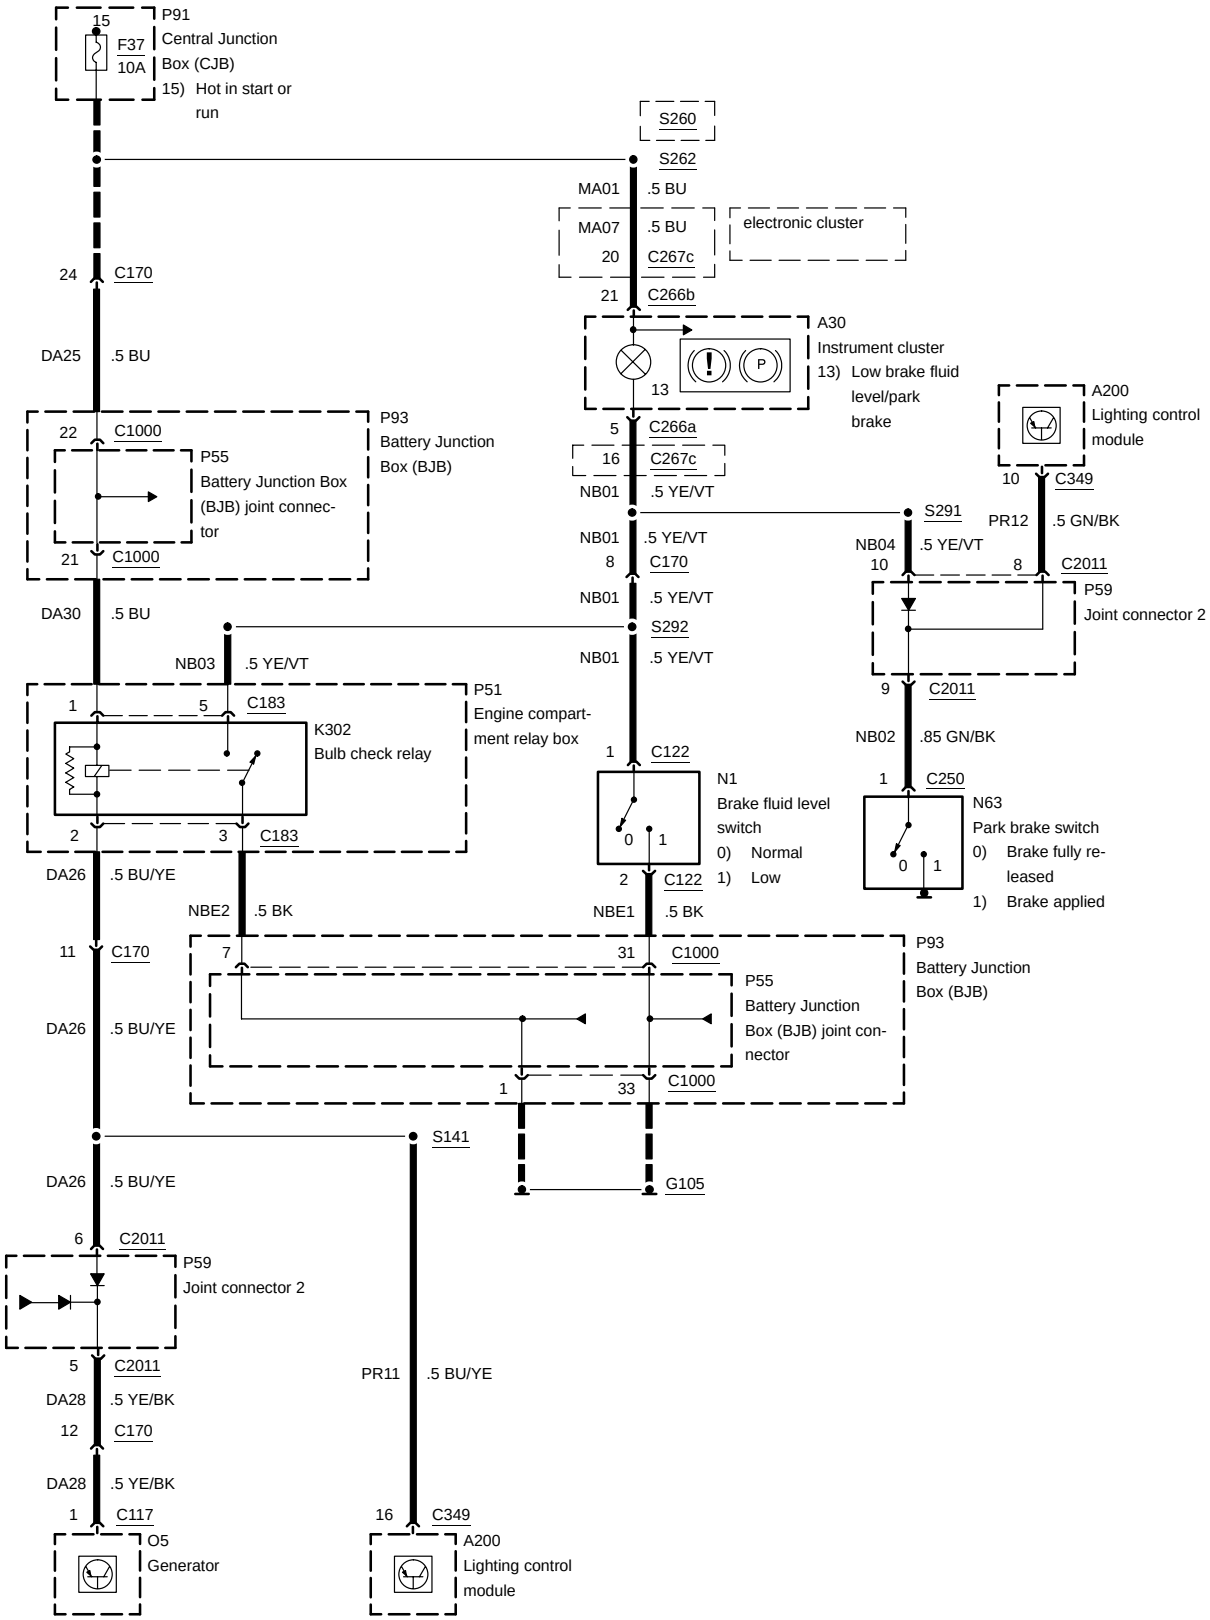
15
P91
Central Junction
Box (CJB)
F37
10A
15) Hot in start or run
S260
S262
MA01 .5 BU
MA07 .5 BU
20 C267c
electronic cluster
24 C170
21 C266b
DA25 .5 BU
A30
Instrument cluster
13) Low brake fluid level/park brake
13
5 C266a
16 C267c
NB01 .5 YE/VT
A200
Lighting control module
10 C349
22 C1000
P93
Battery Junction Box (BJB)
P55
Battery Junction Box (BJB) joint connector
21 C1000
S291
PR12 .5 GN/BK
NB01 .5 YE/VT
8 C170
NB04 .5 YE/VT
10
8 C2011
P59
Joint connector 2
DA30 .5 BU
NB01 .5 YE/VT
S292
NB03 .5 YE/VT
NB01 .5 YE/VT
9 C2011
1
5 C183
K302
Bulb check relay
P51
Engine compartment relay box
1 C122
N1
Brake fluid level switch
0) Normal
1) Low
NB02 .85 GN/BK
1 C250
N63
Park brake switch
0) Brake fully released
1) Brake applied
2
3 C183
DA26 .5 BU/YE
2 C122
NBE2 .5 BK
NBE1 .5 BK
11 C170
7
31 C1000
P93
Battery Junction Box (BJB)
P55
Battery Junction Box (BJB) joint connector
DA26 .5 BU/YE
1
33 C1000
S141
G105
DA26 .5 BU/YE
6 C2011
P59
Joint connector 2
5 C2011
PR11 .5 BU/YE
DA28 .5 YE/BK
12 C170
DA28 .5 YE/BK
1 C117
16 C349
O5
Generator
A200
Lighting control module