C115

12B637

Coil On Plug (COP)
5 (12029)

F02109

Pin	Circuit	Circuit function
1	91S-RR9 (BN/YE)	Ground, Switched
2	15-RR9 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)

C116

12B637

Coil On Plug (COP)
6 (12029)

F02109

Pin	Circuit	Circuit function
1	91S-RR10 (BN/WH)	Ground, Switched
2	15-RR10 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)

C117

12B637

Coil On Plug (COP)
7 (12029)

F02109

Pin	Circuit	Circuit function
1	91S-RR11 (BN)	Ground, Switched
2	15-RR11 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)

C118

12B637

Coil On Plug (COP)
8 (12029)

F02109

Pin	Circuit	Circuit function
1	91S-RR12 (BN/RD)	Ground, Switched
2	15-RR12 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)

C120

12B637

Power steering valve solenoid
(3783)

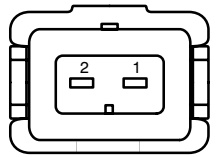

F02089

Pin	Circuit	Circuit function
1	9-CE9 (BN/GN)	Sensor signal return (reference/ground)
2	8-CE9 (WH/GN)	Sensor signal

C121

12B637

Power steering pressure switch

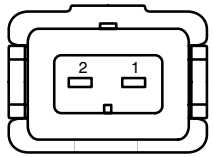

F02089

Pin	Circuit	Circuit function
1	9-CE6 (BN)	Sensor signal return (reference/ground)
2	8-CE6 (WH)	Sensor signal