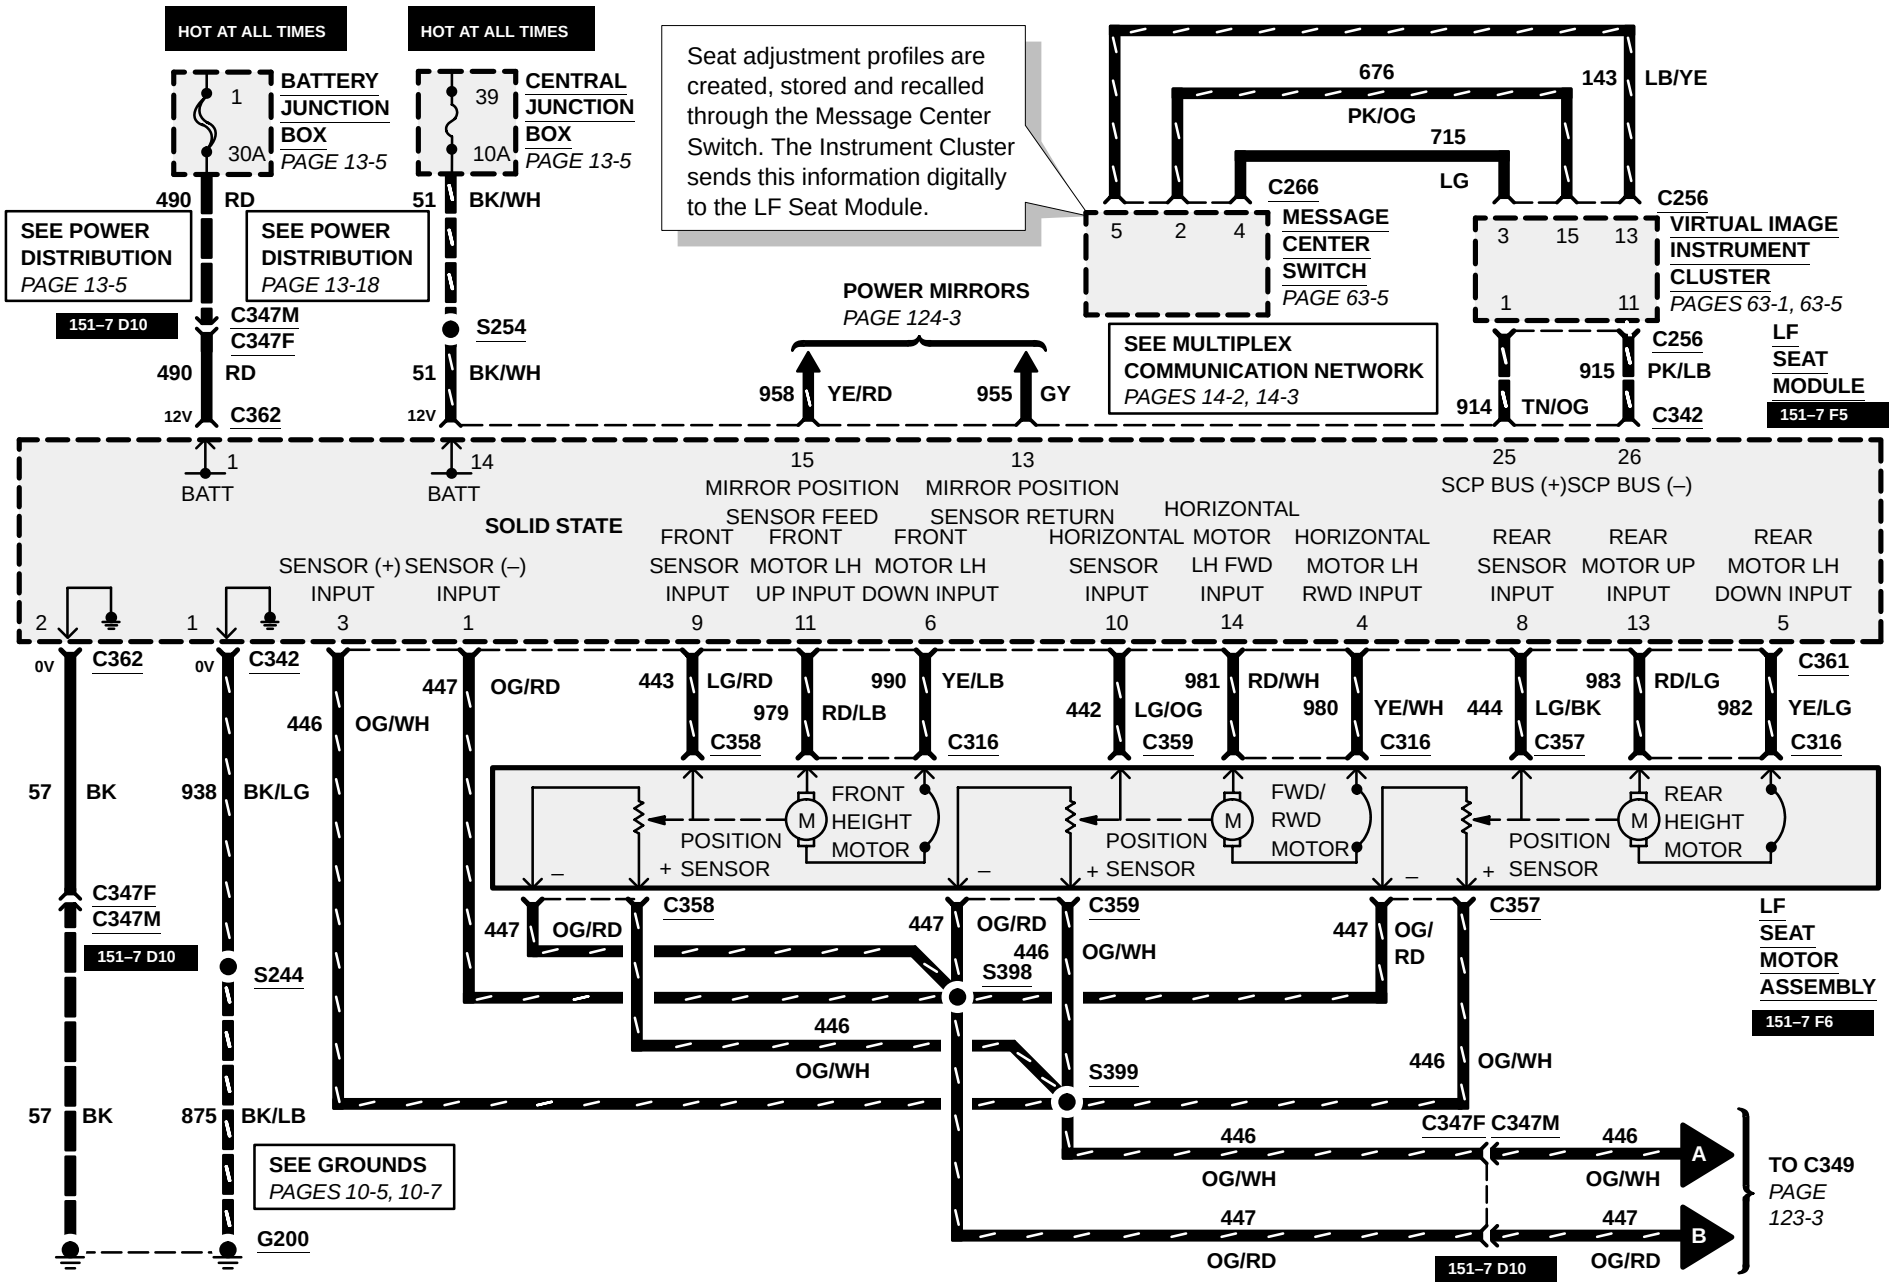
HOT AT ALL TIMES
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-5
CENTRAL JUNCTION BOX
PAGE 13-5
1
30A
39
10A
490 RD
51 BK/WH
SEE POWER DISTRIBUTION
PAGE 13-5
SEE POWER DISTRIBUTION
PAGE 13-18
151–7 D10
C347M
C347F
490 RD
51 BK/WH
S254
12V
C362
12V
BATT
1
BATT
14
Seat adjustment profiles are created, stored and recalled through the Message Center Switch. The Instrument Cluster sends this information digitally to the LF Seat Module.
676
143
LB/YE
PK/OG
715
LG
C266
MESSAGE CENTER SWITCH
PAGE 63-5
5 2 4
C256
VIRTUAL IMAGE INSTRUMENT CLUSTER
PAGES 63-1, 63-5
3 15 13
1 11
POWER MIRRORS
PAGE 124-3
958 YE/RD
955 GY
SEE MULTIPLEX COMMUNICATION NETWORK
PAGES 14-2, 14-3
914 TN/OG
915 PK/LB
C256
C342
LF SEAT MODULE
151–7 F5
SOLID STATE
15
MIRROR POSITION SENSOR FEED
13
MIRROR POSITION SENSOR RETURN
25
SCP BUS (+)
26
SCP BUS (–)
SENSOR (+) INPUT
SENSOR (–) INPUT
FRONT SENSOR INPUT
FRONT MOTOR LH UP INPUT
FRONT MOTOR LH DOWN INPUT
HORIZONTAL SENSOR INPUT
HORIZONTAL MOTOR LH FWD INPUT
HORIZONTAL MOTOR LH RWD INPUT
REAR SENSOR INPUT
REAR MOTOR UP INPUT
REAR MOTOR LH DOWN INPUT
2
1
3
1
9
11
6
10
14
4
8
13
5
0V
C362
0V
C342
447 OG/RD
446 OG/WH
443 LG/RD
979
C358
990 RD/LB
YE/LB
C316
442 LG/OG
981
C359
RD/WH
980
YE/WH
C316
444 LG/BK
983
C357
RD/LG
982
YE/LG
C316
C361
57 BK
938 BK/LG
POSITION + SENSOR –
FRONT HEIGHT MOTOR
POSITION + SENSOR –
FWD/ RWD MOTOR
POSITION + SENSOR –
REAR HEIGHT MOTOR
C347F
C347M
151–7 D10
S244
447 OG/RD
C358
447 OG/RD
446 OG/WH
S398
C359
447 OG/ RD
C357
LF SEAT MOTOR ASSEMBLY
151–7 F6
446 OG/WH
446 OG/WH
S399
57 BK
875 BK/LB
SEE GROUNDS
PAGES 10-5, 10-7
G200
C347F C347M
446 OG/WH
446 OG/WH
A
447 OG/RD
447 OG/RD
B
151–7 D10
TO C349
PAGE 123-3