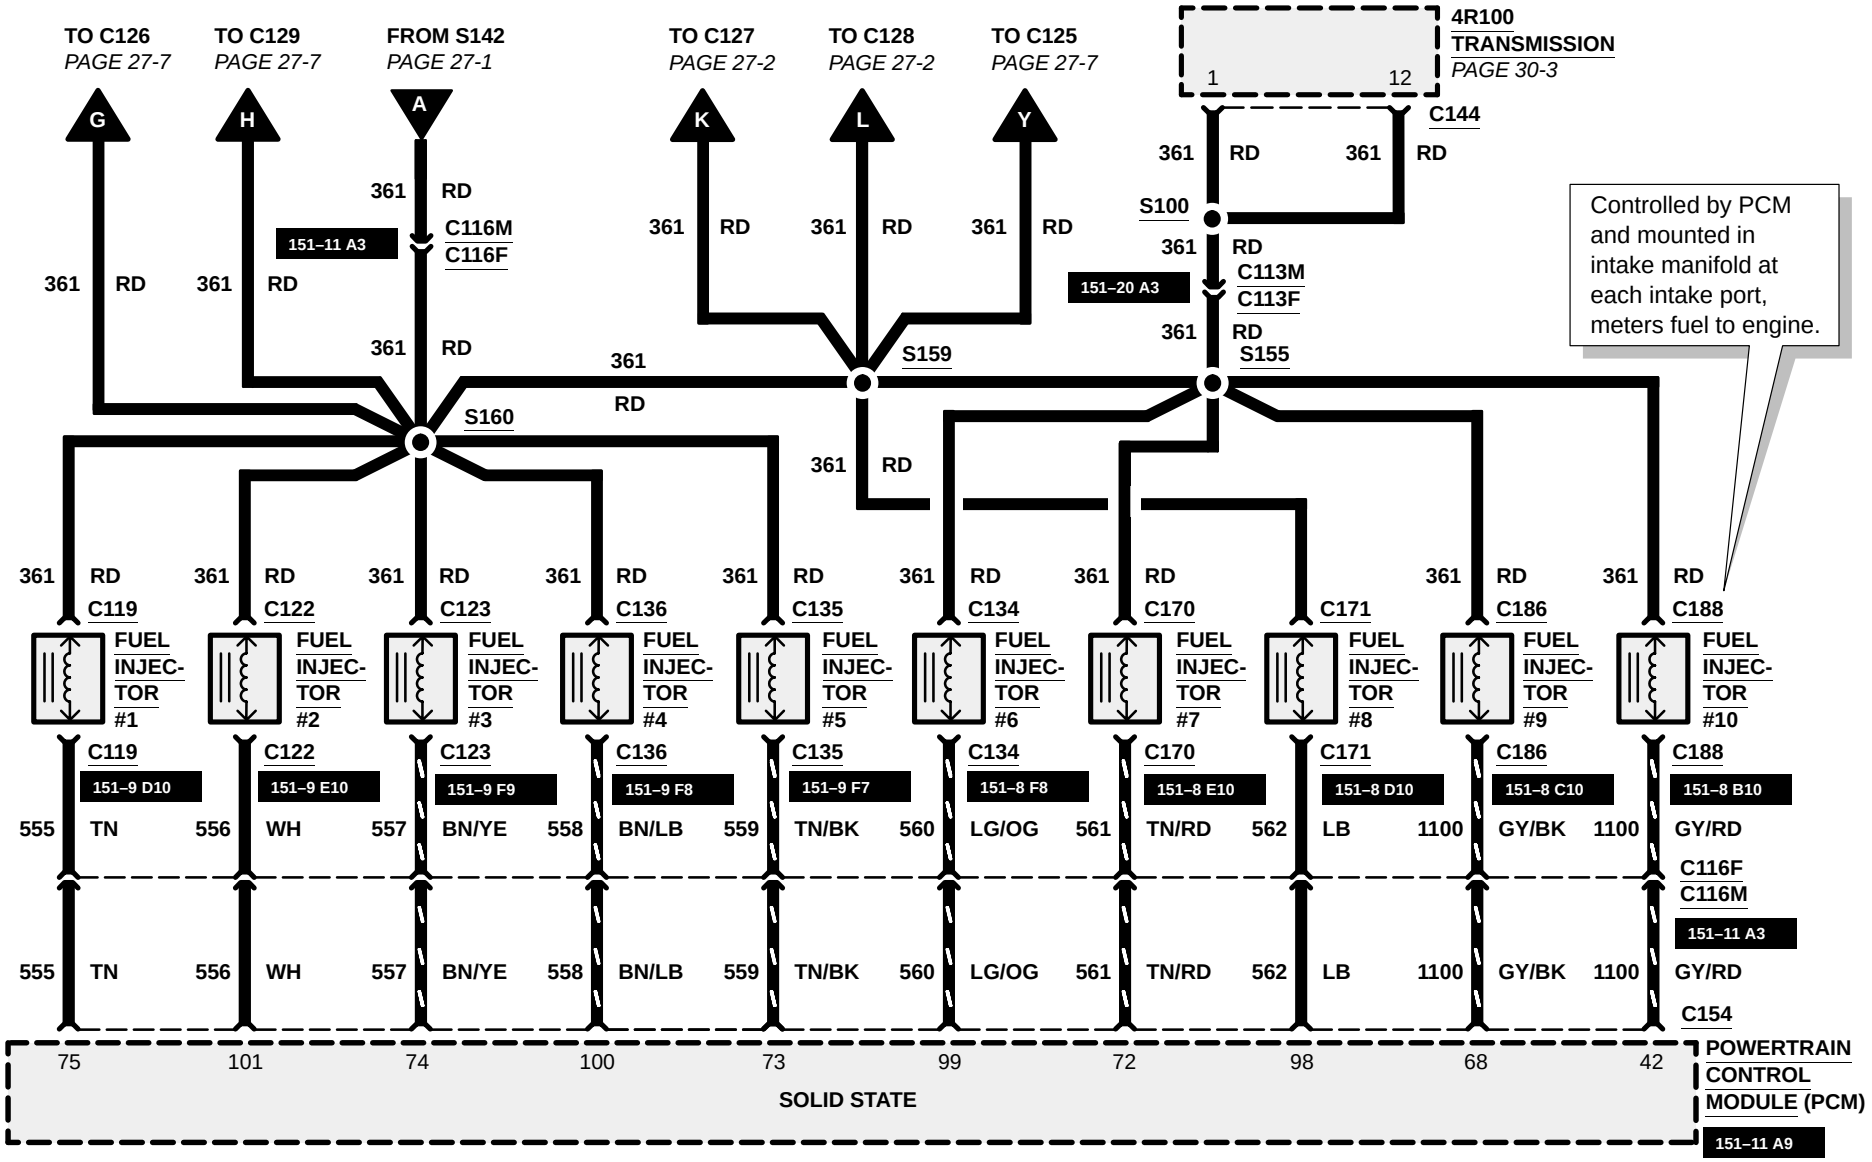
TO C126
PAGE 27-7
TO C129
PAGE 27-7
FROM S142
PAGE 27-1
TO C127
PAGE 27-2
TO C128
PAGE 27-2
TO C125
PAGE 27-7
4R100
TRANSMISSION
PAGE 30-3
1
12
C144
G
H
A
K
L
Y
361 RD
151–11 A3
C116M
C116F
151–20 A3
C113M
C113F
S100
S155
S159
S160
Controlled by PCM and mounted in intake manifold at each intake port, meters fuel to engine.
C119
C122
C123
C136
C135
C134
C170
C171
C186
C188
FUEL INJEC-TOR #1
FUEL INJEC-TOR #2
FUEL INJEC-TOR #3
FUEL INJEC-TOR #4
FUEL INJEC-TOR #5
FUEL INJEC-TOR #6
FUEL INJEC-TOR #7
FUEL INJEC-TOR #8
FUEL INJEC-TOR #9
FUEL INJEC-TOR #10
151–9 D10
151–9 E10
151–9 F9
151–9 F8
151–9 F7
151–8 F8
151–8 E10
151–8 D10
151–8 C10
151–8 B10
555 TN
556 WH
557 BN/YE
558 BN/LB
559 TN/BK
560 LG/OG
561 TN/RD
562 LB
1100 GY/BK
1100 GY/RD
C116F
C116M
151–11 A3
C154
75
101
74
100
73
99
72
98
68
42
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9