## VEHICLE REPAIR LOCATION CODES

**TO PINPOINT THE ACTUAL VEHICLE LOCATION OF A REPAIR, THE VEHICLE REPAIR LOCATION CODE IS REQUIRED.**

**FOR EXAMPLE, AN "X" HAS BEEN PLACED IN THE QUADRANT OF THE VEHICLE DIAGRAMS INDICATING THE LOCATION OF THE REPAIR. SEE DIAGRAMS.**

**LOCATION CODE, FOR THE EXAMPLE: B5/FU – (UNDER THE FLOOR AND BETWEEN THE DRIVER'S FEET.)**

**FRONT/REAR DIRECTION**

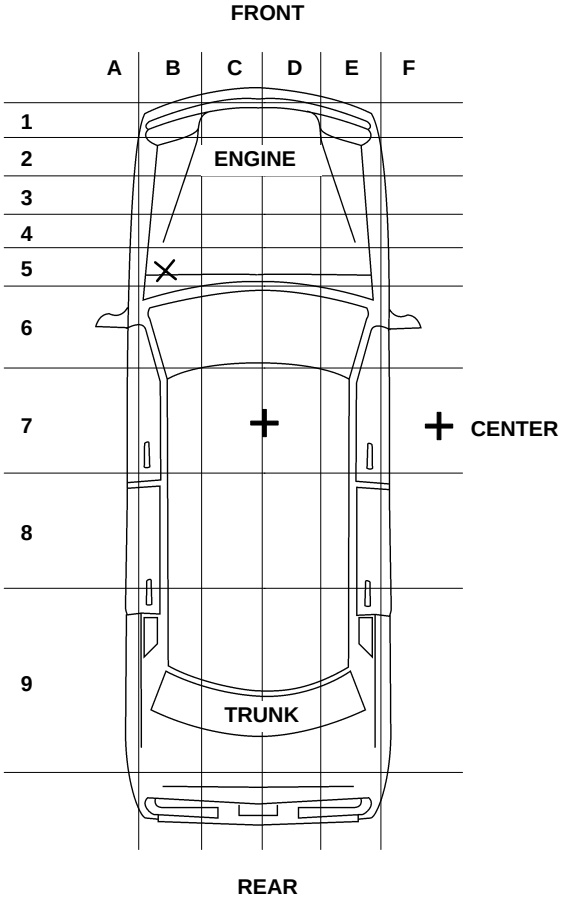


**OVER/UNDER DIRECTION**

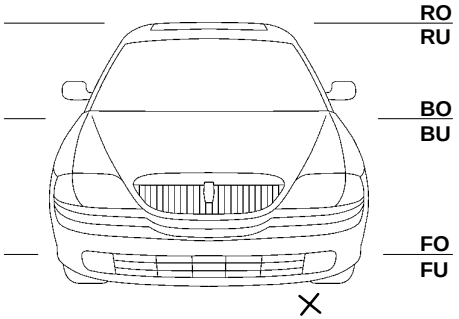


**R = ROOF LINE**
- **RO = ROOF OVER**
- **RU = ROOF UNDER**

**B = BELT LINE**
- **BO = BELT OVER**
- **BU = BELT UNDER**

**F = FLOOR PLAN**
- **FO = FLOOR OVER**
- **FU = FLOOR UNDER**

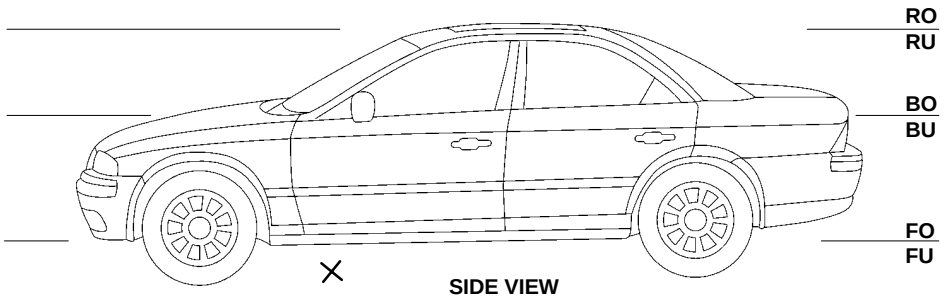


**SIDE VIEW**

**LINCOLN LS**
FCS-12885-02