C176

14A594

P81
Non–Speed control jumper

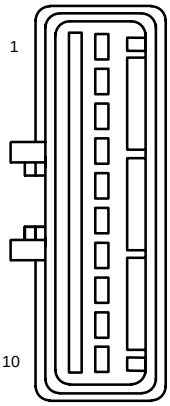

F10011

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	–	not used
6	848 (DG/OG)	Ground
7	–	not used
8	–	not used
9	–	not used
10	57 (BK)	Ground

C177

14290

B229
Forward crash sensor

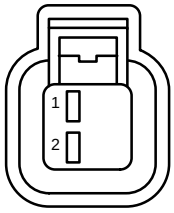

F02069

Pin	Circuit	Circuit Function
1	618 (VT/LG)	Air bag crash sensor #1, monitor
2	617 (PK/OG)	Air bag crash sensor #1, feed

C180

12B637

B41
Camshaft position sensor

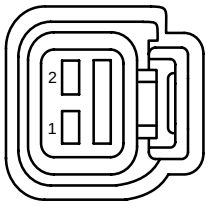

F02109

Pin	Circuit	Circuit Function
1	359 (GY/RD)	signal, return
2	282 (DB/OG)	Camshaft position sensor, input

C181

12B637

Y108
Injector 1

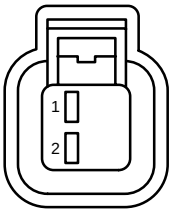

F02069

Pin	Circuit	Circuit Function
1	555 (TN)	Fuel injector 1, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C182

12B637

Y109
Injector 2

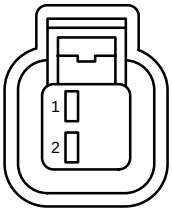

F02069

Pin	Circuit	Circuit Function
1	556 (WH)	Fuel injector 2, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C183

12B637

Y110
Injector 3

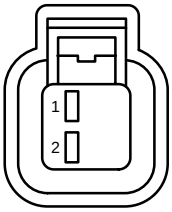

F02069

Pin	Circuit	Circuit Function
1	557 (BN/YE)	Fuel injector 3, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C184

12B637

Y111
Injector 4

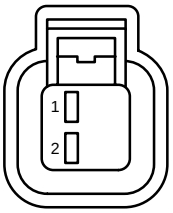

F02069

Pin	Circuit	Circuit Function
1	558 (BN/LB)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)