Note

All wiring connections between components are shown exactly as they exist in the vehicles. It is important to realize, however, that no attempt has been made on the schematic to represent components and wiring as they physically appear on the vehicle. For example, a 4-foot length of wire is treated no differently in a schematic from one which is only a few inches long. Furthermore, to aid in understanding electrical (electronic) operation, wiring inside complicated components has been simplified.

Complete Circuit Operation

Each circuit is shown completely and independently in one chapter or “section”. Other components which are connected to the circuit may not be shown unless they influence the circuit operation.

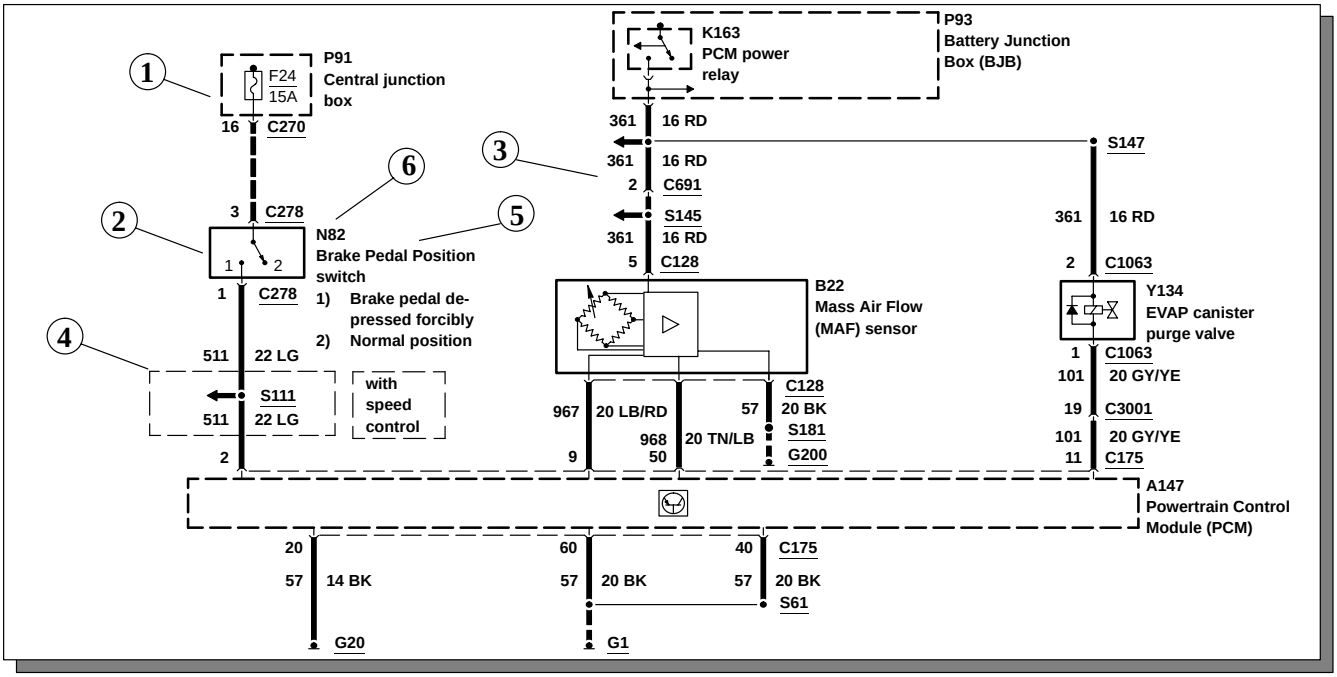

Current Flow (1)

Each section normally starts with the component that powers the circuit such as a fuse or the ignition switch. Current flow is shown from the power source at the top of the page to ground at the bottom of the page. In order to concentrate on the essential parts, power supply and ground connections are sometimes simplified by a dashed line in the schematics. A full representation of the power supply of a fuse or the power distribution from a fuse to various components is given in sections 700-02-00 “Power Distribution” and 700-03-00 “Fuse Details”, respectively. Full representation of the ground connections are shown in section 700-04-00 “Ground Distribution”.

Switch Positions (2)

Within the schematic, all switches, sensors and relays are shown “at rest” (as if the Ignition Switch were OFF).

Splices (3)

An arrow indicates that the splice is not shown completely. The page where the splice appears in full is listed in the Index. If the splice is not shown completely in the schematic but is complete within the section, the number of the page where the splice is completed is indicated next to the arrow.

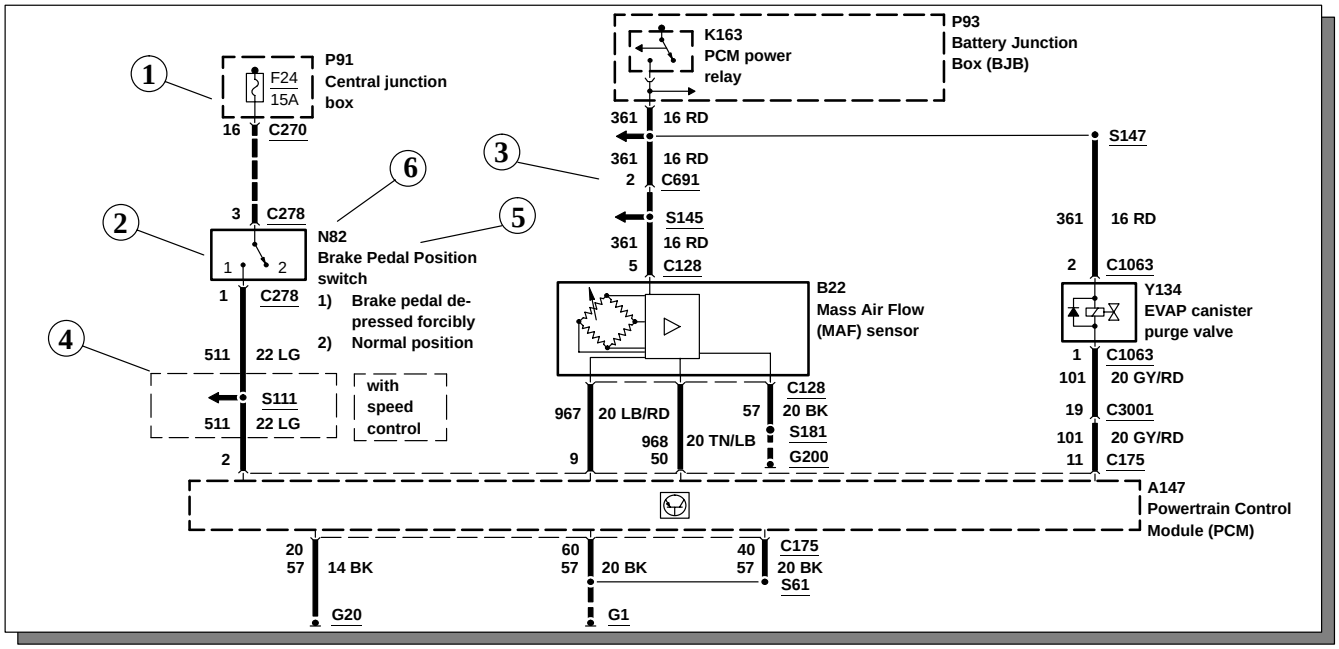

Boxes (4)

A thin dashed box on a schematic indicates a part of the circuit which is only present for a particular vehicle model, country, or option. These qualifiers are shown next to the box on the schematic.

Component Names and Notes (5)

Component names are placed on the right hand side of each component. Any notes that describe switch positions or operating conditions follow the name. Descriptions of the internals of the component are also included here. The page where the component appears in full is listed in the Index.

Component Identification Numbers (6)

Each component on each schematic has a component identification number located to the upper right hand side of the component. By finding this number in the Component Location Chart, the Component Location View for that component can easily be found.

Fuse and Relay Information

Section 700-01-00 “Fuse/Relay Information” contains a view of the fuse-/relay box in which all fuses and relays are identified.

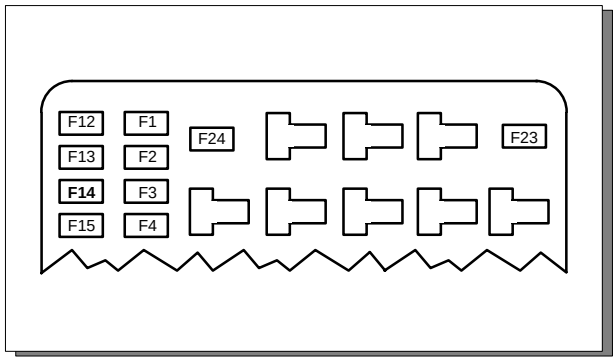

Power Distribution

Section 700-02-00 “Power Distribution” shows the current feed circuit. The current path is shown from the battery to the ignition switch and to all fuses.

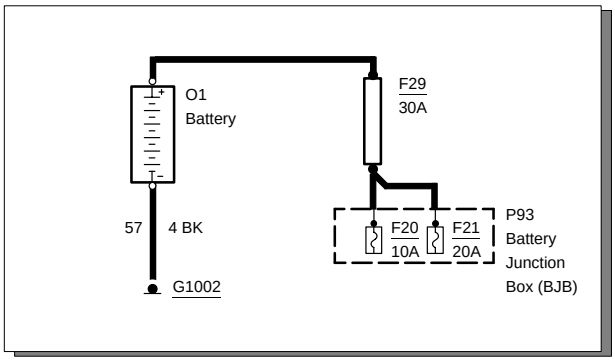

Fuse Details

Section 700-03-00 “Fuse Details” shows the circuits protected by each fuse. The circuit is traced from the fuse to the component. All details (wires, splices, connectors) between the fuse and the first component are shown.

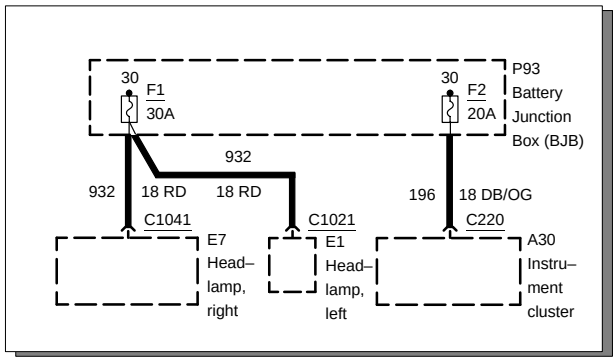

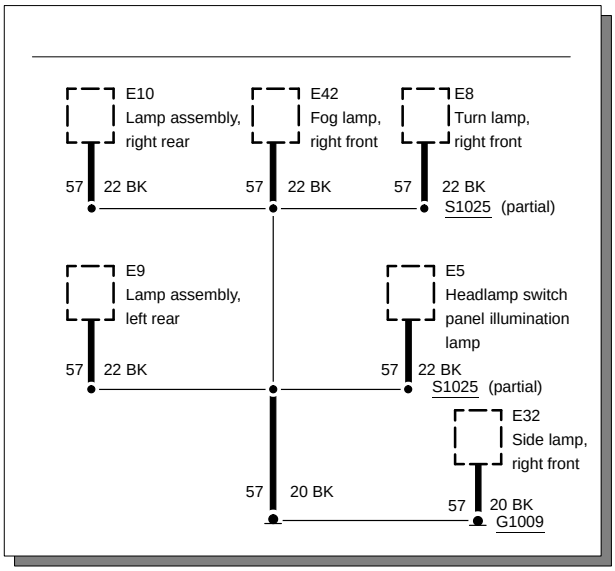

Ground Distribution

Section 700-04-00 “Ground Distribution” contains the schematics that show the complete details for each ground connection or main ground splice. This is useful in diagnosing a problem affecting several components at once (poor ground connection or ground splice). All details (wires, splices, connectors) between the ground point and the components are shown. These ground connection details are shown here in order to keep the individual cell schematics as uncluttered as possible.

Splices with a large number of wires may be split in order to improve the graphic representation. A thin line is used to indicate the unity of the splice. The splice is then marked with the additional text “partial”.

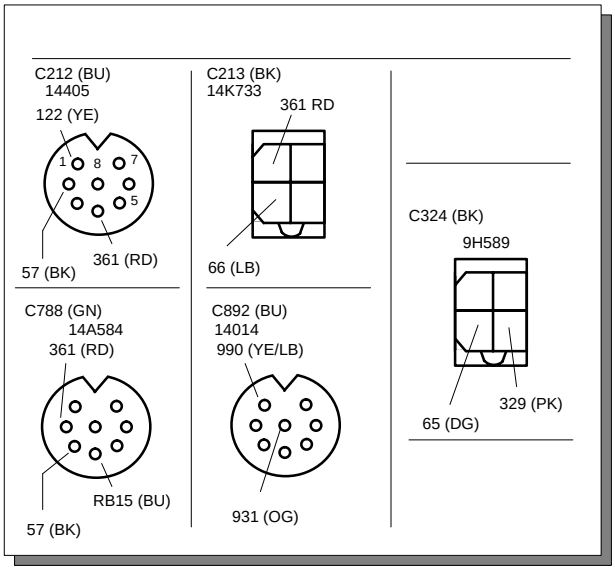

Component Identification Information

Component Identification Information begins in section 700-05-00 and consists of
(1) Component Location Chart (List), 700-05-00
(2) Component Location Views, and 700-06-00
(3) Connector Views (Faces) 700-07-00.
The **Component Location Chart** helps the user find where the various items depicted on the schematic can physically be found on the vehicle. A brief written description of the location is given, along with a reference to the component location views.
The **Component Location Views** show the components and their connecting wires as they can be found on the vehicle.
The **Connector Views** show the views of the pins and/or cavities of all connectors. The pin and cavity sides are shown separately as if the connector were disconnected. The color of the connector housing is indicated next to the connector number. The harness causal number is located above the connector view and below the connector number. The wiring harness designations are listed in section 700-05-00 “Component Location Charts”.

WARNINGS

- *Always wear safety glasses for eye protection.*
- *Use safety stands whenever a procedure requires being under a vehicle.*
- *Be sure that the* **Ignition Switch** *is always in the OFF position, unless otherwise required by the procedure.*
- *Set the parking brake when working on any vehicle. An automatic transmission should be in PARK. A manual transmission should be in NEUTRAL.*
- *Operate the engine only in a well-ventilated area to avoid danger of carbon monoxide.*
- *Keep away from moving parts, especially the fan and belts, when the engine is running.*
- *To prevent serious burns, avoid contact with hot metal parts such as the radiator, exhaust manifold, tail pipe, catalytic converter and muffler.*
- *Do not allow flame or sparks near the battery. Gases are always present in and around the battery cell. An explosion could occur.*
- *Do not smoke when working on a vehicle.*
- *To avoid injury, always remove rings, watches, loose hanging jewelry and avoid wearing loose clothing.*

-6