MANUAL TRANSMISSION

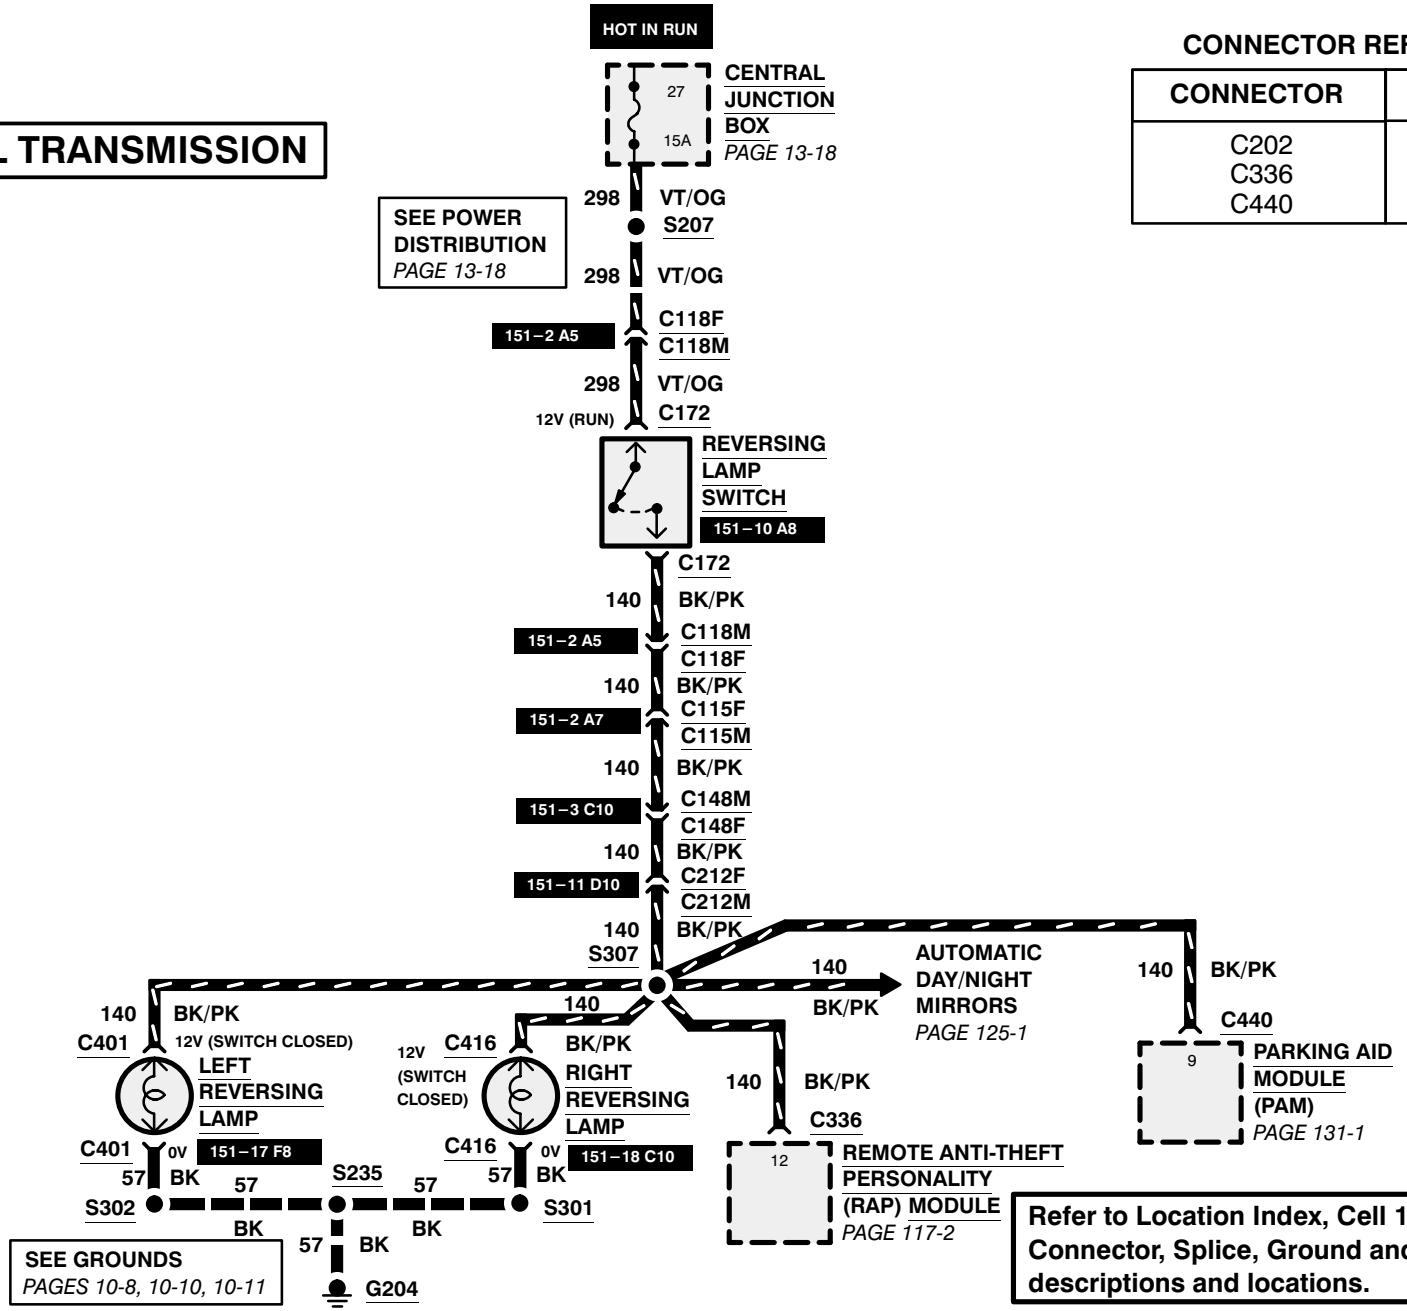

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C202	23-8, 24-9, 25-8
C336	117-4
C440	131-2

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.