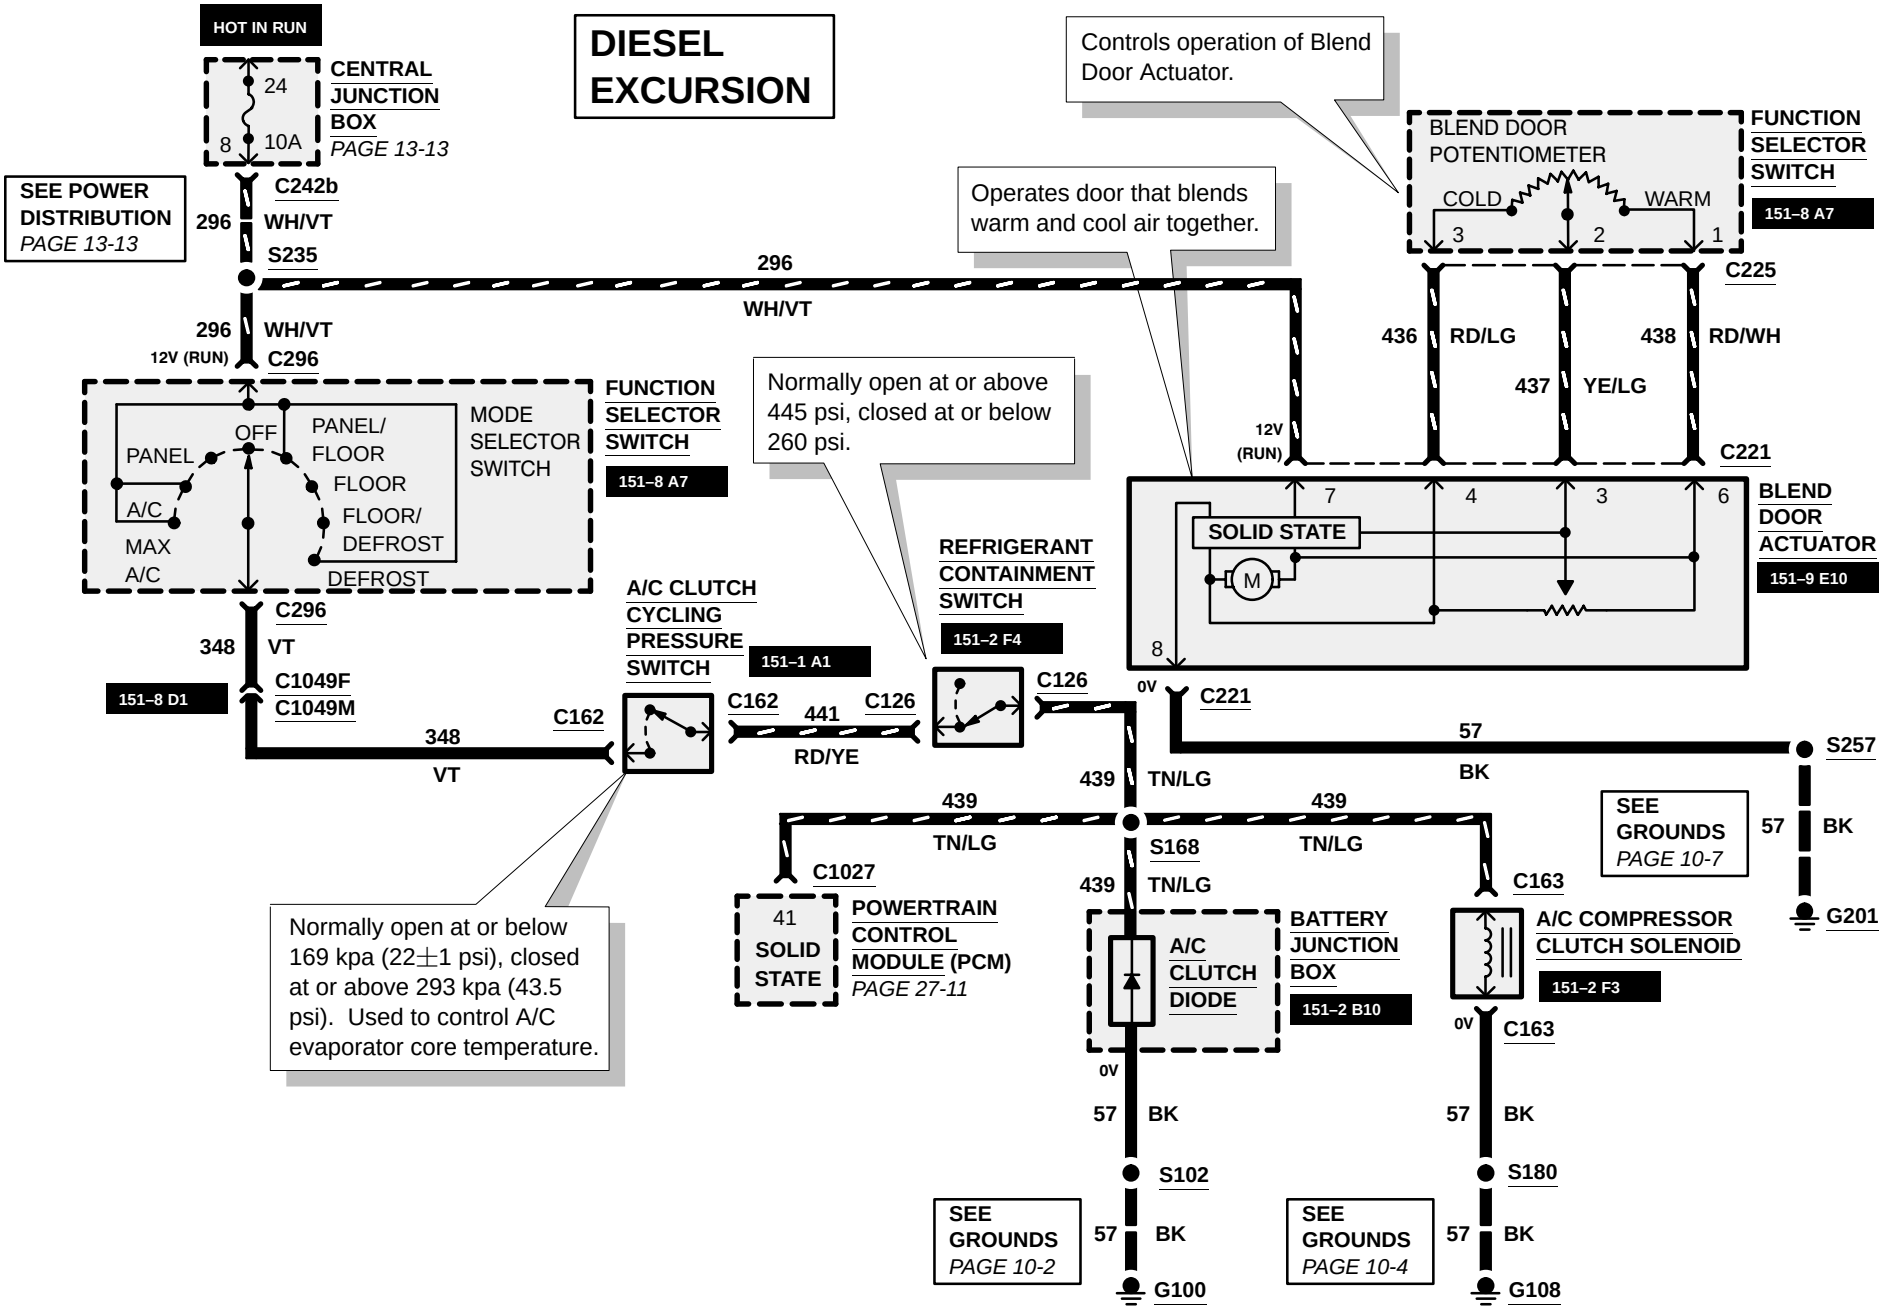
DIESEL
EXCURSION
HOT IN RUN
CENTRAL JUNCTION BOX
PAGE 13-13
24
8
10A
SEE POWER DISTRIBUTION
PAGE 13-13
C242b
296 WH/VT
S235
296 WH/VT
12V (RUN)
C296
FUNCTION SELECTOR SWITCH
151–8 A7
MODE SELECTOR SWITCH
OFF
PANEL
PANEL/ FLOOR
FLOOR
FLOOR/ DEFROST
DEFROST
A/C
MAX A/C
C296
348 VT
C1049F
C1049M
151–8 D1
348 VT
C162
A/C CLUTCH CYCLING PRESSURE SWITCH
151–1 A1
C162
441 RD/YE
C126
REFRIGERANT CONTAINMENT SWITCH
151–2 F4
C126
0V
C221
Controls operation of Blend Door Actuator.
BLEND DOOR POTENTIOMETER
COLD
WARM
3
2
1
FUNCTION SELECTOR SWITCH
151–8 A7
Operates door that blends warm and cool air together.
296 WH/VT
C225
436 RD/LG
437 YE/LG
438 RD/WH
12V (RUN)
C221
Normally open at or above 445 psi, closed at or below 260 psi.
SOLID STATE
M
7
4
3
6
8
BLEND DOOR ACTUATOR
151–9 E10
57 BK
S257
G201
SEE GROUNDS
PAGE 10-7
439 TN/LG
439 TN/LG
439 TN/LG
S168
C1027
41
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGE 27-11
439 TN/LG
A/C CLUTCH DIODE
BATTERY JUNCTION BOX
151–2 B10
C163
A/C COMPRESSOR CLUTCH SOLENOID
151–2 F3
0V
C163
Normally open at or below 169 kpa (22±1 psi), closed at or above 293 kpa (43.5 psi). Used to control A/C evaporator core temperature.
0V
57 BK
S102
57 BK
G100
SEE GROUNDS
PAGE 10-2
57 BK
S180
57 BK
G108
SEE GROUNDS
PAGE 10-4