C222

14401

Steering column position sensor

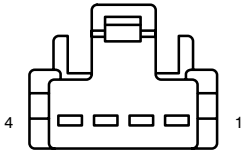

F04145

Pin	Circuit	Circuit function
1	8-AL16 (WH/BK)	Steering column position sensor
2	7-AL17 (YE/VT)	Steering column position sensor, Reference voltage
3	8-AL17 (WH/VT)	Steering column position sensor, Tilt
4	9-AL17 (BN/WH)	Signal return