C441 (GY)

14401

N104
Wiper/washer
switch

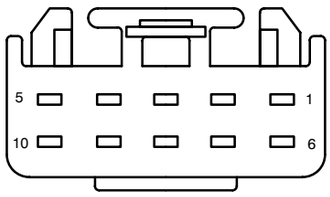

F10042

Pin	Circuit	Circuit Function
1	8-KA18 (WH)	Sensor signal
2	32-KA6 (WH/BK)	Switched between: Battery voltage, Ground or Open
	32-KA6 (WH/BK) +	Switched between: Battery voltage, Ground or Open
	32-KA34 (WH/BK)	Switched between: Battery voltage, Ground or Open
	32-KA6 (WH/BK) +	Switched between: Battery voltage, Ground or Open
	32-KA34 (WH/BK)	Switched between: Battery voltage, Ground or Open
3	31-KA19 (BK)	Ground
4	33-KA6 (YE/BK)	Switched between: Battery voltage, Ground or Open
	33-KA6 (YE/BK) +	Switched between: Battery voltage, Ground or Open
	33-KA34 (YE/BK)	Switched between: Battery voltage, Ground or Open
	33-KA6 (YE/BK) +	Switched between: Battery voltage, Ground or Open
	33-KA34 (YE/BK)	Switched between: Battery voltage, Ground or Open
5	32-KA35 (WH/RD)	Switched between: Battery voltage, Ground or Open
6	15-KA19 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
7	32-KA19 (WH/BK)	Switched between: Battery voltage, Ground or Open
	32-KA19A (WH/BK)	Switched between: Battery voltage, Ground or Open

Pin	Circuit	Circuit Function
8	32-KA11 (WH/BK)	Switched between: Battery voltage, Ground or Open
	32-KA11 (WH/BK) +	Switched between: Battery voltage, Ground or Open
	32-KA11A (WH/BK)	Switched between: Battery voltage, Ground or Open
9	32-KA10 (WH/GN)	Switched between: Battery voltage, Ground or Open
10	8-KA19 (WH/BK)	Sensor signal
	8-KA19 (WH/BK) +	Sensor signal
	8-KA19A (WH/BK)	Sensor signal