C305 (WH)

14A699



F02159

14N104



F02159

C306 (BK)

14N104

N84
Door ajar switch, left front

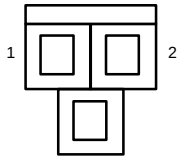

F03133

Pin	Circuit	Circuit function
1	–	not used
2	LI87 (RD)	Door ajar switch, left front
3	LIE1 (BK)	Ground

C307 (WH)

14A333

E220
Sliding door entry lamp, passenger side



F02129

Pin	Circuit	Circuit function
1	LP03 (BN)	Voltage supplied at all times (overload protected)
2	LP93 (BN/WH)	Illuminated entry, Ground

C309 (BK)

14N104

O21
Power point, rear (19G247)



F02163

Pin	Circuit	Circuit function
1	ZA01 (WH/BU)	Voltage in Run or Accessory (overload protected)
2	ZAE1 (BK)	Ground

C311a (BK)

14N104

N431
Sliding door contact switch, left



F04163

Pin	Circuit	Circuit function
1	–	not used
2	PH30 (WH/RD)	Door unlock, output
3	SC26 (VT)	Door unlock, switch sense
4	PH48 (GN/YE)	Door lock, output

C311b (WH)

14A507

N431
Sliding door contact switch, left



F04043

Pin	Circuit	Circuit function
1	PH31 (WH/RD)	Door unlock, output
2	PH46 (GN/YE)	Door lock, output
3	–	not used
4	SC24 (VT)	Door unlock, switch sense