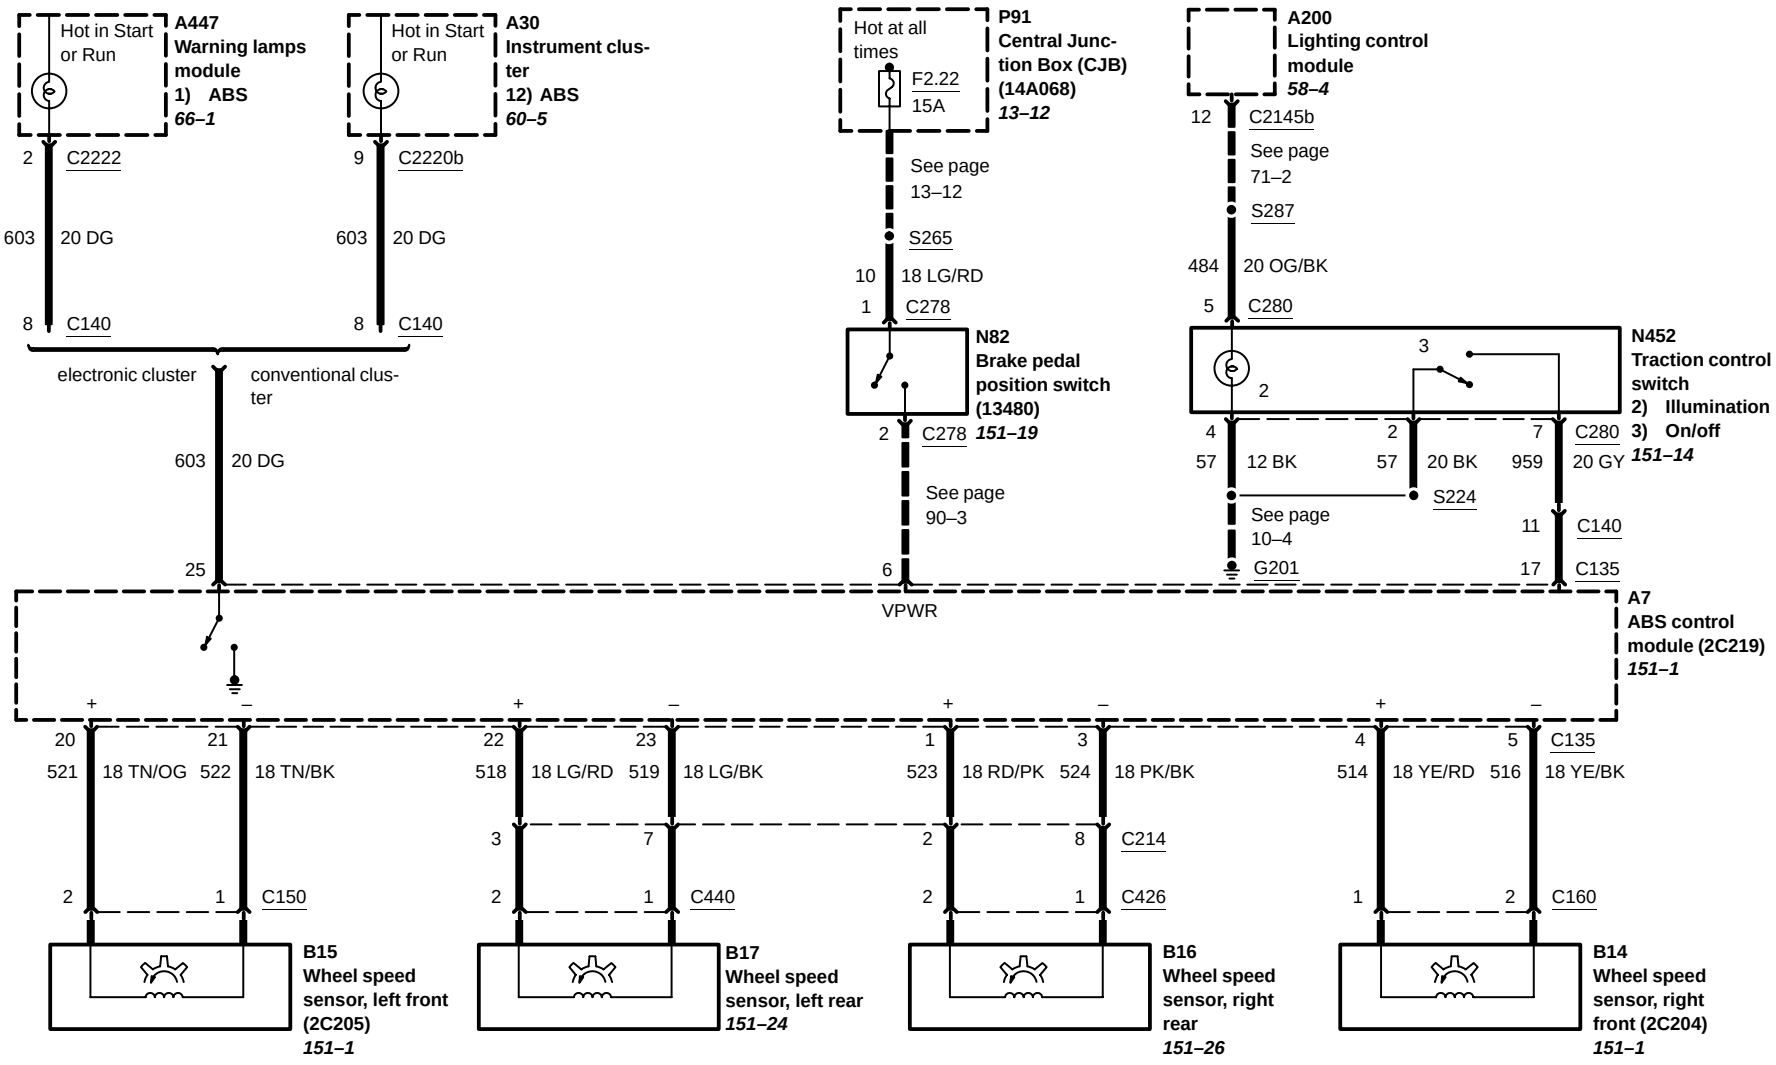
A447
Warning lamps module
1) ABS
66–1
Hot in Start or Run
2
C2222
603
20 DG
8
C140
A30
Instrument cluster
12) ABS
60–5
Hot in Start or Run
9
C2220b
603
20 DG
8
C140
electronic cluster
conventional cluster
603
20 DG
25
P91
Central Junction Box (CJB)
(14A068)
13–12
Hot at all times
F2.22
15A
See page 13–12
S265
10
18 LG/RD
1
C278
N82
Brake pedal position switch
(13480)
2
C278
151–19
See page 90–3
6
VPWR
A200
Lighting control module
58–4
12
C2145b
See page 71–2
S287
484
20 OG/BK
5
C280
N452
Traction control switch
2) Illumination
3) On/off
151–14
4
57
12 BK
2
57
20 BK
7
959
20 GY
C280
S224
See page 10–4
11
C140
G201
17
C135
A7
ABS control module (2C219)
151–1
20
521
18 TN/OG
21
522
18 TN/BK
2
1
C150
B15
Wheel speed sensor, left front
(2C205)
151–1
22
518
18 LG/RD
23
519
18 LG/BK
3
7
2
1
C440
B17
Wheel speed sensor, left rear
151–24
1
523
18 RD/PK
3
524
18 PK/BK
2
8
C214
2
1
C426
B16
Wheel speed sensor, right rear
151–26
4
514
18 YE/RD
5
516
18 YE/BK
C135
1
2
C160
B14
Wheel speed sensor, right front
(2C204)
151–1