C4054c

13412

A294
Tonneau cover control module (14B450)

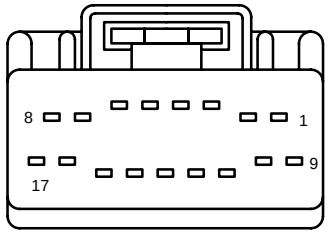

F17006

Pin	Circuit	Circuit function
1	700 (WH/VT)	to, Generic Electronic Module (GEM) (14B205)
2	1628 (WH/RD)	Tonneau cover control module (14B450), top, Up
3	1629 (PK/LG)	Tonneau cover control module (14B450), top, Down
4	1622 (DG/VT)	Tonneau cover latch actuator, left (84442A71)
5	1625 (DB/WH)	Tonneau cover latch actuator, right (84442A70)
6	–	not used
7	70 (LB/WH)	ISO Bus
8	1626 (LG/RD)	Tonneau cover open/close switch, LH side (14529), Tonneau cover open/close switch, RH side (15B691), switch
9	–	not used
10	–	not used
11	1000 (RD/BK)	Voltage supplied in Start (overload protected)
12	1630 (BN/YE)	Cargo door ajar switch
13	–	not used
14	–	not used
15	1351 (TN)	Cargo door ajar switch
16	–	not used
17	1627 (BK/OG)	Safety pinch switch, signal

C4054d

13412

A294
Tonneau cover control module (14B450)

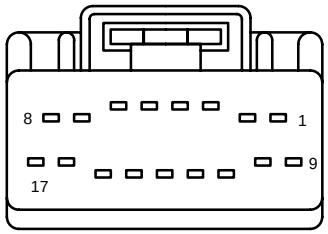

F17006

Pin	Circuit	Circuit function
1	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
2	–	not used
3	1617 (WH/LG)	Tonneau cover control module (14B450), to, Tonneau cover motor assembly, left (84406A13), Sensor
4	–	not used
5	1615 (WH/YE)	Tonneau cover control module (14B450), to, Tonneau cover motor assembly, left (84406A13), Sensor
6	640 (RD/YE)	Voltage in Run or Accessory (overload protected)
7	1609 (LG/YE)	Tonneau cover control module (14B450), to, Tonneau cover motor assembly, left (84406A13)
8	1607 (VT/LG)	Tonneau cover control module (14B450), to, Tonneau cover motor assembly, right (84406A12)
9	–	not used
10	–	not used
11	1618 (WH/BK)	Tonneau cover control module (14B450), to, Tonneau cover motor assembly, left (84406A13), Sensor
12	57 (BK)	Ground
13	1616 (OG/LG)	Tonneau cover control module (14B450), to, Tonneau cover motor assembly, left (84406A13), Sensor
14	–	not used
15	1610 (WH/LB)	Tonneau cover control module (14B450), to, Tonneau cover motor assembly, left (84406A13)
16	1608 (OG/LB)	Tonneau cover control module (14B450), to, Tonneau cover motor assembly, right (84406A12)
17	1619 (DB)	Voltage supplied at all times (overload protected)