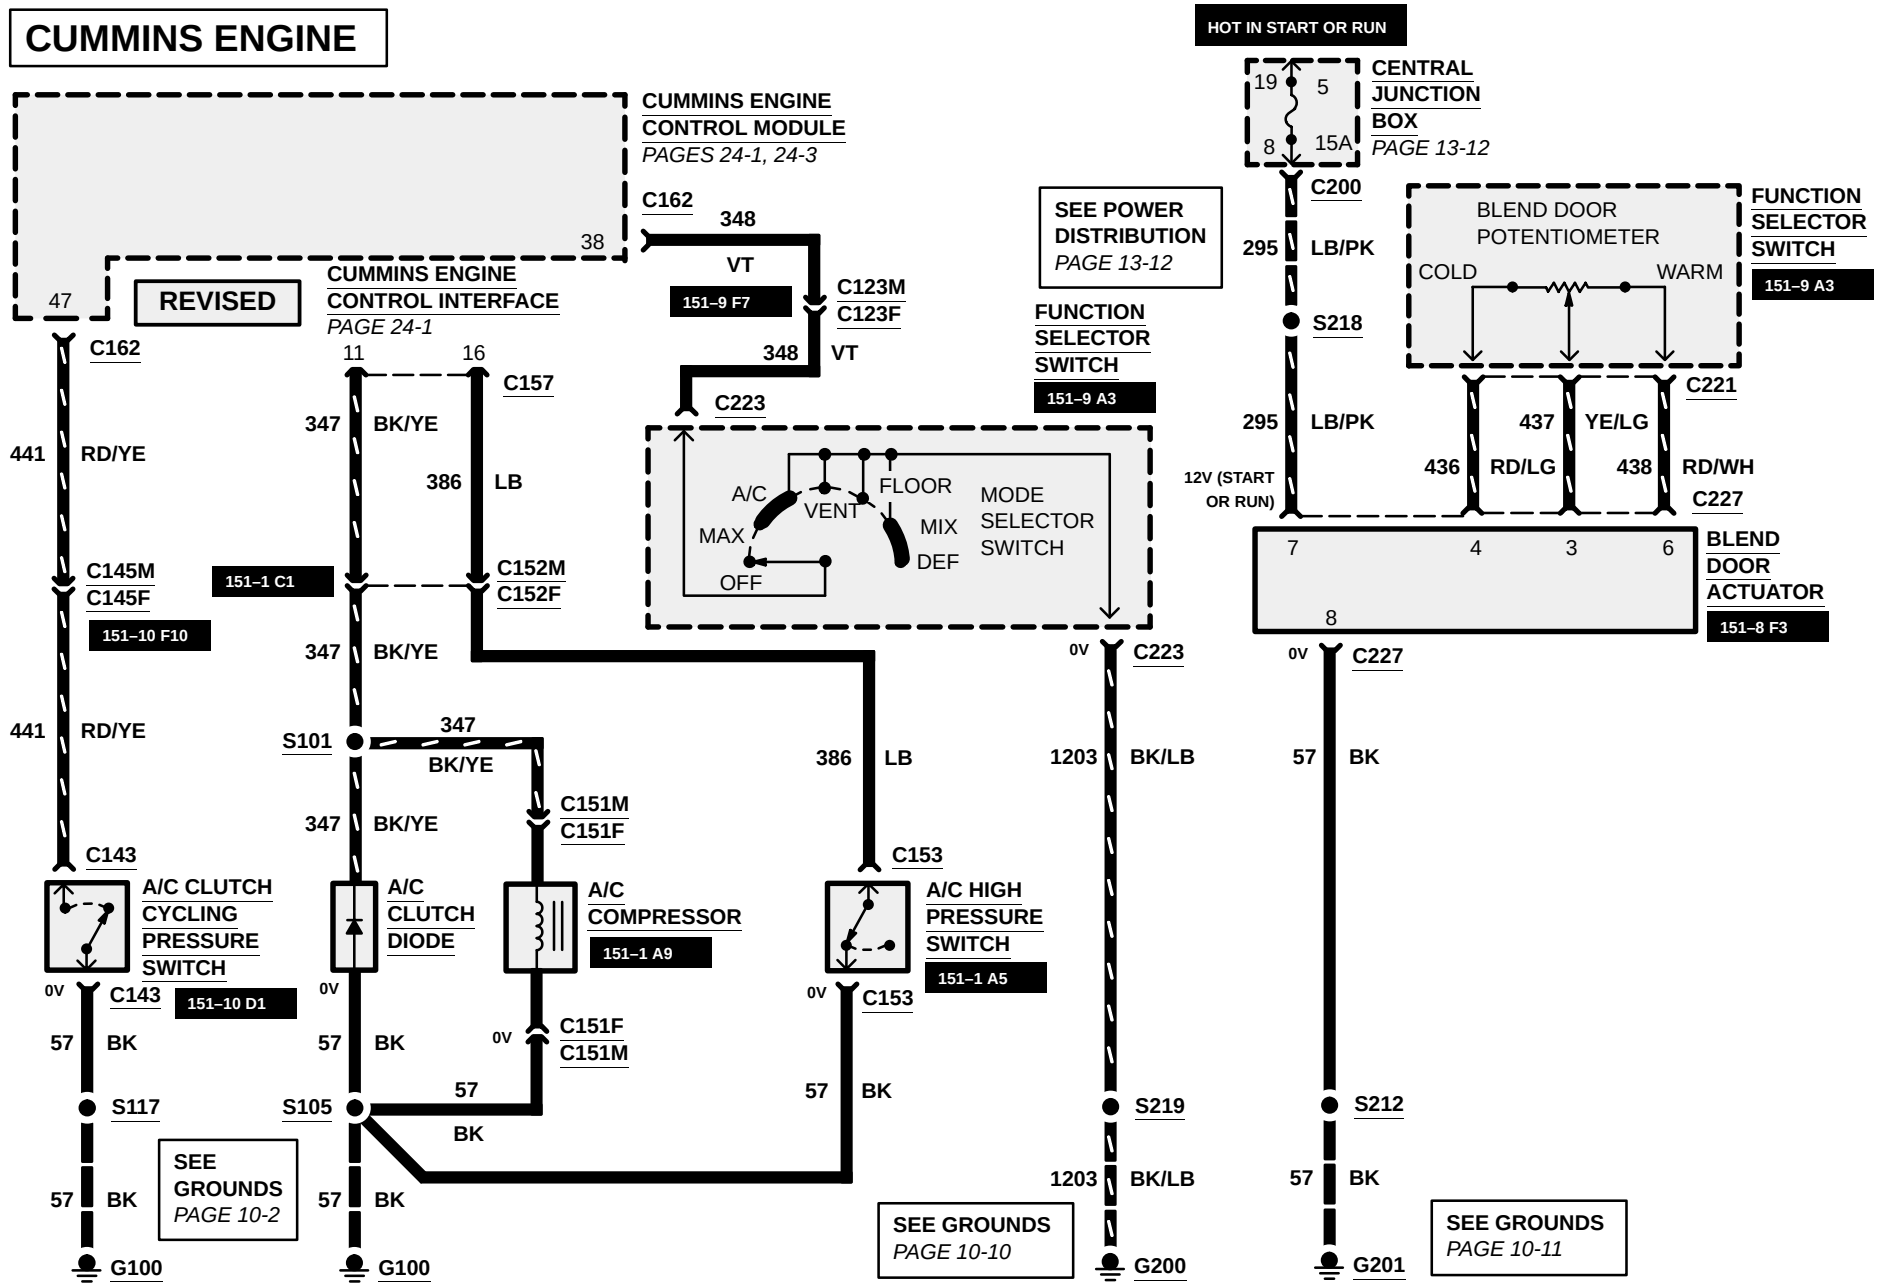
CUMMINS ENGINE
CUMMINS ENGINE CONTROL MODULE
PAGES 24-1, 24-3
38
47
REVISED
CUMMINS ENGINE CONTROL INTERFACE
PAGE 24-1
C162
348
VT
151–9 F7
C123M
C123F
348
VT
C223
SEE POWER DISTRIBUTION
PAGE 13-12
FUNCTION SELECTOR SWITCH
151–9 A3
HOT IN START OR RUN
19
5
8
15A
CENTRAL JUNCTION BOX
PAGE 13-12
C200
295
LB/PK
S218
BLEND DOOR POTENTIOMETER
COLD
WARM
FUNCTION SELECTOR SWITCH
151–9 A3
C221
295
LB/PK
437
YE/LG
436
RD/LG
438
RD/WH
12V (START OR RUN)
C227
7
4
3
6
8
BLEND DOOR ACTUATOR
151–8 F3
C162
441
RD/YE
11
16
C157
347
BK/YE
386
LB
A/C
VENT
FLOOR
MIX
DEF
MAX
OFF
MODE SELECTOR SWITCH
C145M
C145F
151–1 C1
151–10 F10
C152M
C152F
347
BK/YE
0V
C223
0V
C227
441
RD/YE
S101
347
BK/YE
386
LB
1203
BK/LB
57
BK
347
BK/YE
C151M
C151F
C143
C153
A/C CLUTCH CYCLING PRESSURE SWITCH
A/C CLUTCH DIODE
A/C COMPRESSOR
151–1 A9
A/C HIGH PRESSURE SWITCH
151–1 A5
0V
C143
151–10 D1
0V
0V
C153
57
BK
57
BK
0V
C151F
C151M
57
BK
S117
S105
57
BK
S219
S212
57
BK
57
BK
1203
BK/LB
SEE GROUNDS
PAGE 10-2
SEE GROUNDS
PAGE 10-10
SEE GROUNDS
PAGE 10-11
G100
G100
G200
G201