VEHICLE REPAIR LOCATION CODES

TO PINPOINT THE ACTUAL VEHICLE LOCATION OF A REPAIR THE **VEHICLE REPAIR LOCATION CODE** IS REQUIRED.

FOR EXAMPLE, AN "X" HAS BEEN PLACED IN THE QUADRANT OF THE VEHICLE DIAGRAMS INDICATING THE LOCATION OF THE REPAIR. SEE DIAGRAMS.

LOCATION CODE, FOR THE EXAMPLE IS: **A5/FU** — (UNDER THE FLOOR OF DRIVER'S LEFT FOOT.)

FRONT/REAR DIRECTION

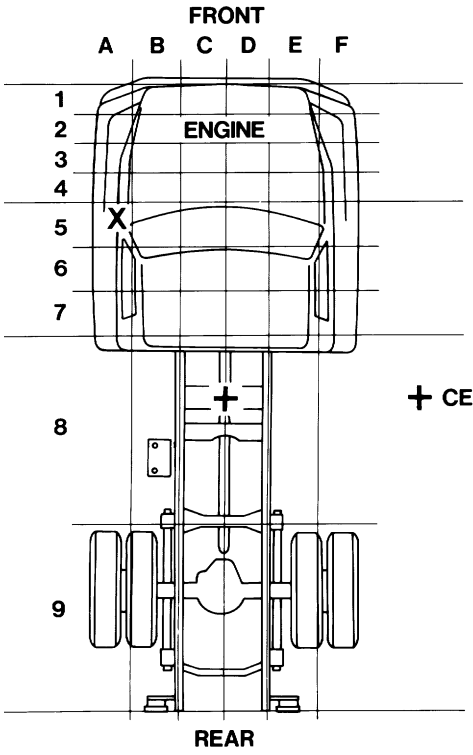

+ CENTER OF VEHICLE

OVER/UNDER DIRECTION

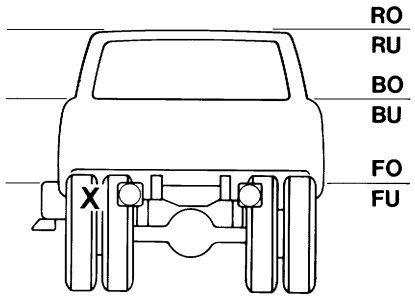

R = ROOF LINE
RO = ROOF OVER
RU = ROOF UNDER

B = BELT LINE
BO = BELT OVER
BU = BELT UNDER

F = FLOOR PAN
FO = FLOOR OVER
FU = FLOOR UNDER

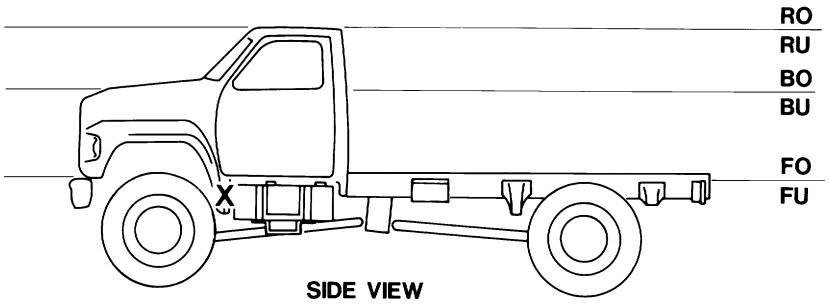

SIDE VIEW

F-650/750
FCS-12201–02