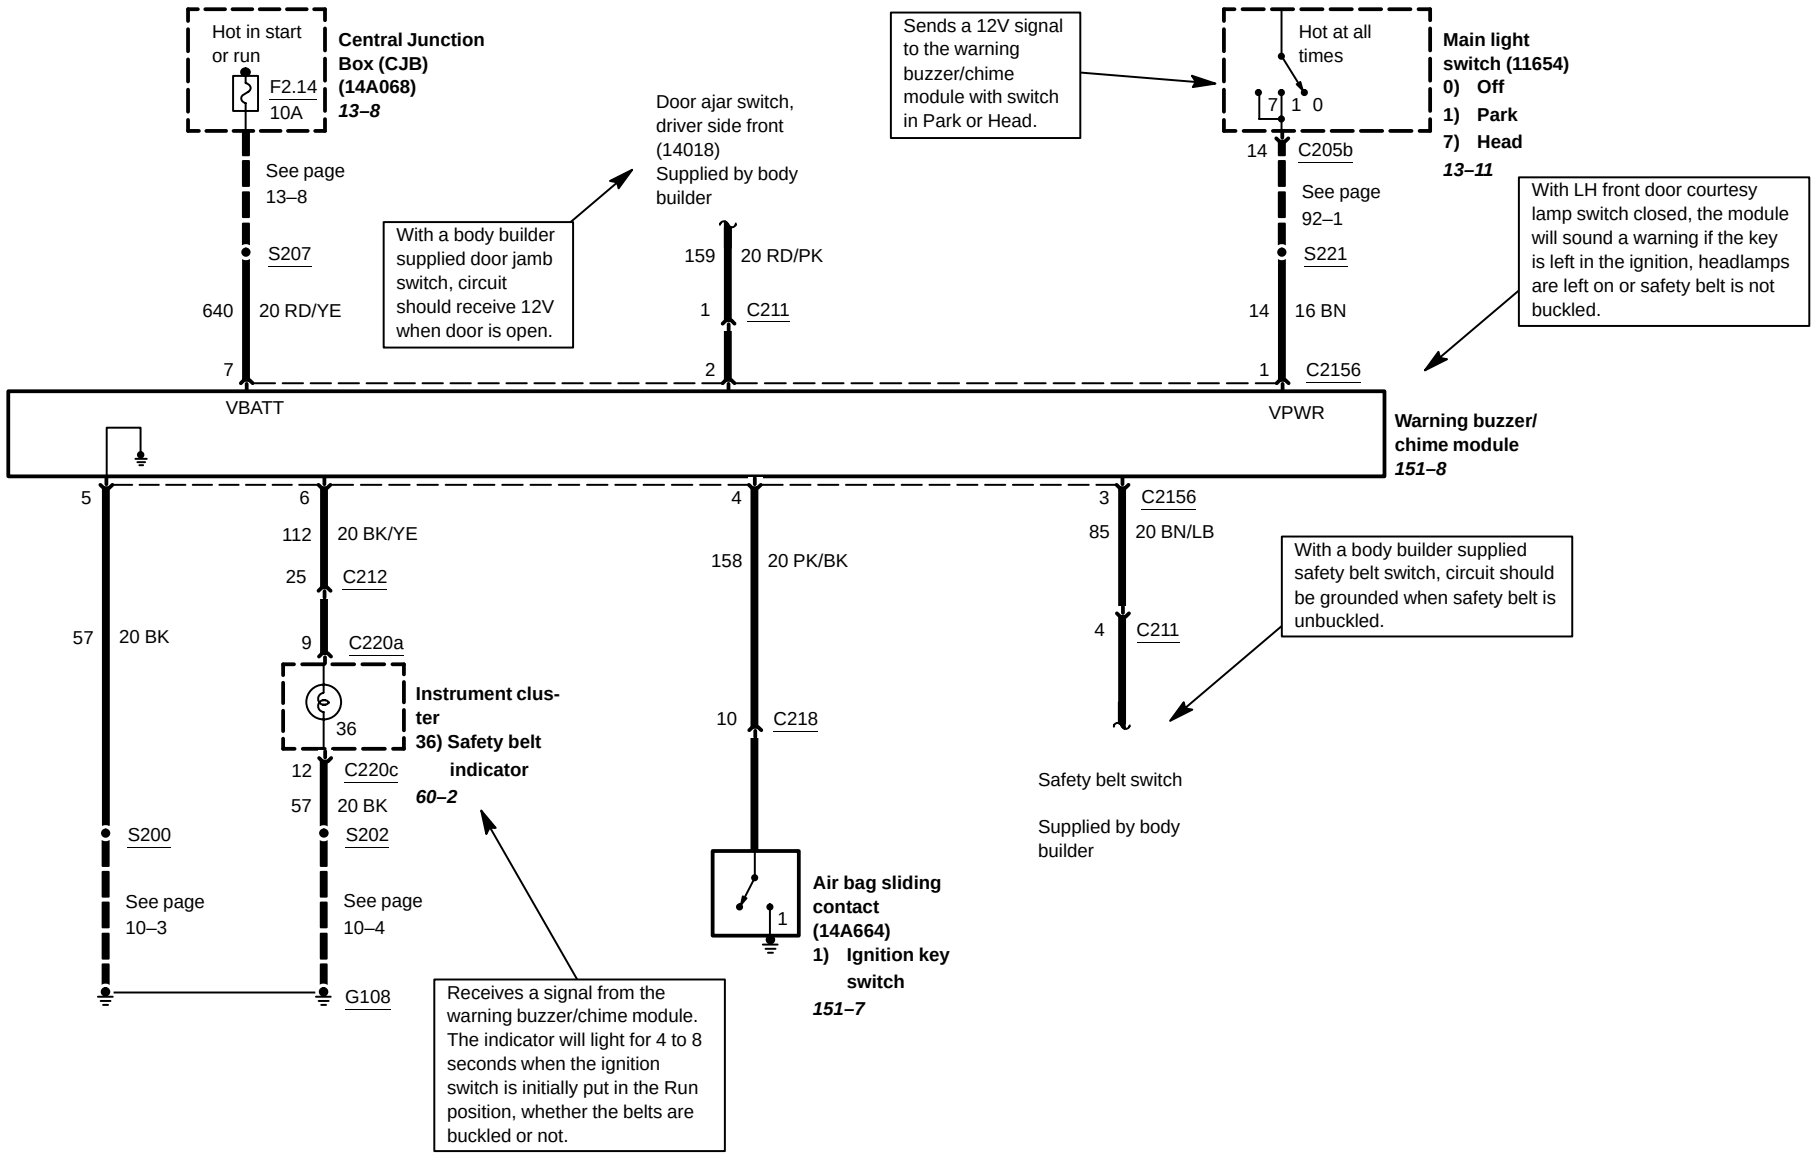

Hot in start or run
F2.14
10A
Central Junction Box (CJB) (14A068)
13–8
See page 13–8
S207
640 20 RD/YE
7
With a body builder supplied door jamb switch, circuit should receive 12V when door is open.
Door ajar switch, driver side front (14018) Supplied by body builder
159 20 RD/PK
1 C211
2
Sends a 12V signal to the warning buzzer/chime module with switch in Park or Head.
Hot at all times
7 1 0
Main light switch (11654)
0) Off
1) Park
7) Head
13–11
14 C205b
See page 92–1
S221
14 16 BN
1 C2156
With LH front door courtesy lamp switch closed, the module will sound a warning if the key is left in the ignition, headlamps are left on or safety belt is not buckled.
VBATT
VPWR
Warning buzzer/ chime module
151–8
5
6
112 20 BK/YE
25 C212
57 20 BK
9 C220a
36
Instrument cluster
36) Safety belt indicator
60–2
12 C220c
57 20 BK
S200
S202
See page 10–3
See page 10–4
G108
4
158 20 PK/BK
10 C218
1
Air bag sliding contact (14A664)
1) Ignition key switch
151–7
3 C2156
85 20 BN/LB
4 C211
With a body builder supplied safety belt switch, circuit should be grounded when safety belt is unbuckled.
Safety belt switch
Supplied by body builder
Receives a signal from the warning buzzer/chime module. The indicator will light for 4 to 8 seconds when the ignition switch is initially put in the Run position, whether the belts are buckled or not.