# 93-1 REVERSING LAMPS

**2001 CONTINENTAL**

**For diagnostic information, refer to section 417-01 of the Workshop Manual.**

*** WITH TRANSMISSION IN REVERSE AND IGNITION IN RUN**

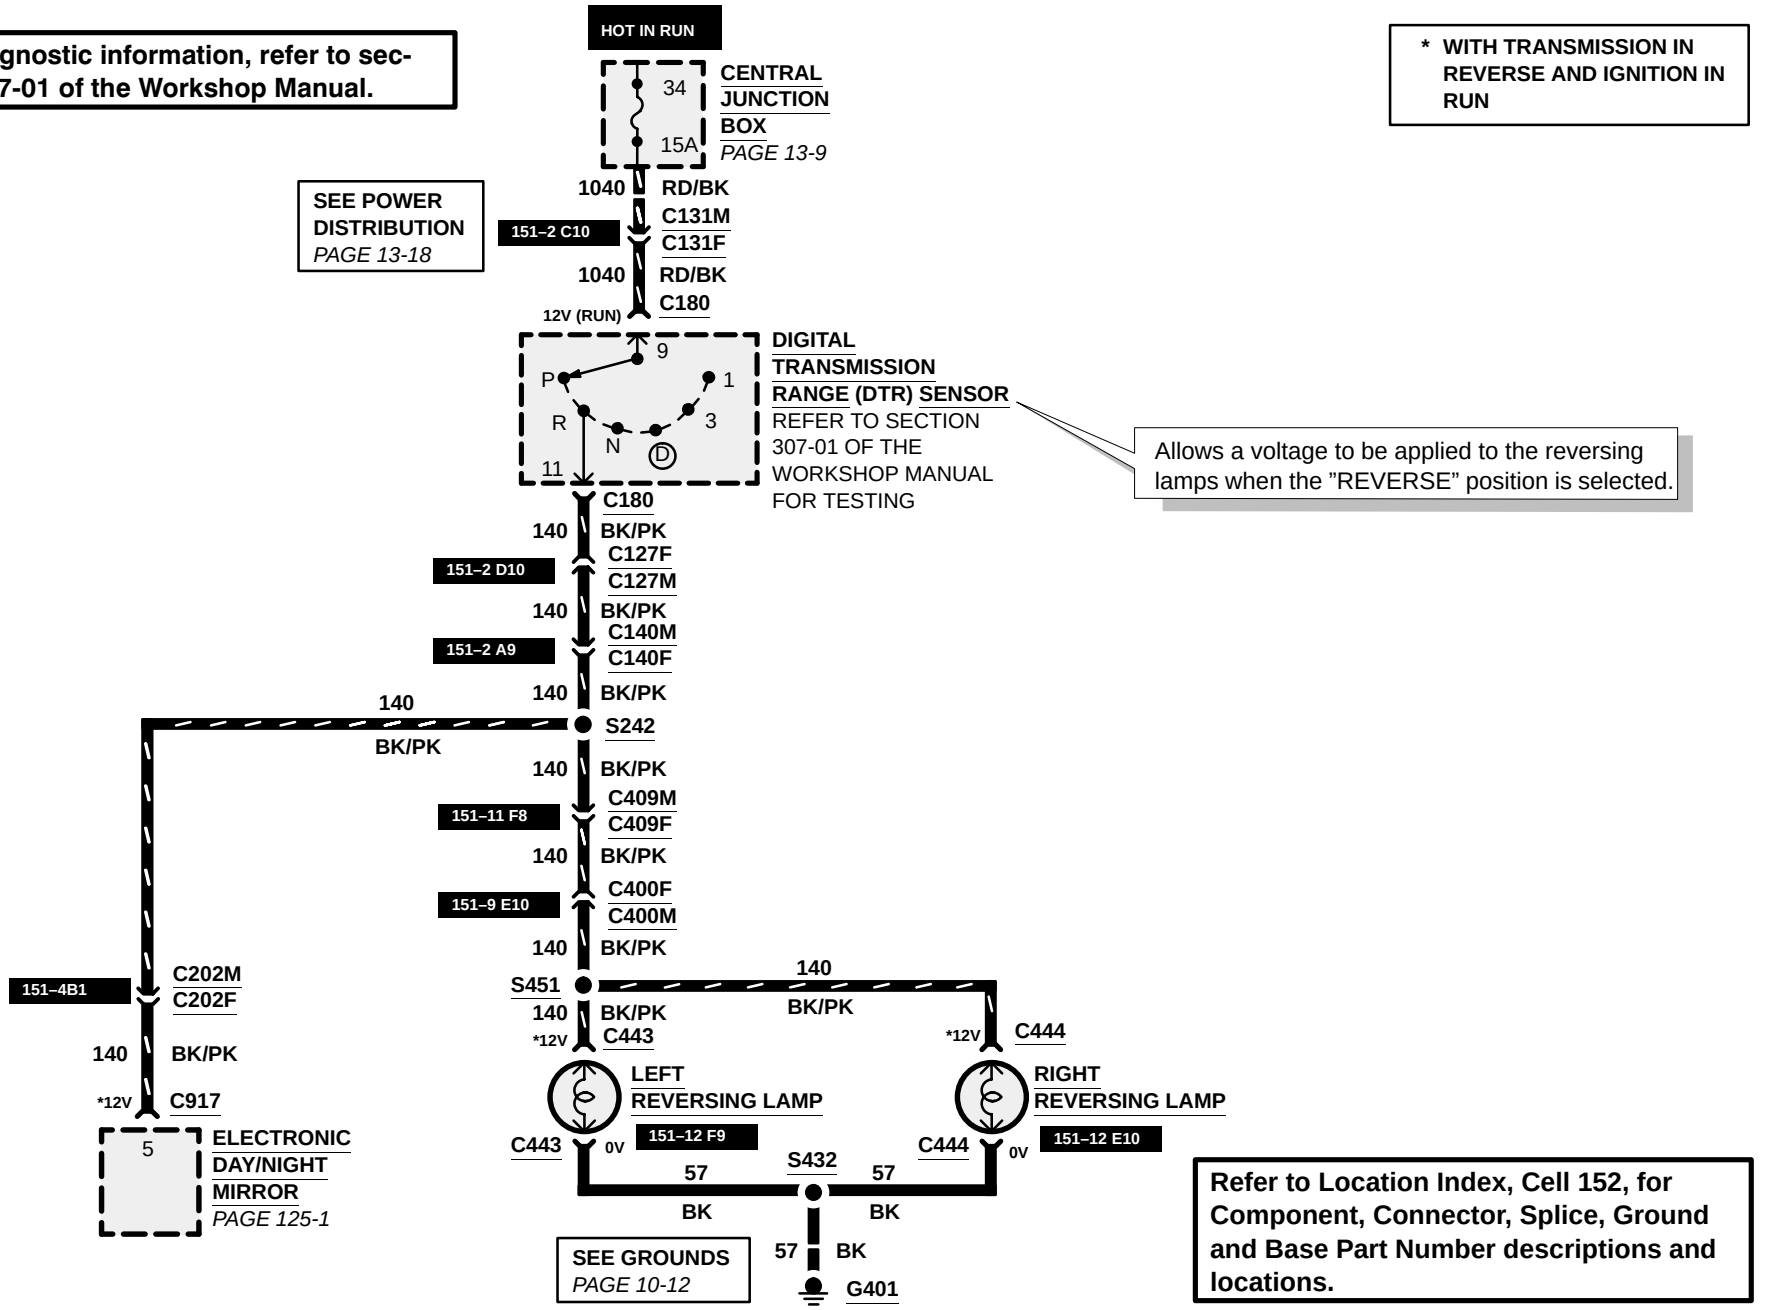


**Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.**