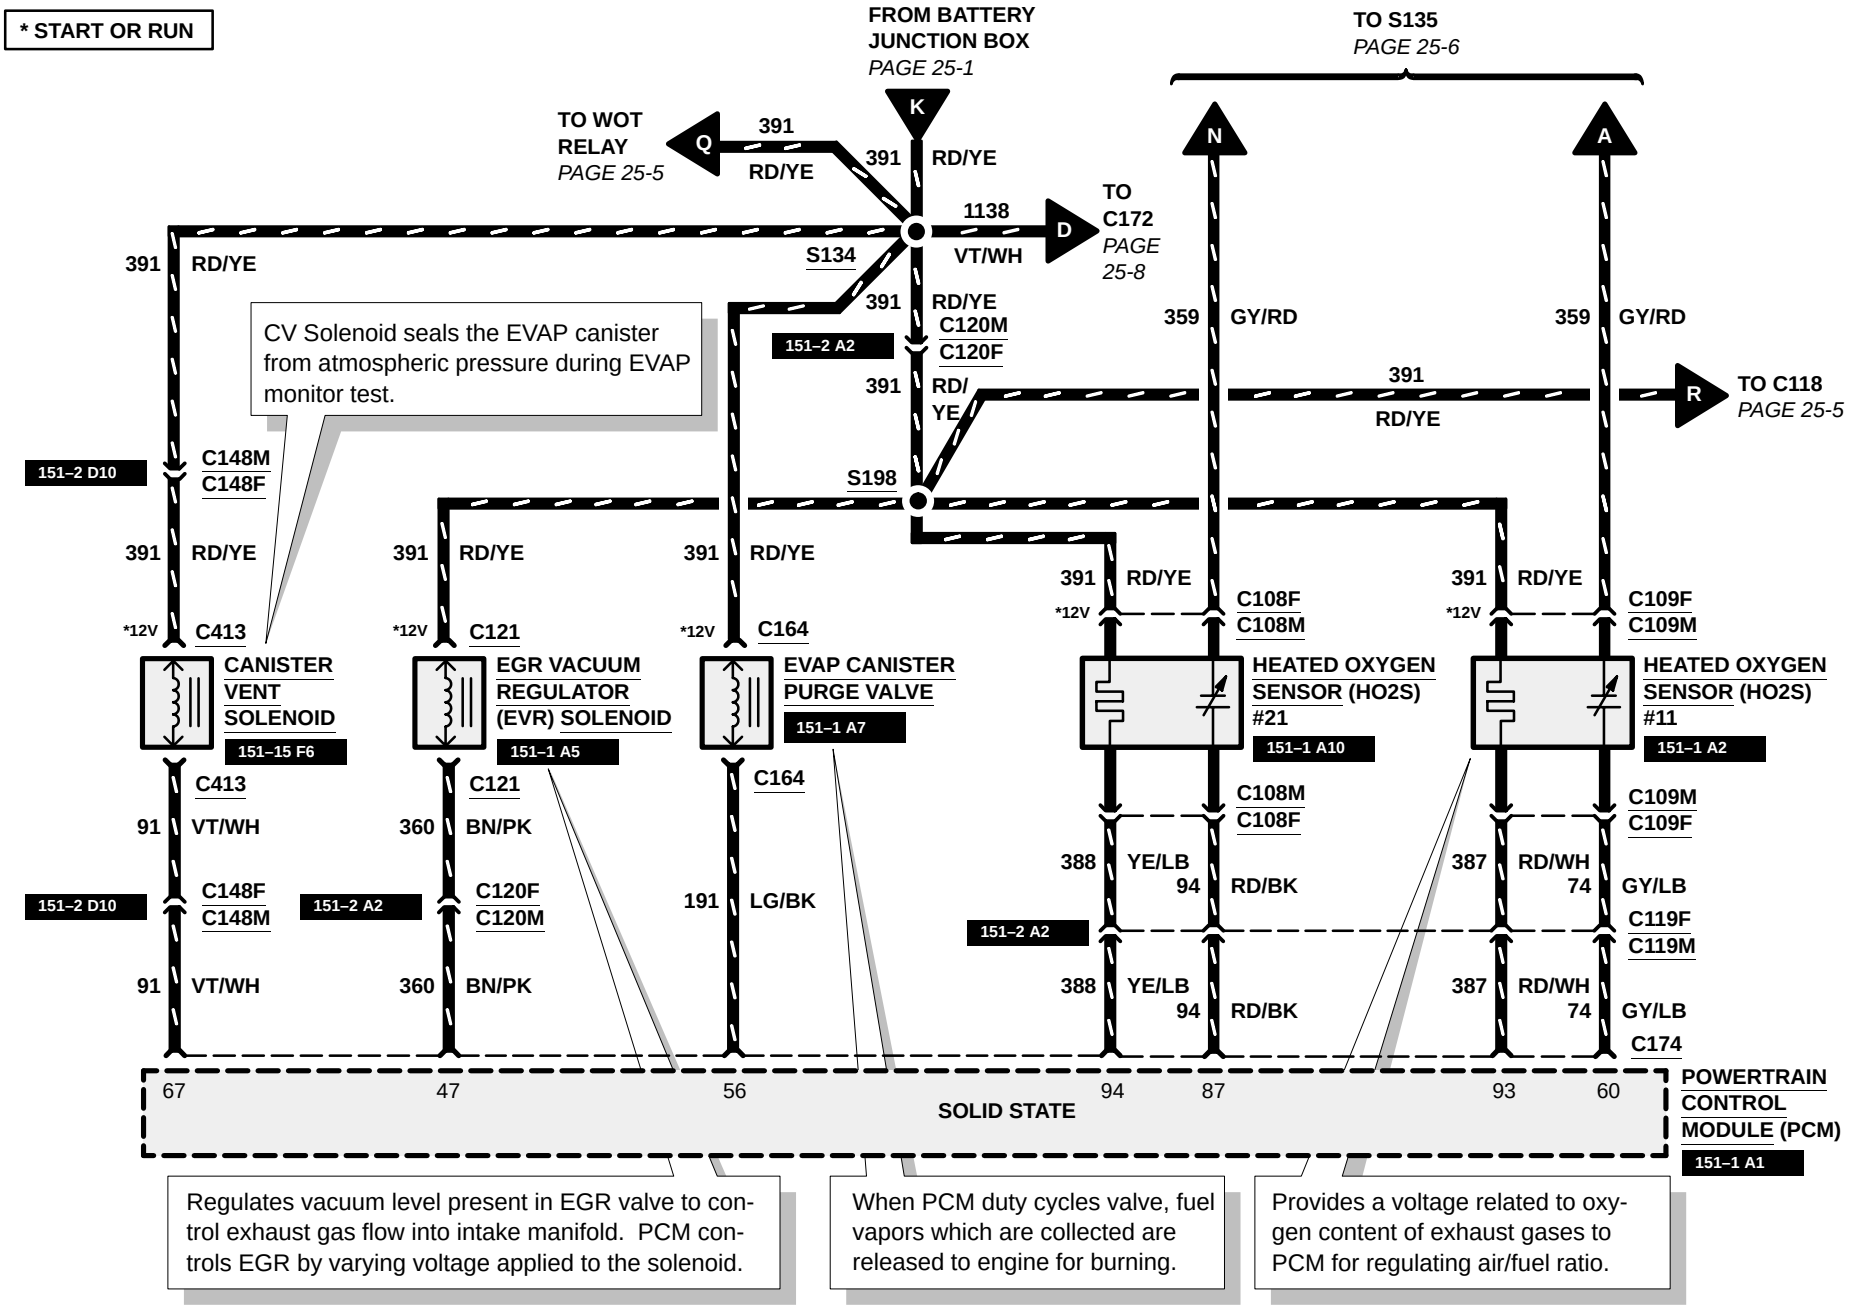
* START OR RUN
FROM BATTERY JUNCTION BOX
PAGE 25-1
TO S135
PAGE 25-6
TO WOT RELAY
PAGE 25-5
TO C172
PAGE 25-8
TO C118
PAGE 25-5
CV Solenoid seals the EVAP canister from atmospheric pressure during EVAP monitor test.
CANISTER VENT SOLENOID
EGR VACUUM REGULATOR (EVR) SOLENOID
EVAP CANISTER PURGE VALVE
HEATED OXYGEN SENSOR (HO2S) #21
HEATED OXYGEN SENSOR (HO2S) #11
POWERTRAIN CONTROL MODULE (PCM)
SOLID STATE
Regulates vacuum level present in EGR valve to control exhaust gas flow into intake manifold. PCM controls EGR by varying voltage applied to the solenoid.
When PCM duty cycles valve, fuel vapors which are collected are released to engine for burning.
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.