## C261

**144001**

P52
Joint connector 1

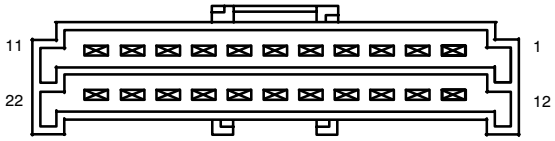


F22015

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 9-FA2 (BN/RD) | Sensor signal return (reference/ ground) |
| 2 | 9-FB7 (BN) | Sensor signal return (reference/ ground) |
| 3 | 9-FB6 (BN/WH) | Sensor signal return (reference/ ground) |
| 4 | 9-FB5 (BN/YE) | Sensor signal return (reference/ ground) |
| 5 | – | not used |
| 6 | – | not used |
| 7 | – | not used |
| 8 | – | not used |
| 9 | – | not used |
| 10 | – | not used |
| 11 | – | not used |
| 12 | 9-FA3 (BN/BU) | Sensor signal return (reference/ ground) |
| 13 | 9-FA51 (BN/YE) | Sensor signal return (reference/ ground) |

| Pin | Circuit | Circuit Function |
|---|---|---|
| 14 | 9-FA47 (BN/GN) | Sensor signal return (reference/ ground) |
| 15 | 9-FA53 (BN/BU) | Sensor signal return (reference/ ground) |
| 16 | – | not used |
| 17 | 29S-LB8 (OG) | Voltage supplied at all times (overload protected), Switched |
| 18 | 29S-LC23 (OG/WH) | Voltage supplied at all times (overload protected), Switched |
| 19 | 29S-LC1 (OG/YE) | Voltage supplied at all times (overload protected), Switched |
| 20 | 15-LE42 (GN/RD) | Voltage, ignition switch in Start or Run (not overload protected) |
| 21 | 15-LE4 (GN/BU) | Voltage, ignition switch in Start or Run (not overload protected) |
| 22 | 15-CC16 (GN/OG) | Voltage, ignition switch in Start or Run (not overload protected) |