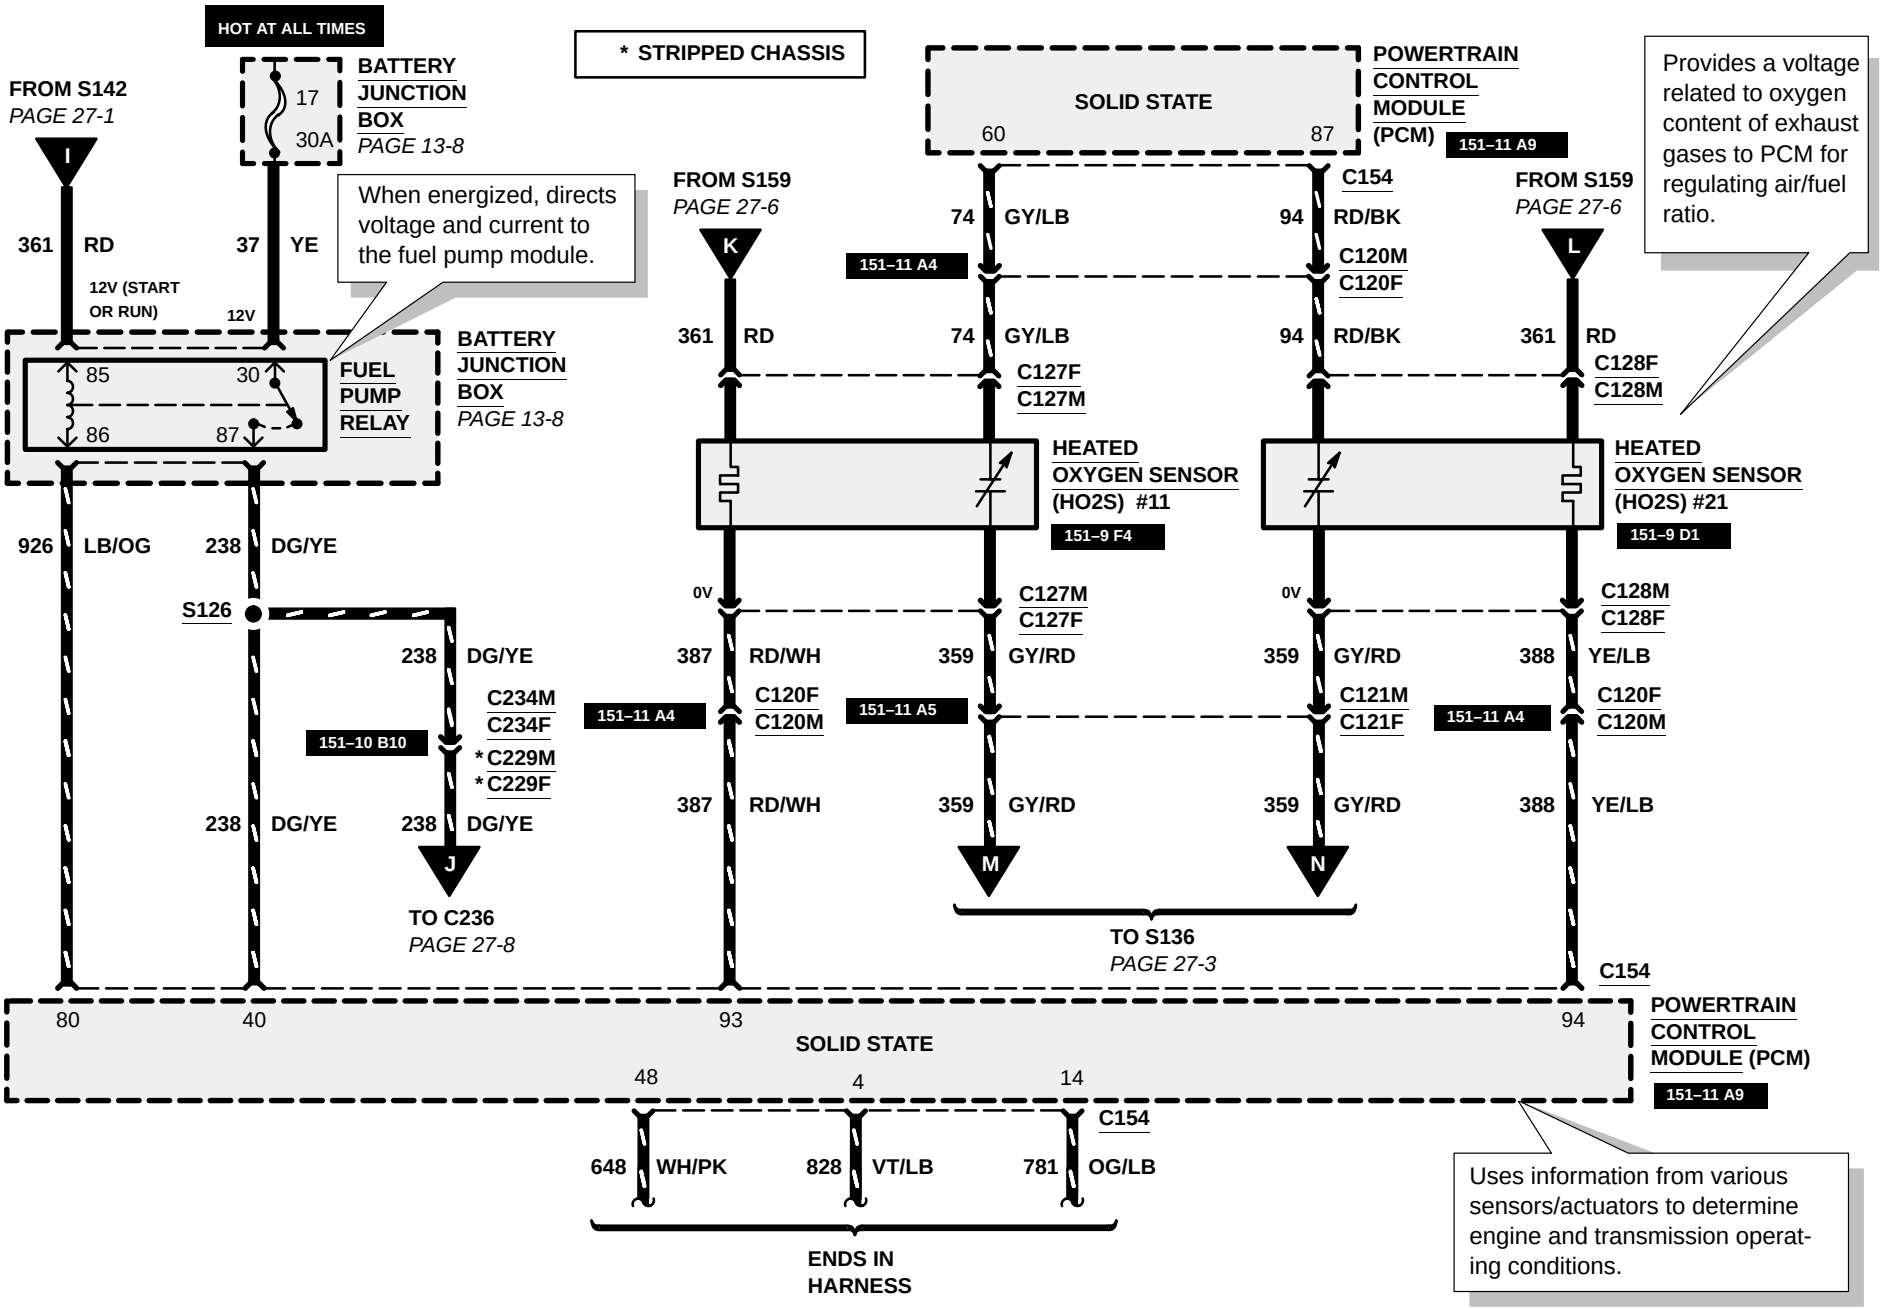
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-8
17
30A
FROM S142
PAGE 27-1
I
361 RD
37 YE
12V (START OR RUN)
12V
When energized, directs voltage and current to the fuel pump module.
BATTERY JUNCTION BOX
FUEL PUMP RELAY
85
30
86
87
926 LB/OG
238 DG/YE
S126
238 DG/YE
151–10 B10
C234M
C234F
*C229M
*C229F
238 DG/YE
238 DG/YE
J
TO C236
PAGE 27-8
* STRIPPED CHASSIS
FROM S159
PAGE 27-6
K
361 RD
0V
387 RD/WH
151–11 A4
C120F
C120M
387 RD/WH
SOLID STATE
60
87
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
C154
74 GY/LB
151–11 A4
C120M
C120F
74 GY/LB
C127F
C127M
HEATED OXYGEN SENSOR (HO2S) #11
151–9 F4
C127M
C127F
359 GY/RD
151–11 A5
359 GY/RD
M
94 RD/BK
C120M
C120F
94 RD/BK
C127F
C127M
HEATED OXYGEN SENSOR (HO2S) #21
151–9 D1
0V
C128M
C128F
359 GY/RD
C121M
C121F
151–11 A4
359 GY/RD
N
FROM S159
PAGE 27-6
L
361 RD
C128F
C128M
388 YE/LB
C120F
C120M
388 YE/LB
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
TO S136
PAGE 27-3
C154
80
40
93
94
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
48
4
14
C154
648 WH/PK
828 VT/LB
781 OG/LB
ENDS IN HARNESS
Uses information from various sensors/actuators to determine engine and transmission operating conditions.