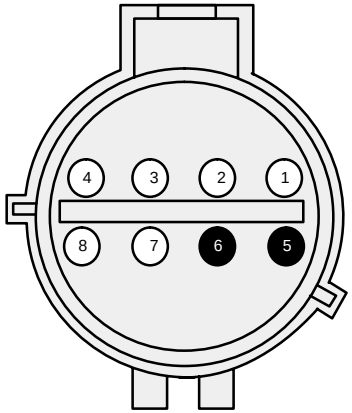

C415
FUEL PUMP ASSEMBLY

PIN	CIRCUIT	CIRCUIT FUNCTION
1	29 (YE/WH)	Fuel Gauge Sender
2	922 (WH/RD)	Fuel Pump Dropping Resistor
3	672 (LG/YE)	Fuel Pump High/Low Relay
4	396 (BK/OG)	Ground
5	–	NOT USED
6	–	NOT USED
7	789 (BN/WH)	Fuel Pump Rear
8	786 (RD)	Fuel Pump Front

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C157	31-4
C182	29-5, 30-5
C193	30-5
C224	130-5
C228	14-3
C236	62-6
C267	59-6