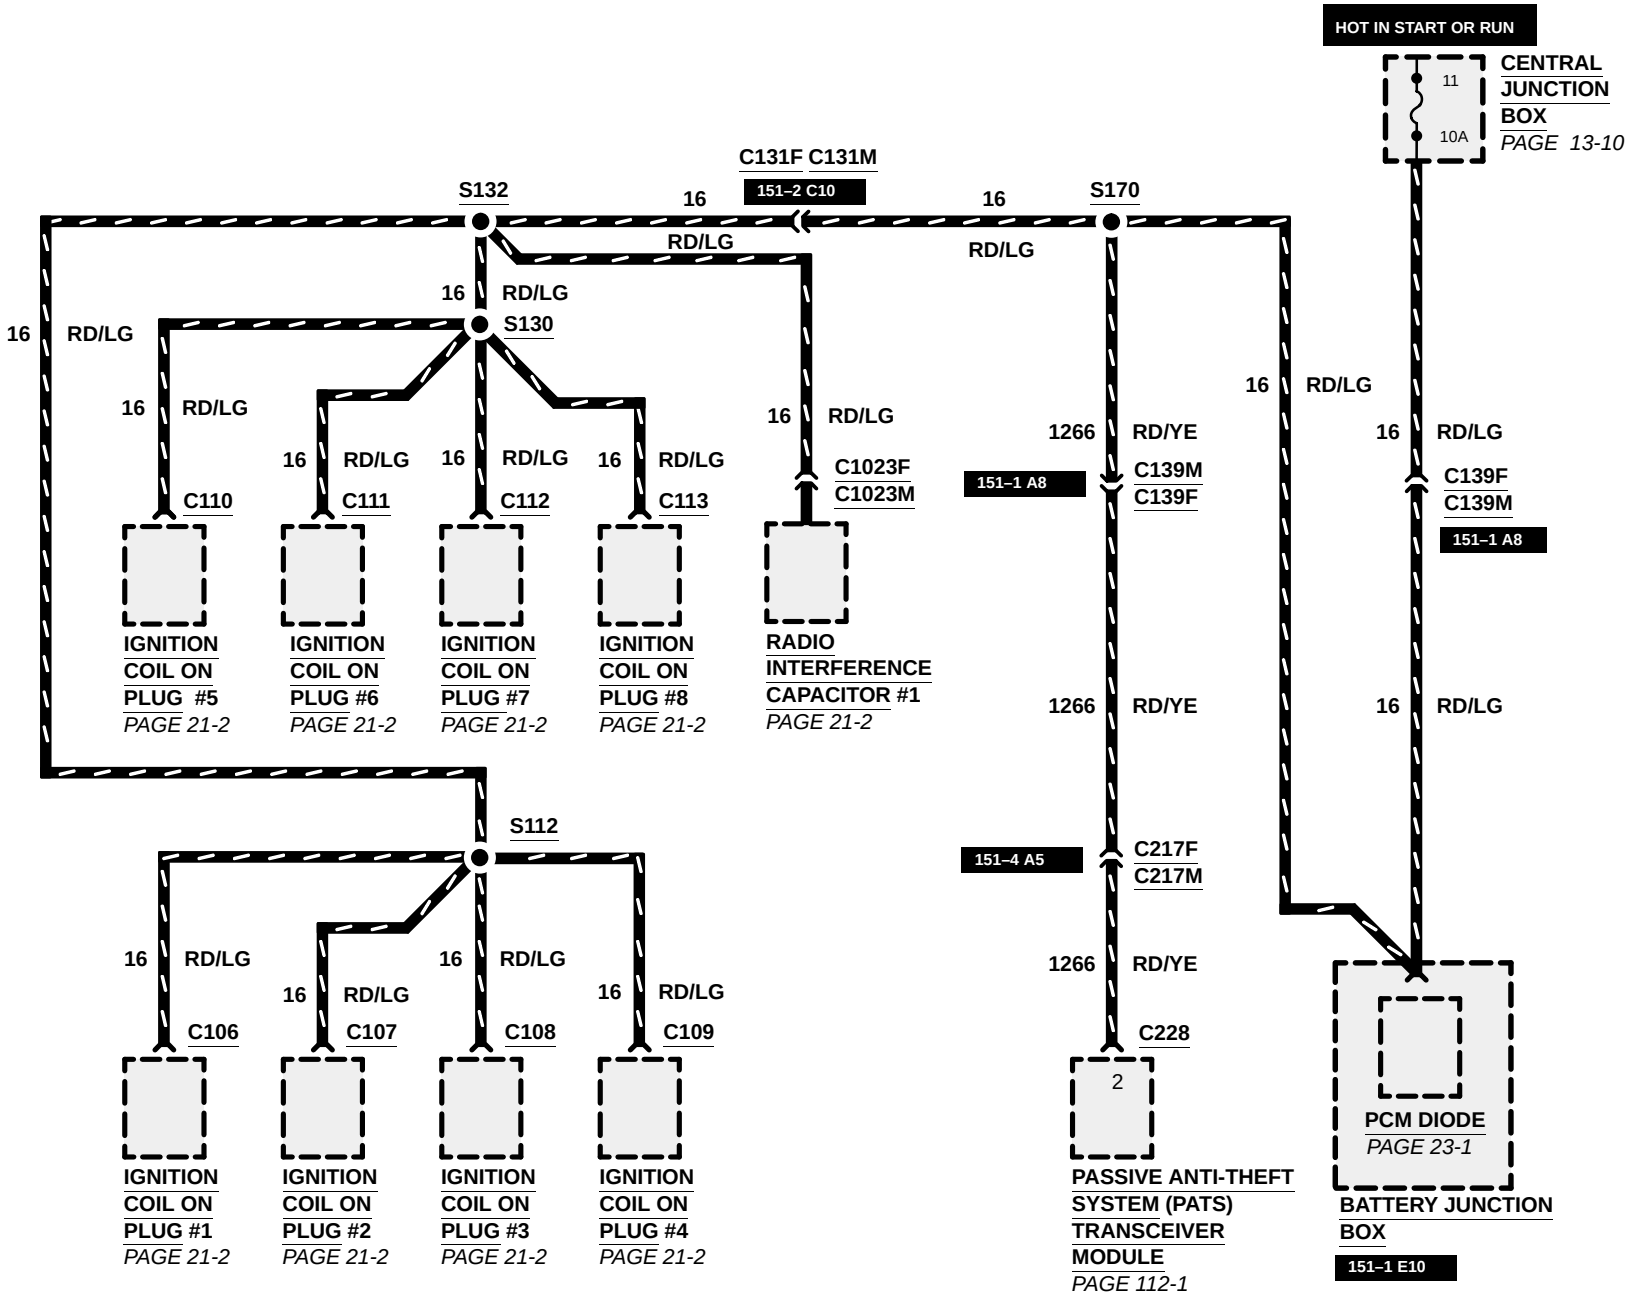
HOT IN START OR RUN
CENTRAL JUNCTION BOX
PAGE 13-10
11
10A
C131F C131M
151–2 C10
S132
16
RD/LG
S170
S130
S112
C110
C111
C112
C113
C1023F
C1023M
C139M
C139F
151–1 A8
C217F
C217M
151–4 A5
C106
C107
C108
C109
C228
2
IGNITION COIL ON PLUG #5
PAGE 21-2
IGNITION COIL ON PLUG #6
PAGE 21-2
IGNITION COIL ON PLUG #7
PAGE 21-2
IGNITION COIL ON PLUG #8
PAGE 21-2
RADIO INTERFERENCE CAPACITOR #1
PAGE 21-2
IGNITION COIL ON PLUG #1
PAGE 21-2
IGNITION COIL ON PLUG #2
PAGE 21-2
IGNITION COIL ON PLUG #3
PAGE 21-2
IGNITION COIL ON PLUG #4
PAGE 21-2
1266
RD/YE
PASSIVE ANTI-THEFT SYSTEM (PATS) TRANSCEIVER MODULE
PAGE 112-1
PCM DIODE
PAGE 23-1
BATTERY JUNCTION BOX
151–1 E10