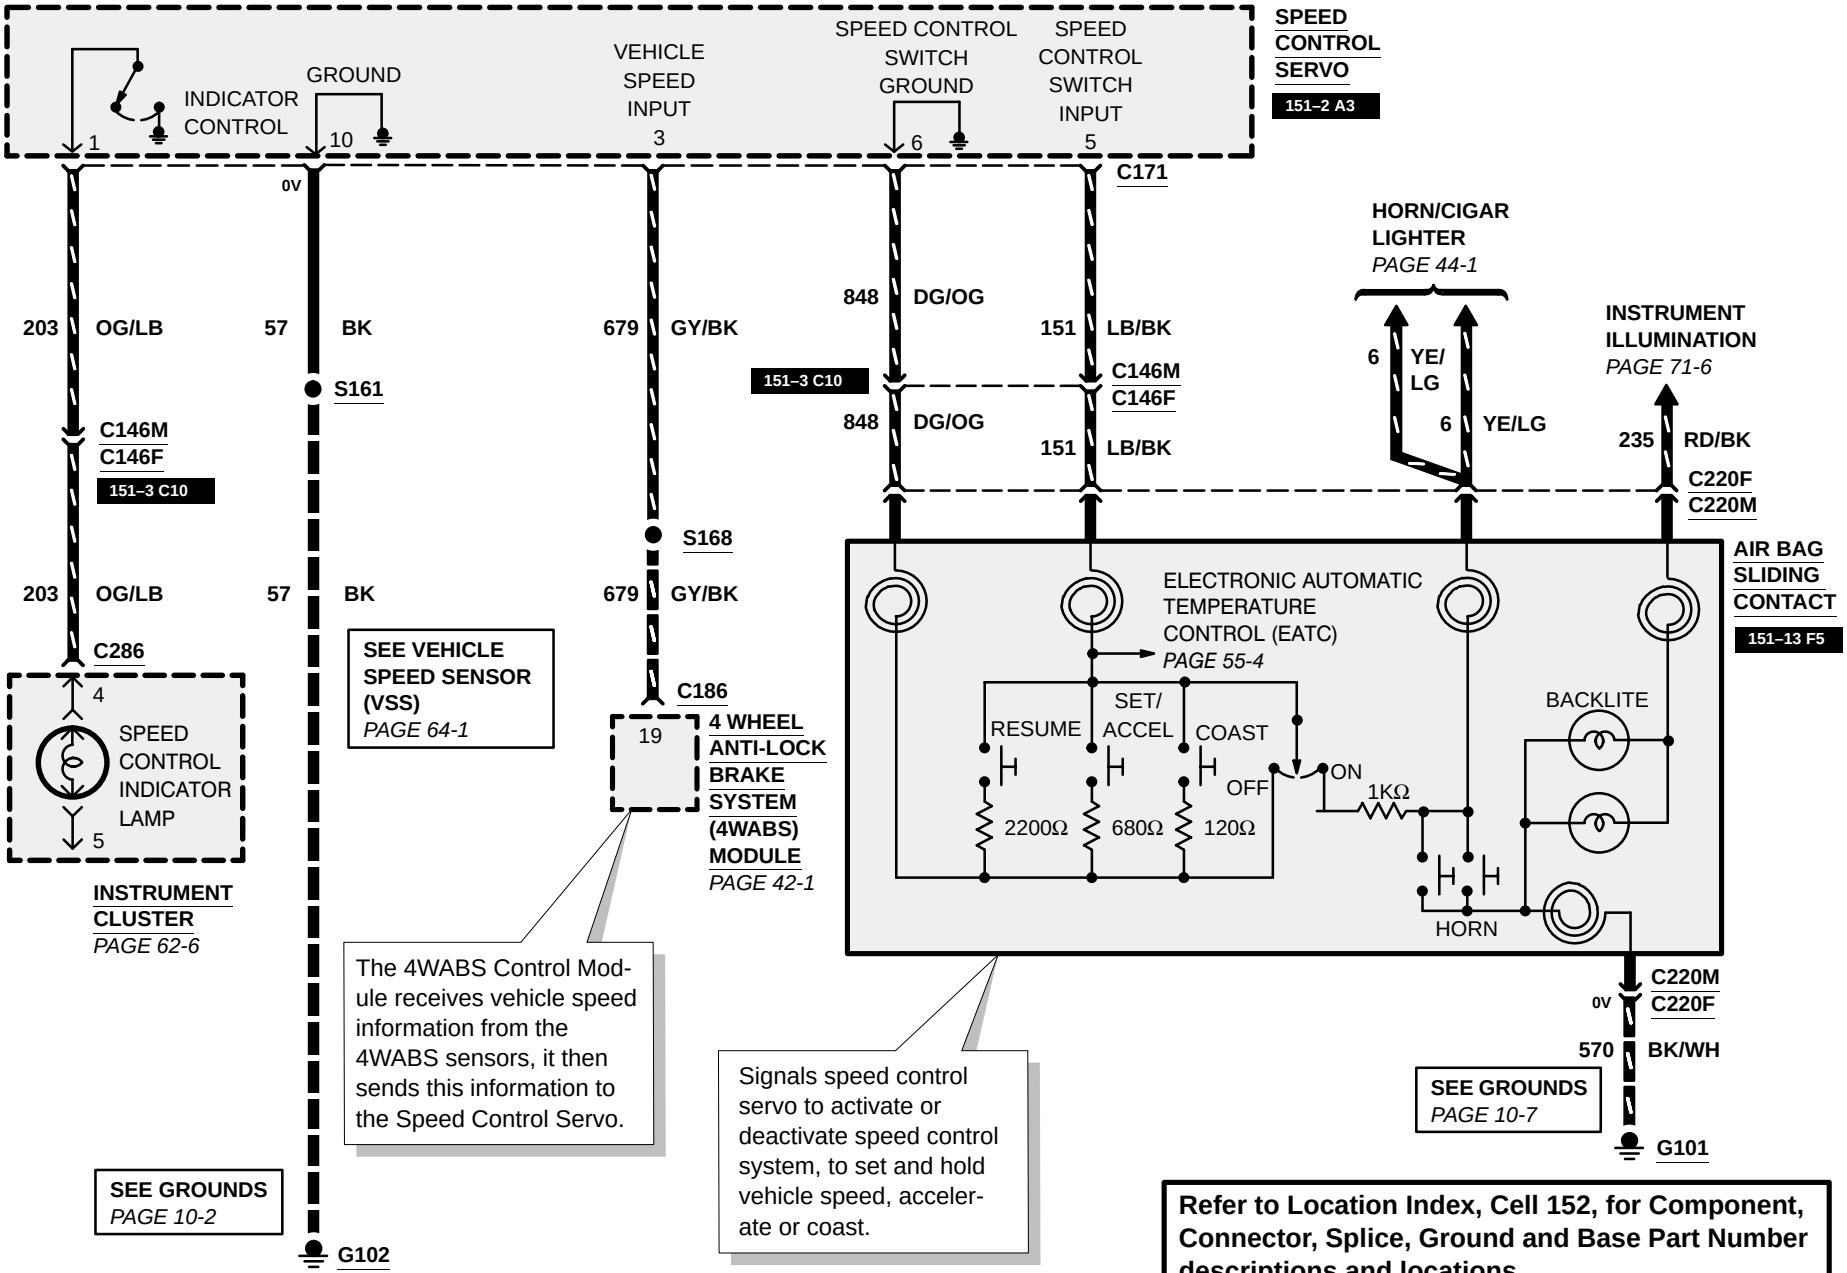
SPEED CONTROL SERVO
151–2 A3
INDICATOR CONTROL
GROUND
VEHICLE SPEED INPUT
SPEED CONTROL SWITCH GROUND
SPEED CONTROL SWITCH INPUT
1
10
3
6
5
0V
C171
HORN/CIGAR LIGHTER
PAGE 44-1
INSTRUMENT ILLUMINATION
PAGE 71-6
203 OG/LB
57 BK
679 GY/BK
848 DG/OG
151 LB/BK
6 YE/LG
6 YE/LG
235 RD/BK
S161
C146M
C146F
151–3 C10
C220F
C220M
S168
AIR BAG SLIDING CONTACT
151–13 F5
ELECTRONIC AUTOMATIC TEMPERATURE CONTROL (EATC)
PAGE 55-4
C286
4
SPEED CONTROL INDICATOR LAMP
5
SET/ ACCEL
RESUME
COAST
BACKLITE
OFF
ON
1KΩ
2200Ω
680Ω
120Ω
HORN
SEE VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
C186
19
4 WHEEL ANTI-LOCK BRAKE SYSTEM (4WABS) MODULE
PAGE 42-1
INSTRUMENT CLUSTER
PAGE 62-6
The 4WABS Control Module receives vehicle speed information from the 4WABS sensors, it then sends this information to the Speed Control Servo.
Signals speed control servo to activate or deactivate speed control system, to set and hold vehicle speed, accelerate or coast.
570 BK/WH
SEE GROUNDS
PAGE 10-7
G101
SEE GROUNDS
PAGE 10-2
G102
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.