C175

14290

Powertrain
Control Module
(PCM)
(12A650)

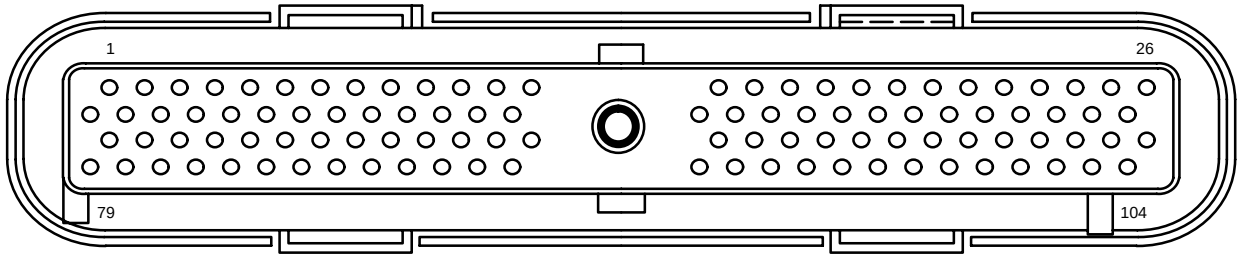

F104001

Pin	Circuit	Circuit function
1	1025 (OG/YE)	Coil On Plug (COP) 6 (12029), control
2	–	not used
3	570 (BK/WH)	Ground
4	–	not used
5	–	not used
6	237 (OG/YE)	Shift solenoid A
7	654 (YE/LG)	Generator
8	–	not used
9	–	not used
10	3067 (LB/RD)	Differential Pressure Feedback EGR (DPFE) sensor
11	315 (VT/OG)	Shift solenoid B
12	–	not used
13	107 (VT)	Module programming signal
14	–	not used
15	915 (PK/LB)	SCP Bus –
16	914 (TN/OG)	SCP Bus +
17	1216 (GY/OG)	Passive anti–theft transceiver module (15607) – RX
18	1215 (WH/LG)	Passive anti–theft transceiver module (15607) – TX
19	–	not used
20	–	not used
21	138 (BK/PK)	Powertrain Control Module (PCM) (12A650) – Crankshaft position sensor (6C315) +
22	139 (GY/YE)	Powertrain Control Module (PCM) (12A650) – Crankshaft position sensor (6C315) –
23	–	not used
24	570 (BK/WH)	Ground

Pin	Circuit	Circuit function
25	57 (BK)	Ground
26	1024 (LG/WH)	Coil On Plug (COP) 1 (12029), control
27	1021 (LG/YE)	Coil On Plug (COP) 5 (12029), control
28	229 (RD/OG)	Engine cooling fan motor
29	224 (TN/WH)	PCM, to transmission overdrive cancel switch
30	1269 (OG/RD)	Anti–theft, indicator, control
31	328 (YE/LG)	Power steering pressure switch
32	311 (DG/VT)	Knock sensor (12A699) +
33	–	not used
34	1144 (YE/BK)	Digital Transmission Range (DTR) sensor, TR1
35	392 (RD/LG)	Heated Oxygen Sensor (HO2S) #12 (9G444), input
36	968 (TN/LB)	Mass Air Flow (MAF) sensor (12B579), signal, return
37	923 (OG/BK)	Transmission Fluid Temperature (TFT) sensor, input
38	3062 (BK/WH)	Engine air temperature sensor
39	743 (GY)	Intake Air Temperature (IAT) sensor (12A697), input
40	238 (DG/YE)	Fuel pump driver module (9H307)
41	883 (PK/LB)	A/C clutch cycling pressure switch (19D594)
42	–	not used
43	–	not used
44	3405 (GY/RD)	Starter relay (11450), control
45	904 (LG/RD)	Generator/Battery indicator, control
46	–	not used
47	360 (BN/PK)	Differential Pressure Feedback EGR (DPFE) sensor
48	–	not used
49	1145 (LB/BK)	Digital Transmission Range (DTR) sensor, TR2
50	1143 (WH/BK)	Digital Transmission Range (DTR) sensor, TR4

Pin	Circuit	Circuit function
51	570 (BK/WH)	Ground
52	1028 (WH/PK)	Coil On Plug (COP) 3 (12029), control
53	1030 (DG/VT)	Coil On Plug (COP) 4 (12029), control
54	126 (VT/YE)	Torque Converter Clutch (TCC) solenoid
55	729 (RD/WH)	Voltage supplied at all times (overload protected)
56	191 (LG/BK)	EVAP canister purge valve
57	310 (YE/RD)	Knock sensor (12A699) –
58	–	not used
59	–	not used
60	74 (GY/LB)	Heated Oxygen Sensor (HO2S) #11 (9F472), input
61	393 (VT/LG)	Heated Oxygen Sensor (HO2S) #22 (9G444), input
62	791 (RD/PK)	Fuel tank pressure transducer sensor (9C968)
63	1289 (OG/LG)	Injector pressure sensor
64	199 (LB/YE)	Digital Transmission Range (DTR) sensor, to, TR3A
65	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) sensor, input
66	1102 (YE/LG)	Cylinder–head temperature sensor (6G004)
67	91 (VT/WH)	EVAP canister vent control solenoid
68	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
69	73 (OG/LB)	A/C clutch relay, control
70	584 (YE)	Generator/Battery indicator
71	361 (RD)	Voltage supplied in Start and Run (overload protected)
72	561 (TN/RD)	Fuel injector 7, control
73	559 (TN/BK)	Fuel injector 5, control
74	557 (BN/YE)	Fuel injector 3, control
75	555 (TN)	Fuel injector 1, control
76	570 (BK/WH)	Ground

Pin	Circuit	Circuit function
77	–	not used
78	1027 (PK/LB)	Coil On Plug (COP) 7 (12029), control
79	1029 (WH/RD)	Coil On Plug (COP) 8 (12029), control
80	926 (LB/OG)	Fuel pump driver module (9H307)
81	925 (WH/YE)	Electronic Pressure Control (EPC) solenoid
82	–	not used
83	264 (WH/LB)	Idle Air Control (IAC) valve (9F715), control
84	136 (DB/YE)	Output Shaft Speed (OSS) sensor (7H103)
85	282 (DB/OG)	Camshaft position sensor (6B288)
86	1154 (WH/BK)	A/C pressure transducer sensor
87	94 (RD/BK)	Heated Oxygen Sensor (HO2S) #21 (9F472), input
88	967 (LB/RD)	Mass Air Flow (MAF) sensor (12B579), output
89	355 (GY/WH)	Throttle Position Sensor (TPS) (9B989), input
90	351 (BN/WH)	Reference, voltage
91	359 (GY/RD)	signal, return
92	–	not used
93	387 (RD/WH)	Heated Oxygen Sensor (HO2S) #11 (9F472), heater
94	388 (YE/LB)	Heated Oxygen Sensor (HO2S) #21 (9F472), heater
95	389 (WH/BK)	Heated Oxygen Sensor (HO2S) #12 (9G444), heater
96	390 (TN/YE)	Heated Oxygen Sensor (HO2S) #22 (9G444), heater
97	361 (RD)	Voltage supplied in Start and Run (overload protected)
98	562 (LB)	Fuel injector 8, control
99	560 (LG/OG)	Fuel injector 6, control
100	558 (BN/LB)	Fuel injector 4, control
101	556 (WH)	Fuel injector 2, control
102	–	not used
103	570 (BK/WH)	Ground
104	1026 (PK/WH)	Coil On Plug (COP) 2 (12029), control