C441 (GY)

14401

N104
Wiper/washer switch

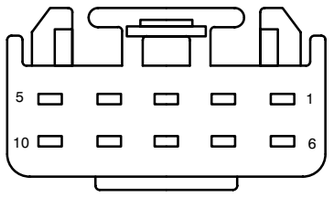

F10042

Pin	Circuit	Circuit Function
1	8-KA18 (WH)	Sensor signal
2	32-KA6 (WH/BK)	Switched between: Battery voltage, Ground or Open
3	31-KA19 (BK)	Ground
4	33-KA6 (YE/BK)	Switched between: Battery voltage, Ground or Open
5	32-KA35 (WH/RD)	Switched between: Battery voltage, Ground or Open
6	15-KA19 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
7	32-KA19 (WH/BK)	Switched between: Battery voltage, Ground or Open
8	32-KA11 (WH/BK)	Switched between: Battery voltage, Ground or Open
9	32-KA10 (WH/GN)	Switched between: Battery voltage, Ground or Open
10	8-KA19 (WH/BK)	Sensor signal

C442 (YE)

14401

A11
Radio

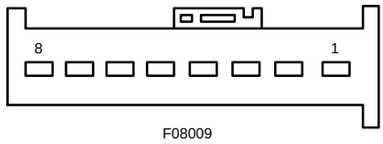

F08009

Pin	Circuit	Circuit Function
1	8-MD10 (WH/BK)	Sensor signal
2	10-MD10 (GY/BK)	Signal 2 (Y–direction, reverse, downward)
3	8-MD11 (WH/VT)	Sensor signal
	8-MD11 (WH/GN)	Sensor signal
4	10-MD11 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
5	8-MD17 (WH/RD)	Sensor signal
6	10-MD17 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
7	8-MD18 (WH)	Sensor signal
8	10-MD18 (GY)	Signal 2 (Y–direction, reverse, downward)

C443 (BK)

14401

A11
Radio



F07011

Pin	Circuit	Circuit Function
1	29-MD15 (OG/BK)	Voltage supplied at all times (overload protected)
2	91-MD34 (BK/YE)	Ground
3	75-MD15 (YE/GN)	Voltage: Ignition switch in Accessory or Run
4	29S-LK34 (OG/BK)	Voltage supplied at all times (overload protected), switched
5	31S-GL15 (BK/OG)	Ground, switched
6	91-MD15 (BN/GN)	Ground
7	–	not used