Seat adjust switch, driver side front (14A701)

Component testing procedure

Circuit to test	Connect self–powered test light or ohmmeter to terminals	Move switch to these positions	A good switch will indicate
Power and Ground Checks Before Any Other Tests	3 and 1	Rest	Open circuit
	1 and all others except 3	Rest	Closed circuit
Front up/down circuit	3 and 8	Up	Closed circuit
	3 and 6	Down	Closed circuit
Rear up/down circuit	3 and 7	Up	Closed circuit
	3 and 4	Down	Closed circuit
Entire seat circuit	3 and 2	Rearward	Closed circuit
	3 and 5	Forward	Closed circuit
	3 and 6	Down	Closed circuit
	3 and 4	Down	Closed circuit
	3 and 8	Up	Closed circuit
	3 and 7	Up	Closed circuit

Terminals

C1231

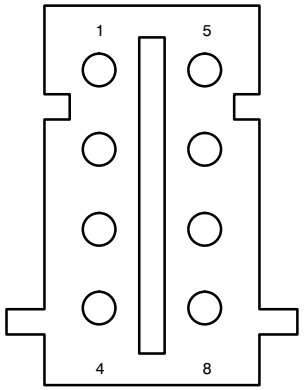

Schematic

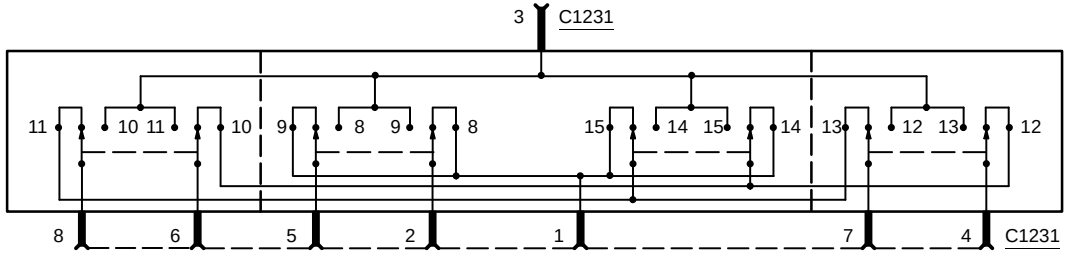

N216
Seat adjust switch, driver side front (14A701)
8) Seat forward
9) Seat rearward
10) Front height up
11) Front height down
12) Rear height up
13) Rear height down
14) Entire seat up
15) Entire seat down