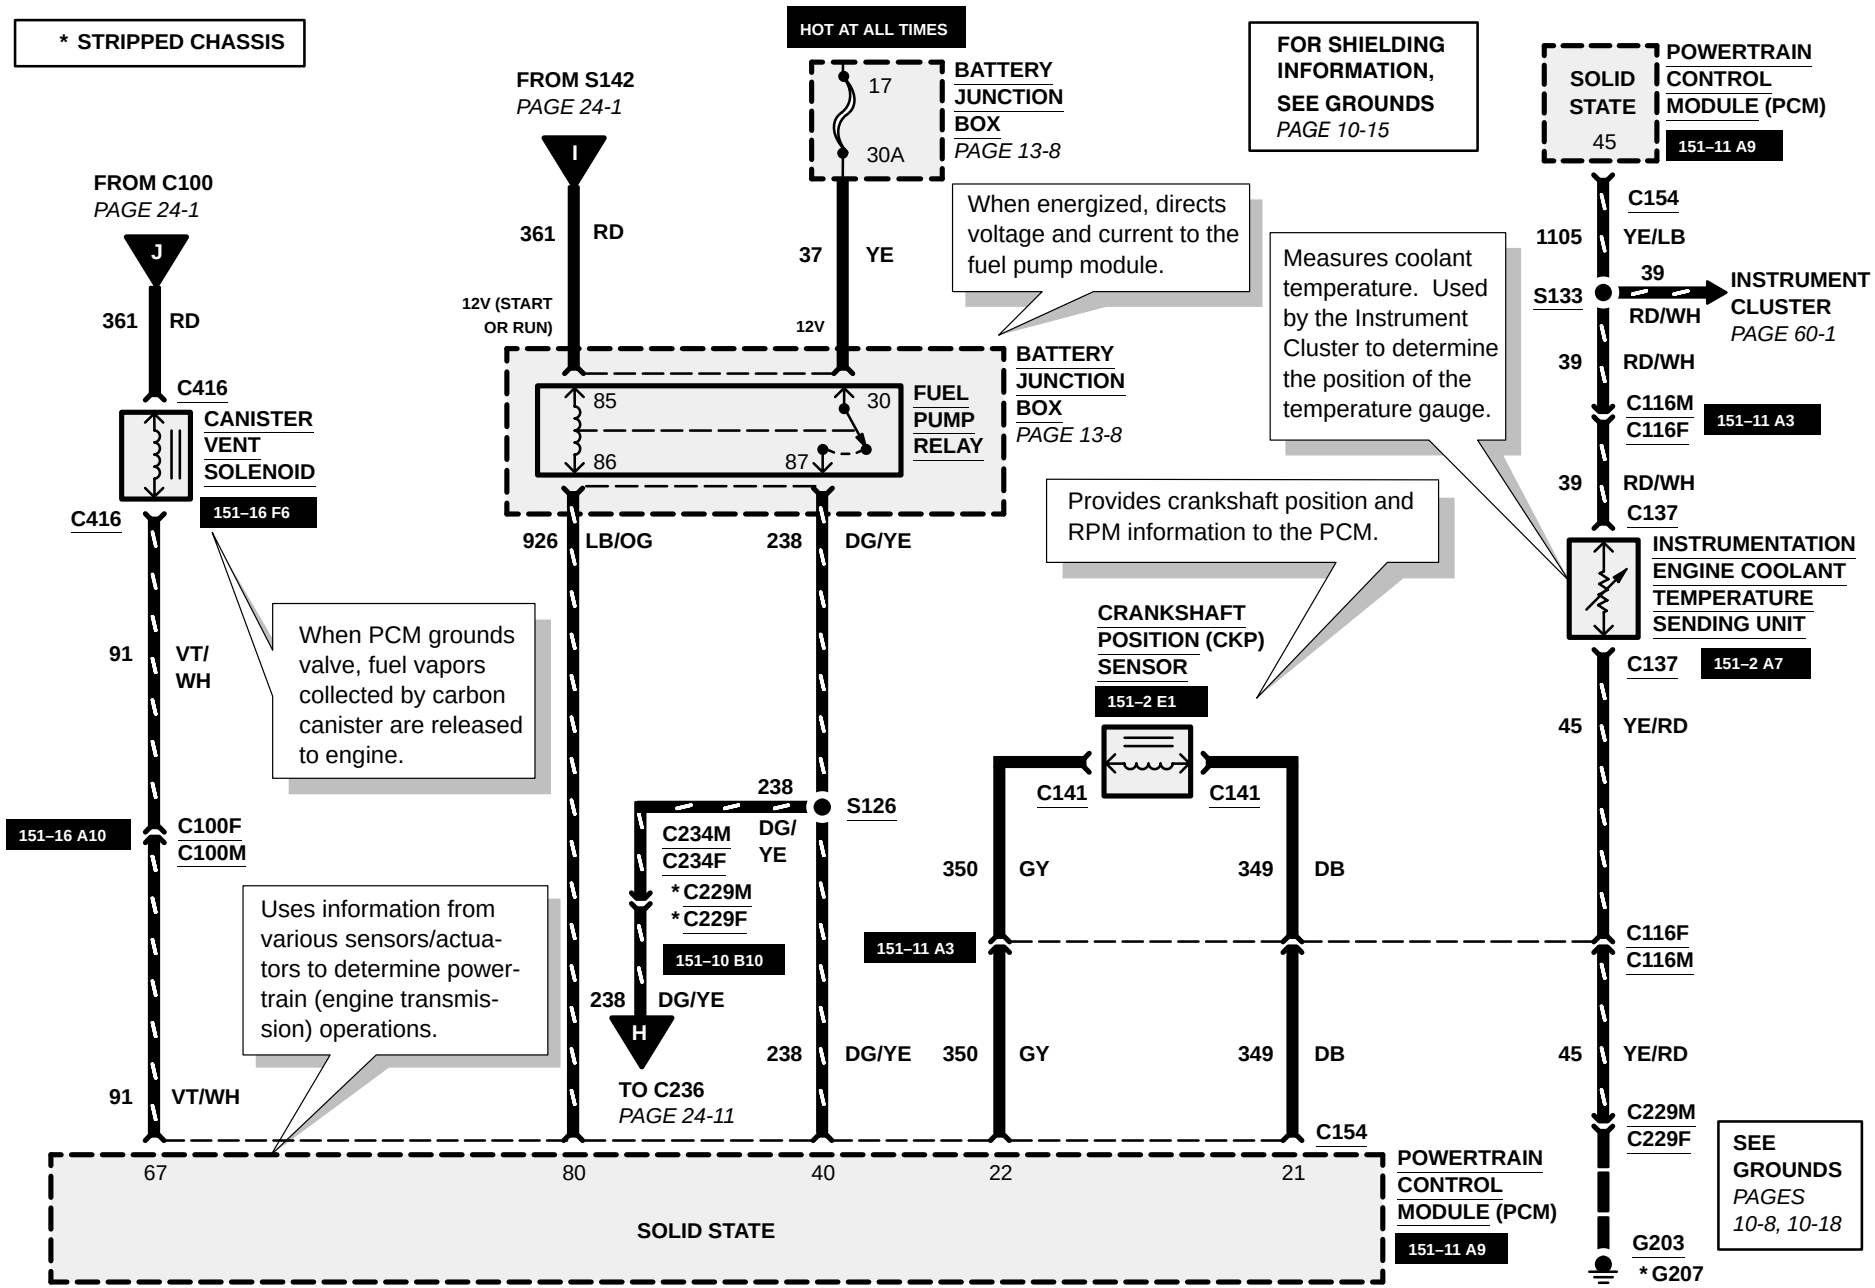
* STRIPPED CHASSIS
HOT AT ALL TIMES
FROM S142
PAGE 24-1
17
30A
BATTERY JUNCTION BOX
PAGE 13-8
FOR SHIELDING INFORMATION, SEE GROUNDS
PAGE 10-15
SOLID STATE
45
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
FROM C100
PAGE 24-1
J
361 RD
12V (START OR RUN)
12V
When energized, directs voltage and current to the fuel pump module.
Measures coolant temperature. Used by the Instrument Cluster to determine the position of the temperature gauge.
C154
1105 YE/LB
S133
39 RD/WH
INSTRUMENT CLUSTER
PAGE 60-1
C116M
C116F
151–11 A3
C416
CANISTER VENT SOLENOID
151–16 F6
85
30
86
87
FUEL PUMP RELAY
BATTERY JUNCTION BOX
PAGE 13-8
926 LB/OG
238 DG/YE
Provides crankshaft position and RPM information to the PCM.
INSTRUMENTATION ENGINE COOLANT TEMPERATURE SENSING UNIT
C137
151–2 A7
When PCM grounds valve, fuel vapors collected by carbon canister are released to engine.
CRANKSHAFT POSITION (CKP) SENSOR
151–2 E1
91 VT/WH
C141
C141
45 YE/RD
238
S126
151–16 A10
C100F
C100M
C234M
C234F
*C229M
*C229F
DG/YE
350 GY
349 DB
151–10 B10
151–11 A3
Uses information from various sensors/actuators to determine powertrain (engine transmission) operations.
238 DG/YE
H
TO C236
PAGE 24-11
91 VT/WH
238 DG/YE
350 GY
349 DB
45 YE/RD
C229M
C229F
C154
G203
*G207
67
80
40
22
21
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
SEE GROUNDS
PAGES
10-8, 10-18