C2179b

14401

A417
Trax module

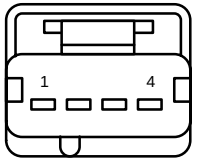

F04143

Pin	Circuit	Circuit function
1	29 (YE/WH)	Fuel pump/fuel gauge sender
2	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
3	676 (PK/OG)	Vehicle Speed Sensor (VSS) –
4	–	not used

C2180a

14401

A418
Warning chime module

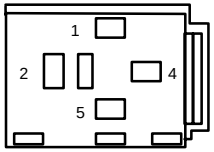

F05159

Pin	Circuit	Circuit function
1	–	not used
2	54 (LG/YE)	Voltage supplied at all times (overload protected)
3	–	not used
4	–	not used
5	3603 (RD)	to, Parking brake switch (15A851)

C2180b

14401

A418
Warning chime module

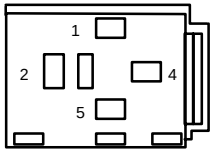

F05159

Pin	Circuit	Circuit function
1	–	not used
2	295 (LB/PK)	Voltage in Run (overload protected)
3	–	not used
4	535 (LB/RD)	to, Brake differential pressure switch
5	–	not used

C2181

14401

N619
Air suspension switch, rear

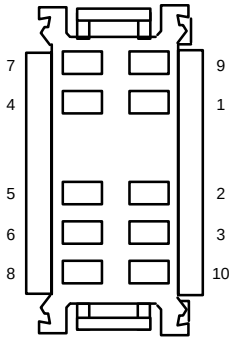

F10135

Pin	Circuit	Circuit function
1	–	not used
2	417 (P/OG)	Air suspension disable switch, feed
3	1195 (BN/OG)	Air suspension height sensor (3C131), rear, feed
4	–	not used
5	–	not used
6	–	not used
7	19 (LG/RD)	Illumination, Power
8	19 (LG/RD)	Illumination, Power
9	57 (BK)	Ground
10	57 (BK)	Ground